CDX-F7000/F7005X/FW700

SERVICE MANUAL

Ver 1.0 2003. 12

US Model

CDX-F7000/F7005X/FW700

Canadian Model

CDX-F7000/F7005X

• The tuner and CD sections have no adjustments.

Model Name Using Similar Mechanism	CDX-S2000/SW200
CD Drive Mechanism Type	MG-611XA-186//K
Optical Pick-up Name	KSS1000E

AUDIO POWER SPECIFICATIONS (US Model)

POWER OUTPUT AND TOTAL HARMONIC DISTORTION
23.2 watts per channel minimum continuous average power into 4 ohms, 4 channels driven from 20 Hz to 20 kHz with no more than 5% total harmonic distortion.

SPECIFICATIONS

CD player section

Signal-to-noise ratio	120 dB
Frequency response	10 – 20,000 Hz
Wow and flutter	Below measurable limit

Tuner section

FM

Tuning range	87.5 – 107.9 MHz
Antenna terminal	External antenna connector
Intermediate frequency	10.7 MHz/450 kHz
Usable sensitivity	9 dBf
Selectivity	75 dB at 400 kHz
Signal-to-noise ratio	67 dB (stereo), 69 dB (mono)
Harmonic distortion at 1 kHz	0.5% (stereo), 0.3% (mono)
Separation	35 dB at 1 kHz
Frequency response	30 – 15,000 Hz

AM

Tuning range	530 – 1,710 kHz
Antenna terminal	External antenna connector
Intermediate frequency	10.7 MHz/450 kHz
Sensitivity	30 µV

Power amplifier section

Outputs	Speaker outputs (sure seal connectors)
Speaker impedance	4 – 8 ohms
Maximum power output	52 W × 4 (at 4 ohms)

General

Outputs	Audio output terminals (front/rear) Subwoofer output terminal (mono) Power antenna relay control terminal Power amplifier control terminal
Inputs	Telephone ATT control terminal Illumination control terminal BUS control input terminal BUS audio input or AUX IN terminal Remote controller input terminal Antenna input terminal
Tone controls	Bass ±10 dB at 62 Hz Treble ±10 dB at 16 kHz
Loudness	+8 dB at 100 Hz +2 dB at 10 kHz
Power requirements	12 V DC car battery (negative ground)
Dimensions	Approx. 178 × 50 × 178 mm (7 1/8 × 2 × 7 1/8 in.) (w/h/d)
Mounting dimensions	Approx. 182 × 53 × 161 mm (7 1/4 × 2 1/8 × 6 3/8 in.) (w/h/d)
Mass	Approx. 1.3 kg (2 lb. 14 oz.)
Supplied accessories	Parts for installation and connections (1 set) Front panel case (1) Card remote commander RM-X118A

Design and specifications are subject to change without notice.

FM/AM COMPACT DISC PLAYER

9-961-473-01
2003L04-1
© 2003. 12
Sony Corporation
e Vehicle Company
Published by Sony Engineering Corporation

SONY®

SERVICE NOTES

NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic breakdown because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body.
During repair, pay attention to electrostatic breakdown and also use the procedure in the printed matter which is included in the repair parts.
The flexible board is easily damaged and should be handled with care.

NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30 cm away from the objective lens.

Notes on Chip Component Replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK ⚠ OR DOTTED LINE WITH MARK ⚠ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE ⚠ SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

If the optical pick-up block is defective, please replace the whole optical pick-up block.
Never turn the semi-fixed resistor located at the side of optical pick-up block.

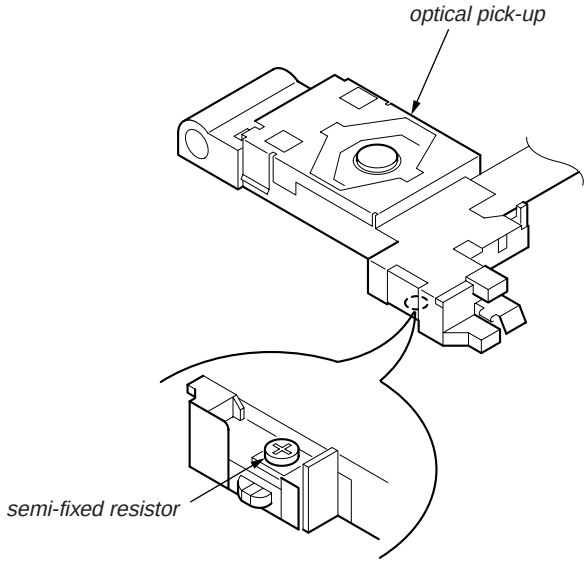

TEST DISCS

This set can playback CD-R and CD-ROM discs. The following test discs should be used to check the capability:

CD-R test disc TCD-R082LMT (Part No. J-2502-063-1)
CD-RW test disc TCD-W082L (Part No. J-2502-063-2)

Notes on CD-R/CD-RW discs

- You can play CD-Rs (recordable CDs)/CD-RWs (rewritable CDs) designed for audio use on this unit.
  Look for these marks to distinguish CD-Rs/CD-RWs for audio use.



These marks denote that a disc is not for audio use.

- Some CD-Rs/CD-RWs (depending on the equipment used for its recording or the condition of the disc) may not play on this unit.
- You cannot play a CD-R/a CD-RW that is not finalized*.

* A process necessary for a recorded CD-R/CD-RW disc to be played on the audio CD player.

● UNLEADED SOLDER

Boards requiring use of unleaded solder are printed with the lead free mark (LF) indicating the solder contains no lead.
(Caution: Some printed circuit boards may not come printed with the lead free mark due to their particular size.)

: LEAD FREE MARK

Unleaded solder has the following characteristics.

- Unleaded solder melts at a temperature about 40°C higher than ordinary solder.
  Ordinary soldering irons can be used but the iron tip has to be applied to the solder joint for a slightly longer time.
  Soldering irons using a temperature regulator should be set to about 350°C.
  Caution: The printed pattern (copper foil) may peel away if the heated tip is applied for too long, so be careful!
- Strong viscosity
  Unleaded solder is more viscous (sticky, less prone to flow) than ordinary solder so use caution not to let solder bridges occur such as on IC pins, etc.
- Usable with ordinary solder
  It is best to use only unleaded solder but unleaded solder may also be added to ordinary solder.

EXTENSION CABLE AND SERVICE POSITION

When repairing or servicing this set, connect the jig (extension cable) as shown below.

- Connect the MAIN board (CNP301) and the SERVO board (CN1) with the extension cable (Part No. J-2502-076-1).

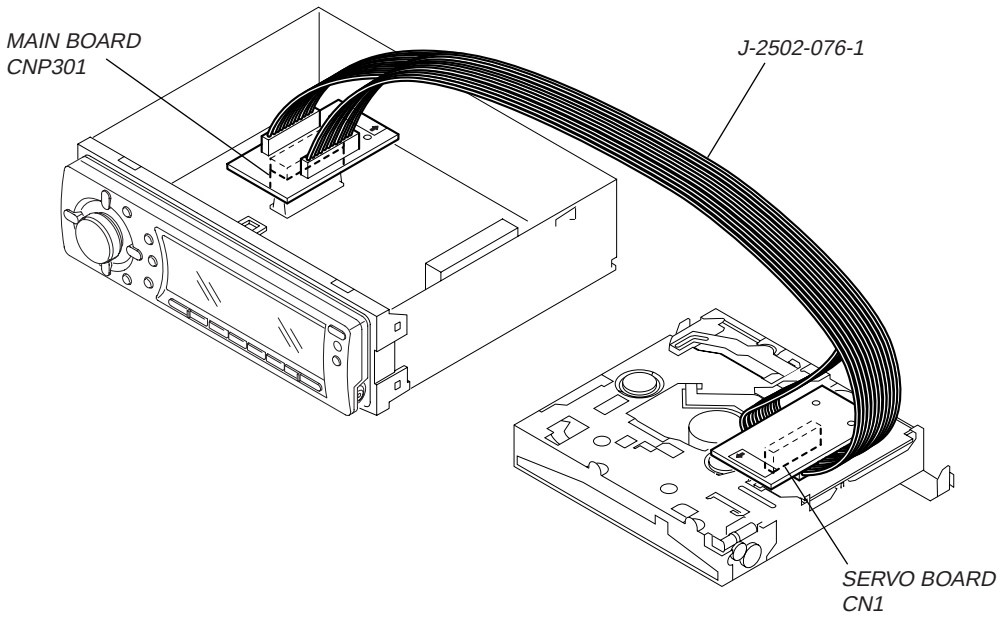

TABLE OF CONTENTS

1. GENERAL

Location of Controls 5
Connections (CDX-F7000/F7005X) 6
Connections (CDX-FW700) 7

2. DISASSEMBLY

2-1. Sub Panel Assy (CD) 9
2-2. CD Mechanism Block 9
2-3. Main Board 10
2-4. Chassis (T) Sub Assy 10
2-5. Roller Arm Assy 11
2-6. Chassis (OP) Assy 11
2-7. Optical Pick-up 12
2-8. SL Motor Assy (M902) 12
2-9. LE Motor Assy (M903) 13
2-10. Servo Board 13

3. DIAGRAMS

3-1. IC Pin Descriptions 14
3-2. Block Diagram –CD Section– 19
3-3. Block Diagram –Main Section– 20
3-4. Block Diagram –Display Section– 21
3-5. Note for Printed Wiring Boards and Schematic Diagrams 22
3-6. Waveforms 22
3-7. Circuit Boards Location 22
3-8. Printed Wiring Boards –CD Mechanism Section– 23
3-9. Schematic Diagram –CD Mechanism Section– 24
3-10. Schematic Diagram –Main Section (1/3)– 25
3-11. Schematic Diagram –Main Section (2/3)– 26
3-12. Schematic Diagram –Main Section (3/3)– 27
3-13. Printed Wiring Boards –Main Section– 28
3-14. Printed Wiring Board –Sub Section– 30
3-15. Schematic Diagram –Sub Section– 31
3-16. Printed Wiring Board –Key Section– 32
3-17. Schematic Diagram –Key Section– 33
3-18. IC Block Diagrams 34

4. EXPLODED VIEWS

4-1. Main Section 36
4-2. Front Panel Section 37
4-3. CD Mechanism Section (1) 38
4-4. CD Mechanism Section (2) 39
4-5. CD Mechanism Section (3) 40
4-6. CD Mechanism Section (4) 41

5. ELECTRICAL PARTS LIST 42

SECTION 1
GENERAL

This section is extracted from instruction manual.

Location of controls

Card remote commander RM-X118A

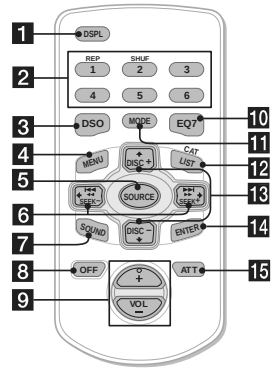

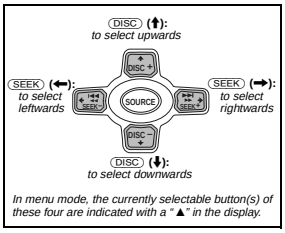

In menu mode, the currently selectable button(s) of these four are indicated with a "▲" in the display.

Refer to the pages listed for details.

1 DSPL (display mode change) button *12, 14, 21*
2 Number buttons
Radio:
To store stations/receive stored stations.
CD/MD:
①: **REP** *13*
②: **SHUF** *13*
3 DSO button *23*
4 MENU button
To display the menus.
5 SOURCE (Power on/Radio/CD/MD*1/AUX*2) button
To select the source.
6 SEEK/AMS (◀/▶) buttons
To skip tracks/fast-forward, reverse a track/tune in stations automatically, find a station manually/select a setting.
7 SOUND button *20*
8 OFF (Stop/Power off) button *11, 24*
9 VOL (+/–) buttons
To turn up or down the volume.
10 EQ7 button *22*
11 MODE button
To change operation.
12 LIST (CAT)*3 button *15, 18*
13 DISC (ALBUM) (▲/▼) buttons
To receive preset stations/change the disc*4, skip albums*5/select a menu.
14 ENTER button
To enter a setting.
15 ATT button *20*

1 When an optional MD unit is connected.
2 Available only when an optional Sony portable device is connected to AUX IN terminal of the unit. When you connect a Sony portable device and CD/MD unit(s) at the same time, use the AUX IN selector.
3 The CAT button is available only when the XM tuner is connected.
4 When an optional CD/MD unit is connected.
5 Available only when an optional CD unit with the MP3 file control function is connected, and MP3 file is played.

Note
If the display disappears by pressing (OFF), it cannot be operated with the card remote commander unless (SOURCE) on the unit is pressed, or a disc is inserted to activate the unit first.

Tip
For details on how to replace the battery, see "Replacing the lithium battery" on page 25.

Selecting a disc and album

Disc and album can be skipped using the DISC (ALBUM) (▲/▼) buttons.

(With optional unit)

To	Press
Skip discs – Disc selection	▲ or ▼ [once for each disc]
Skip albums*6 – Album selection	▲ or ▼ [hold for a moment] and release. To continuously skip albums, press (and hold) within about 1 second of first releasing the button.

6 Available only when an optional CD unit with the MP3 file control function is connected, and MP3 file is played.

Skipping tracks continuously

Press once either SEEK/AMS (◀ or ▶) button, then press again within about 1 second and hold.

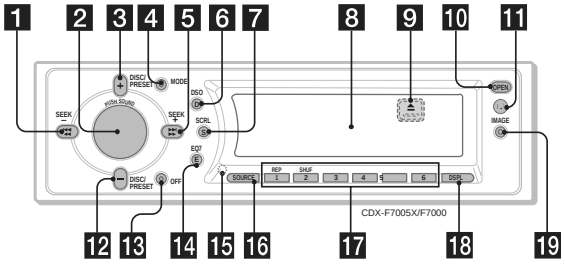

The buttons on the unit share the same functions as those on the card remote commander.

1 5 SEEK/AMS (I◀◀ ◀◀/▶▶ ▶▶I) buttons
2 Volume control dial/SOUND button
Rotate to:
– Adjust the volume.
– Adjust the sound settings.
Press to:
– Select the sound items.
3 12 DISC (ALBUM)/PRESET (+/–) buttons
4 MODE button
6 DSO button
7 SCRL (scroll) button
8 Display window
9 ⏏ (eject) button (located on the front side of the unit, behind the front panel) 10, 11
10 OPEN button 9, 10, 11
11 Receptor for the card remote commander
13 OFF (Stop/Power off) button*
14 EQ7 button
15 RESET button (located on the front side of the unit, behind the front panel) 8
16 SOURCE button
17 Number buttons
18 DSPL (display mode change) button
19 IMAGE button 23

*** Warning when installing in a car without an ACC (accessory) position on the ignition switch**
After turning off the ignition, be sure to press and hold (OFF) on the unit until the display disappears.
Otherwise, the display does not turn off and this causes battery drain.

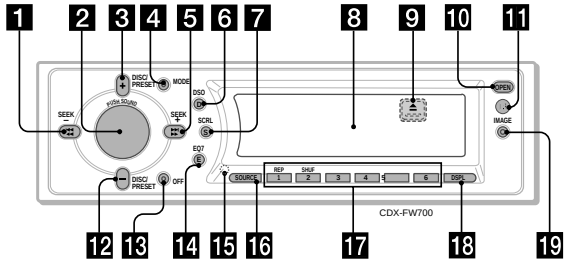

The buttons on the unit share the same functions as those on the card remote commander.

1 5 SEEK/AMS (I◀◀ ◀◀/▶▶ ▶▶I) buttons
2 Volume control dial/SOUND button
Rotate to:
– Adjust the volume.
– Adjust the sound settings.
Press to:
– Select the sound items.
3 12 DISC (ALBUM)/PRESET (+/–) buttons
4 MODE button
6 DSO button
7 SCRL (scroll) button
8 Display window
9 ⏏ (eject) button (located on the front side of the unit, behind the front panel) 10, 11
10 OPEN button 9, 10, 11
11 Receptor for the card remote commander
13 OFF (Stop/Power off) button*
14 EQ7 button
15 RESET button (located on the front side of the unit, behind the front panel) 8
16 SOURCE button
17 Number buttons
18 DSPL (display mode change) button
19 IMAGE button 23

*** Warning when installing in a car without an ACC (accessory) position on the ignition switch**
After turning off the ignition, be sure to press and hold (OFF) on the unit until the display disappears.
Otherwise, the display does not turn off and this causes battery drain.

Connections (CDX-F7000/F7005X)

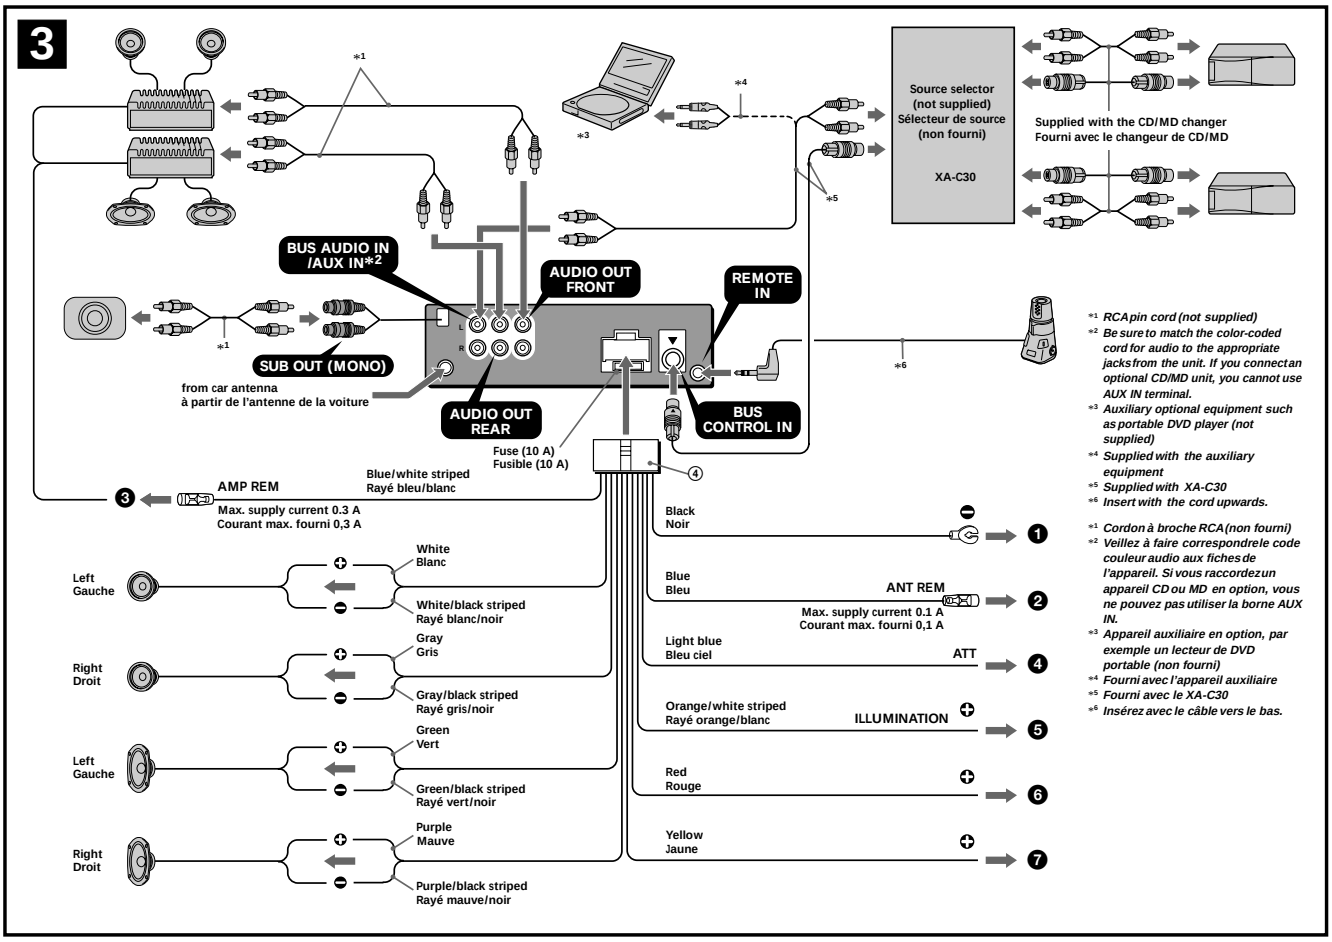

*1 *RCA pin cord (not supplied)*
*2 *Be sure to match the color-coded cord for audio to the appropriate jacks from the unit. If you connect an optional CD/MD unit, you cannot use AUX IN terminal.*
*3 *Auxiliary optional equipment such as portable DVD player (not supplied)*
*4 *Supplied with the auxiliary equipment*
*5 *Supplied with XA-C30*
*6 *Insert with the cord upwards.*

*1 *Cordon à broche RCA (non fourni)*
*2 *Veillez à faire correspondre le code couleur audio aux fiches de l'appareil. Si vous raccordez un appareil CD ou MD en option, vous ne pouvez pas utiliser la borne AUX IN.*
*3 *Appareil auxiliaire en option, par exemple un lecteur de DVD portable (non fourni)*
*4 *Fourni avec l'appareil auxiliaire*
*5 *Fourni avec le XA-C30*
*6 *Insérez avec le câble vers le bas.*

Connection diagram (3)

❶ **To a metal surface of the car**
First connect the black ground lead, then connect the yellow and red power input leads.

❷ **To the power antenna control lead or power supply lead of antenna booster amplifier**

Notes
- *It is not necessary to connect this lead if there is no power antenna or antenna booster, or with a manually-operated telescopic antenna.*
- *When your car has a built-in FM/AM antenna in the rear/side glass, see "Notes on the control and power supply leads."*

❸ **To AMP REMOTE IN of an optional power amplifier**
This connection is only for amplifiers. Connecting any other system may damage the unit.

❹ **To the interface cable of a car telephone**

❺ **To a car's illumination signal**
Be sure to connect the black ground lead to a metal surface of the car first.

❻ **To the +12 V power terminal which is energized in the accessory position of the ignition key switch**

Notes
- *If there is no accessory position, connect to the +12 V power (battery) terminal which is energized at all times. Be sure to connect the black ground lead to a metal surface of the car first.*
- *When your car has a built-in FM/AM antenna in the rear/side glass, see "Notes on the control and power supply leads."*

❼ **To the +12 V power terminal which is energized at all times**
Be sure to connect the black ground lead to a metal surface of the car first.

Notes on the control and power supply leads
- *The power antenna control lead (blue) supplies +12 V DC when you turn on the tuner.*
- *When your car has built-in FM/AM antenna in the rear/side glass, connect the power antenna control lead (blue) or the accessory power input lead (red) to the power terminal of the existing antenna booster. For details, consult your dealer.*
- *A power antenna without a relay box cannot be used with this unit.*

Memory hold connection
When the yellow power input lead is connected, power will always be supplied to the memory circuit even when the ignition switch is turned off.

Notes on speaker connection
- *Before connecting the speakers, turn the unit off.*
- *Use speakers with an impedance of 4 to 8 ohms, and with adequate power handling capacities to avoid its damage.*
- *Do not connect the speaker terminals to the car chassis, or connect the terminals of the right speakers with those of the left speaker.*
- *Do not connect the ground lead of this unit to the negative (–) terminal of the speaker.*
- *Do not attempt to connect the speakers in parallel.*
- *Connect only passive speakers. Connecting active speakers (with built-in amplifiers) to the speaker terminals may damage the unit.*
- *To avoid a malfunction, do not use the built-in speaker leads installed in your car if the unit shares a common negative (–) lead for the right and left speakers.*
- *Do not connect the unit's speaker leads to each other.*

Note on connection
If speaker and amplifier are not connected correctly, "FAILURE" appears in the display. In this case, make sure the speaker and amplifier are connected correctly.

Schéma de raccordement (3)

❶ **À un point métallique de la voiture**
Branchez d'abord le fil de masse noir et, ensuite, les fils d'entrée d'alimentation jaune et rouge.

❷ **Vers le fil de commande de l'antenne électrique ou le fil d'alimentation de l'amplificateur d'antenne**

Remarques
- *Il n'est pas nécessaire de raccorder ce fil s'il n'y a pas d'antenne électrique ni d'amplificateur d'antenne, ou avec une antenne télescopique manuelle.*
- *Si votre voiture est équipée d'une antenne FM/AM intégrée dans la vitre arrière/latérale, voir « Remarques sur les fils de commande et d'alimentation ».*

❸ **Au niveau du AMP REMOTE IN de l'amplificateur de puissance en option**
Ce raccordement s'applique uniquement aux amplificateurs. Le branchement de tout autre système risque d'endommager l'appareil.

❹ **Vers le cordon de liaison d'un téléphone de voiture**

❺ **Vers le connecteur du signal d'éclairage de la voiture**
Raccordez d'abord le fil de masse noir à un point métallique du véhicule.

❻ **À la borne +12 V qui est alimentée quand la clé de contact est sur la position accessoires**

Remarques
- *S'il n'y a pas de position accessoires, raccordez la borne d'alimentation (batterie) +12 V qui est alimentée en permanence. Raccordez d'abord le fil de masse noir à un point métallique du véhicule.*
- *Si votre voiture est équipée d'une antenne FM/AM intégrée dans la vitre arrière/latérale, voir « Remarques sur les fils de commande et d'alimentation ».*

❼ **À la borne +12 V qui est alimentée en permanence**
Raccordez d'abord le fil de masse noir à un point métallique du véhicule.

Remarques sur les fils de commande et d'alimentation
- *Le fil de commande de l'antenne électrique (bleu) fournit une alimentation de + 12 V CC lorsque vous mettez la radio sous tension.*
- *Lorsque votre voiture est équipée d'une antenne FM/AM intégrée dans la vitre arrière/latérale, raccordez le fil de commande de l'antenne (bleu) ou l'entrée d'alimentation des accessoires (rouge) à la borne d'alimentation de l'amplificateur d'antenne existant. Pour plus de détails, consultez votre détaillant.*
- *Une antenne électrique sans boîtier de relais ne peut pas être utilisée avec cet appareil.*

Raccordement pour la conservation de la mémoire
Lorsque le fil d'entrée d'alimentation jaune est raccordé, le circuit de la mémoire est alimenté en permanence même si la clé de contact est sur la position d'arrêt.

Remarques sur le raccordement des haut-parleurs
- *Avant de raccorder les haut-parleurs, mettez l'appareil hors tension.*
- *Utilisez des haut-parleurs ayant une impédance de 4 à 8 ohms avec une capacité électrique adéquate pour éviter de les endommager.*
- *Ne raccordez pas les bornes du système de haut-parleurs au châssis de la voiture et ne raccordez pas les bornes des haut-parleurs droit à celles du haut-parleur gauche.*
- *Ne raccordez pas le câble de masse de cet appareil à la borne négative (–) de l'enceinte.*
- *N'essayez pas de raccorder les haut-parleurs en parallèle.*
- *Raccordez uniquement des haut-parleurs passifs. Le raccordement de haut-parleurs actifs (avec amplificateurs intégrés) aux bornes des haut-parleurs peut endommager l'appareil.*
- *Pour éviter tout dysfonctionnement, n'utilisez pas les fils des haut-parleurs intégrés installés dans votre voiture si l'appareil partage un fil négatif commun (–) pour les haut-parleurs droit et gauche.*
- *Ne raccordez pas entre eux les cordons des haut-parleurs de l'appareil.*

Remarque sur le raccordement
Si les haut-parleurs et l'amplificateur ne sont pas raccordés correctement, le message « FAILURE » s'affiche. Dans ce cas, assurez-vous que les haut-parleurs et l'amplificateur sont bien raccordés.

Connections (CDX-FW700)

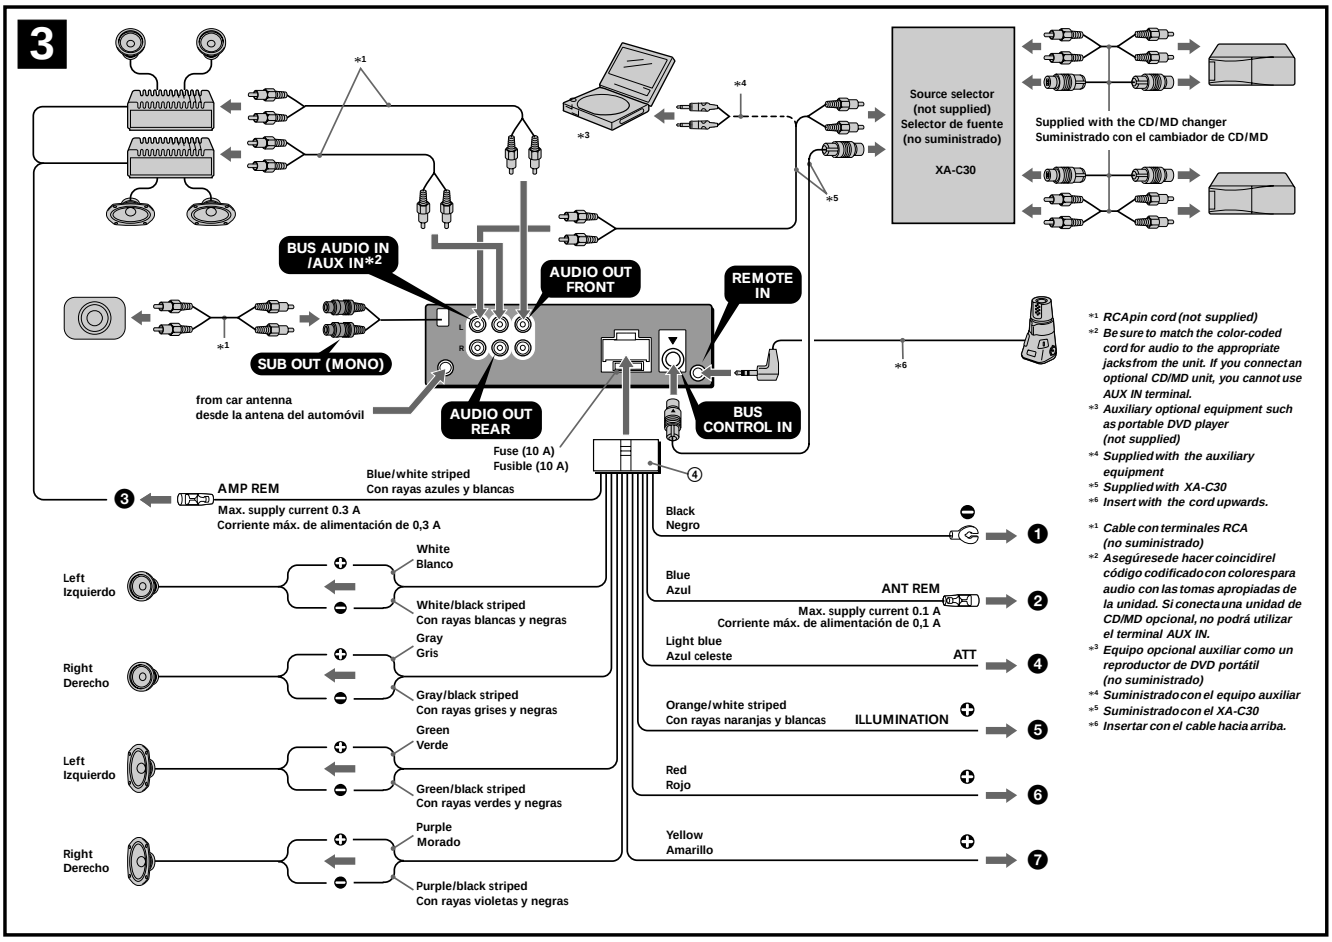

*1 *RCA pin cord (not supplied)*
*2 *Be sure to match the color-coded cord for audio to the appropriate jacks from the unit. If you connect an optional CD/MD unit, you cannot use AUX IN terminal.*
*3 *Auxiliary optional equipment such as portable DVD player (not supplied)*
*4 *Supplied with the auxiliary equipment*
*5 *Supplied with XA-C30*
*6 *Insert with the cord upwards.*

*1 *Cable con terminales RCA (no suministrado)*
*2 *Asegúrese de hacer coincidir el código codificado con colores para audio con las tomas apropiadas de la unidad. Si conecta una unidad de CD/MD opcional, no podrá utilizar el terminal AUX IN.*
*3 *Equipo opcional auxiliar como un reproductor de DVD portátil (no suministrado)*
*4 *Suministrado con el equipo auxiliar*
*5 *Suministrado con el XA-C30*
*6 *Insertar con el cable hacia arriba.*

Connection diagram (3)

❶ **To a metal surface of the car**
First connect the black ground lead, then connect the yellow and red power input leads.

❷ **To the power antenna control lead or power supply lead of antenna booster amplifier**

Notes
- *It is not necessary to connect this lead if there is no power antenna or antenna booster, or with a manually-operated telescopic antenna.*
- *When your car has a built-in FM/AM antenna in the rear/side glass, see "Notes on the control and power supply leads."*

❸ **To AMP REMOTE IN of an optional power amplifier**
This connection is only for amplifiers. Connecting any other system may damage the unit.

❹ **To the interface cable of a car telephone**

❺ **To a car's illumination signal**
Be sure to connect the black ground lead to a metal surface of the car first.

❻ **To the +12 V power terminal which is energized in the accessory position of the ignition key switch**

Notes
- *If there is no accessory position, connect to the +12 V power (battery) terminal which is energized at all times. Be sure to connect the black ground lead to a metal surface of the car first.*
- *When your car has a built-in FM/AM antenna in the rear/side glass, see "Notes on the control and power supply leads."*

❼ **To the +12 V power terminal which is energized at all times**
Be sure to connect the black ground lead to a metal surface of the car first.

Notes on the control and power supply leads
- *The power antenna control lead (blue) supplies +12 V DC when you turn on the tuner.*
- *When your car has built-in FM/AM antenna in the rear/side glass, connect the power antenna control lead (blue) or the accessory power input lead (red) to the power terminal of the existing antenna booster. For details, consult your dealer.*
- *A power antenna without a relay box cannot be used with this unit.*

Memory hold connection
When the yellow power input lead is connected, power will always be supplied to the memory circuit even when the ignition switch is turned off.

Notes on speaker connection
- *Before connecting the speakers, turn the unit off.*
- *Use speakers with an impedance of 4 to 8 ohms, and with adequate power handling capacities to avoid its damage.*
- *Do not connect the speaker terminals to the car chassis, or connect the terminals of the right speakers with those of the left speaker.*
- *Do not connect the ground lead of this unit to the negative (–) terminal of the speaker.*
- *Do not attempt to connect the speakers in parallel.*
- *Connect only passive speakers. Connecting active speakers (with built-in amplifiers) to the speaker terminals may damage the unit.*
- *To avoid a malfunction, do not use the built-in speaker leads installed in your car if the unit shares a common negative (–) lead for the right and left speakers.*
- *Do not connect the unit's speaker leads to each other.*

Note on connection
If speaker and amplifier are not connected correctly, "Failure" appears in the display. In this case, make sure the speaker and amplifier are connected correctly.

Diagrama de conexión (3)

❶ **A una superficie metálica del automóvil**
Conecte primero el cable de toma a tierra negro, y después los cables con raya naranja/blanca, amarillo, y rojo de entrada de alimentación.

❷ **Al cable de control de la antena motorizada o al cable de fuente de alimentación del amplificador de antena**

Notas
- *Si no se dispone de antena motorizada ni de amplificador de antena, o se utiliza una antena telescópica accionada manualmente, no será necesario conectar este cable.*
- *Si el automóvil incorpora una antena de FM/AM en el cristal trasero o lateral, consulte "Notas sobre los cables de control y de fuente de alimentación".*

❸ **Para conectar a AMP REMOTE IN del amplificador de potencia opcional**
Esta conexión es sólo para amplificadores. La conexión de cualquier otro sistema puede dañar la unidad.

❹ **Al cable de interfaz de un teléfono para automóvil**

❺ **A una señal de iluminación del automóvil**
Asegúrese de conectar primero el cable de toma a tierra negro a una superficie metálica del automóvil.

❻ **Al terminal de alimentación de +12 V que recibe energía en la posición de accesorio del interruptor de la llave de encendido**

Notas
- *Si no hay posición de accesorio, conéctelo al terminal de alimentación (batería) de +12 V que recibe energía sin interrupción. Asegúrese de conectar primero el cable de toma a tierra negro a una superficie metálica del automóvil.*
- *Si el automóvil incorpora una antena de FM/AM en el cristal trasero/lateral, consulte "Notas sobre los cables de control y de fuente de alimentación".*

❼ **Al terminal de alimentación de +12 V que recibe energía sin interrupción**
Asegúrese de conectar primero el cable de toma a tierra negro a una superficie metálica del automóvil.

Notas sobre los cables de control y de fuente de alimentación
- *El cable de control de la antena motorizada (azul) suministrará cc de + 12V cuando conecte la alimentación del sintonizador.*
- *Si el automóvil dispone de una antena de FM/AM incorporada en el cristal trasero o lateral, conecte el cable de control de antena motorizada (azul) o el cable de entrada de alimentación auxiliar (rojo) al terminal de alimentación del amplificador de antena existente. Para obtener más información, consulte a su proveedor.*
- *Con esta unidad no es posible utilizar una antena motorizada sin caja de relé.*

Conexión para protección de la memoria
Si conecta el conductor de entrada amarillo, el circuito de la memoria recibirá siempre alimentación, aunque apague la llave de encendido.

Notas sobre la conexión de los altavoces
- *Antes de conectar los altavoces, desconecte la alimentación de la unidad.*
- *Utilice altavoces con una impedancia de 4 a 8 Ω con la capacidad de potencia adecuada para evitar que se dañen.*
- *No conecte los terminales de altavoz al chasis del automóvil, ni conecte los terminales del altavoz derecho con los del izquierdo.*
- *No conecte el cable de toma a tierra de esta unidad al terminal negativo (–) del altavoz.*
- *No intente conectar los altavoces en paralelo.*
- *Conecte solamente altavoces pasivos. Si conecta altavoces activos (con amplificadores incorporados) a los terminales de altavoz, puede dañar la unidad.*
- *Para evitar fallos de funcionamiento, no utilice los cables de altavoz incorporados instalados en el automóvil si su unidad comparte un cable negativo común (–) para los altavoces derecho e izquierdo.*
- *No conecte los cables de altavoz de la unidad entre sí.*

Nota sobre la conexión
Si el altavoz y el amplificador no están conectados correctamente, aparecerá "Failure" en la pantalla. Si es así, compruebe la conexión de ambos dispositivos.

SECTION 2
DISASSEMBLY

Note : This set can be disassemble according to the following sequence.

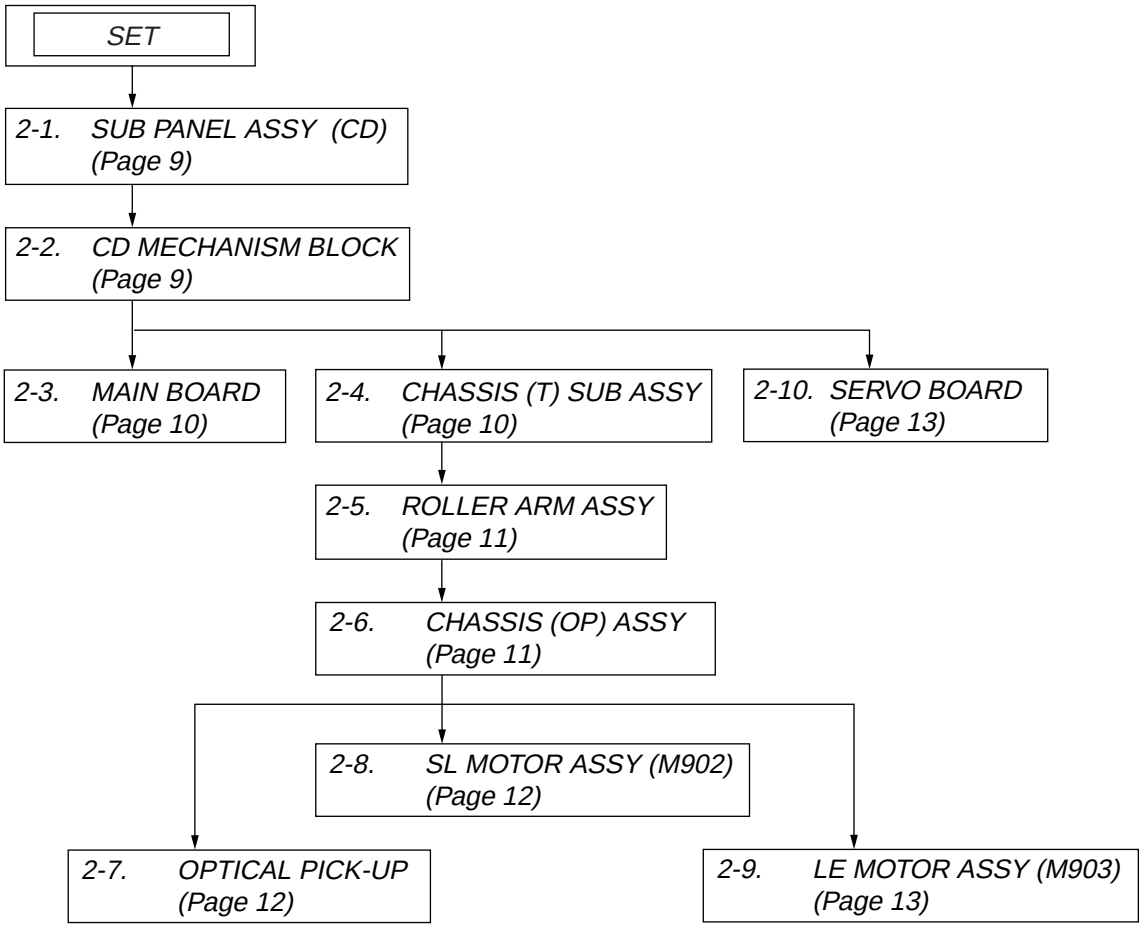
SET
2-1. SUB PANEL ASSY (CD) (Page 9)
2-2. CD MECHANISM BLOCK (Page 9)
2-3. MAIN BOARD (Page 10)
2-4. CHASSIS (T) SUB ASSY (Page 10)
2-10. SERVO BOARD (Page 13)
2-5. ROLLER ARM ASSY (Page 11)
2-6. CHASSIS (OP) ASSY (Page 11)
2-8. SL MOTOR ASSY (M902) (Page 12)
2-7. OPTICAL PICK-UP (Page 12)
2-9. LE MOTOR ASSY (M903) (Page 13)

Note : Follow the disassembly procedure in the numerical order given.

2-1. SUB PANEL ASSY (CD)

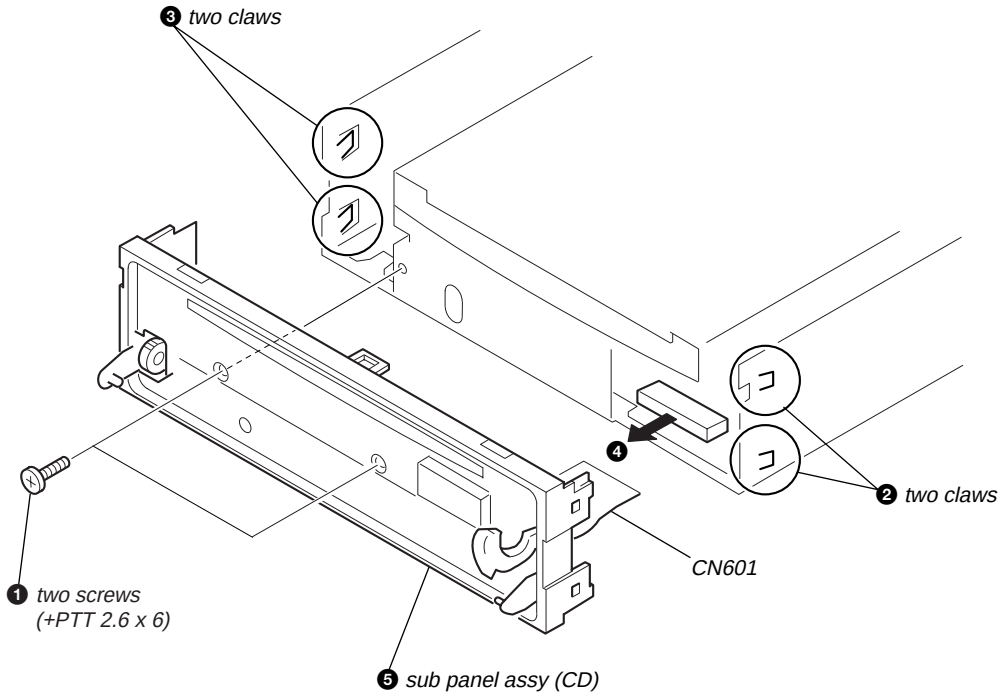

2-2. CD MECHANISM BLOCK

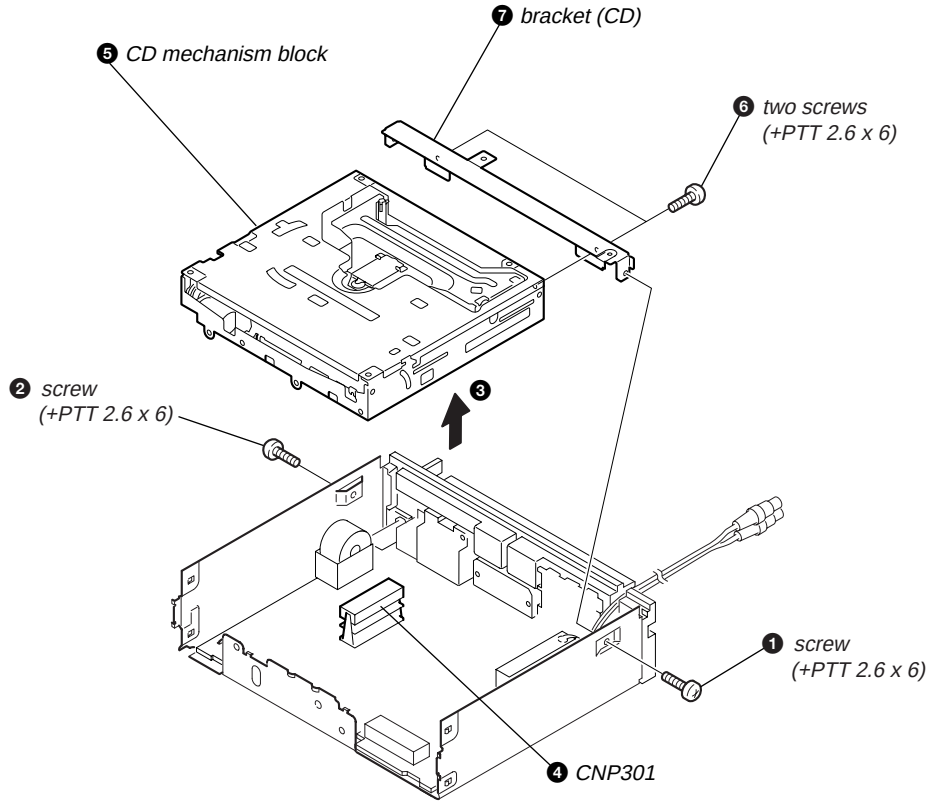

2-3. MAIN BOARD

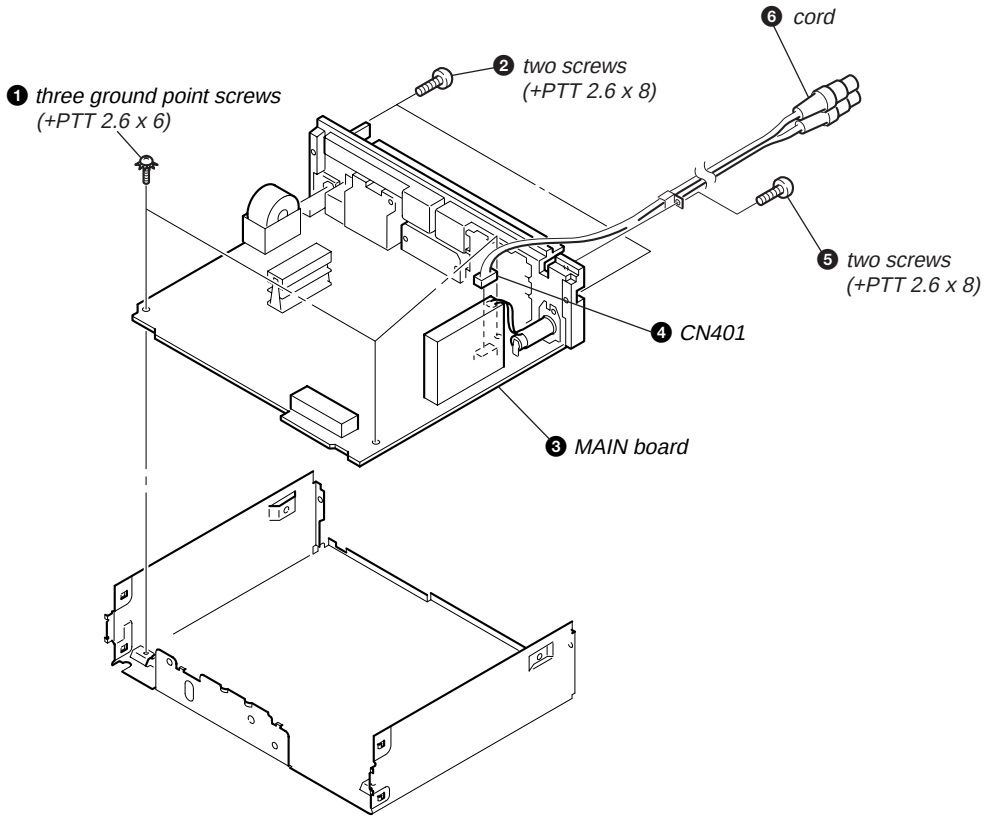

2-4. CHASSIS (T) SUB ASSY

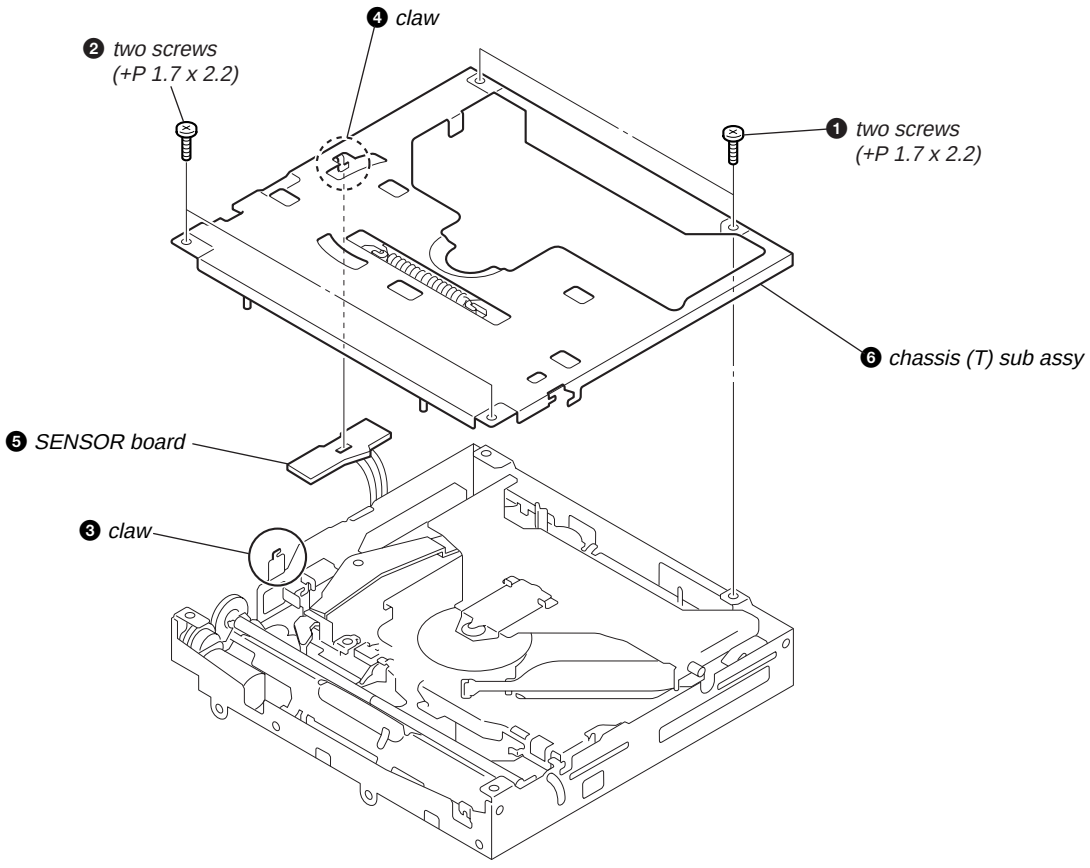

2-5. ROLLER ARM ASSY

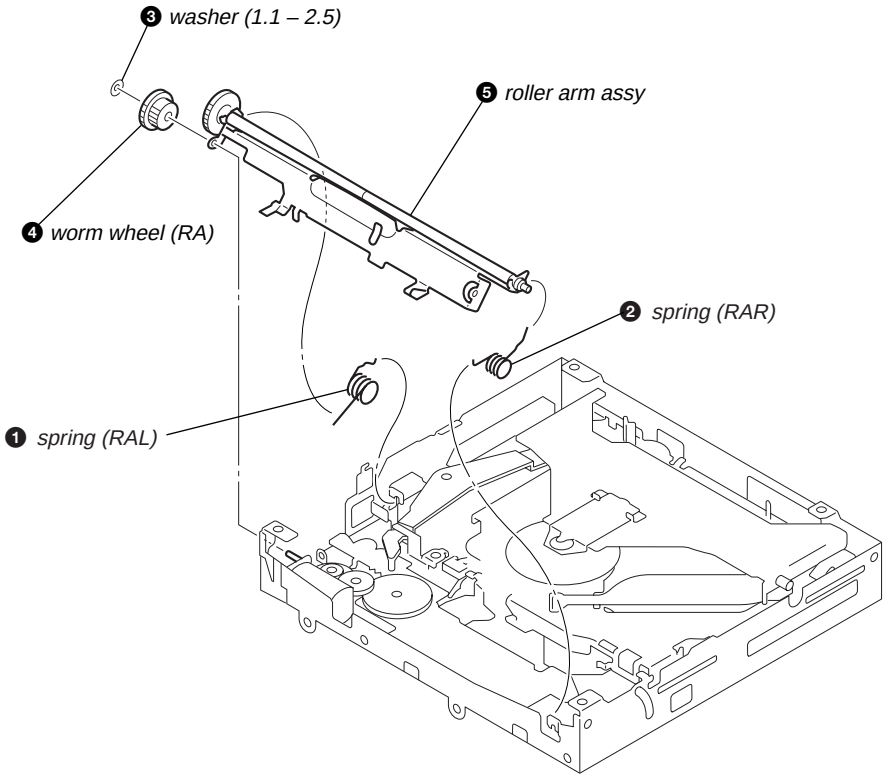

2-6. CHASSIS (OP) ASSY

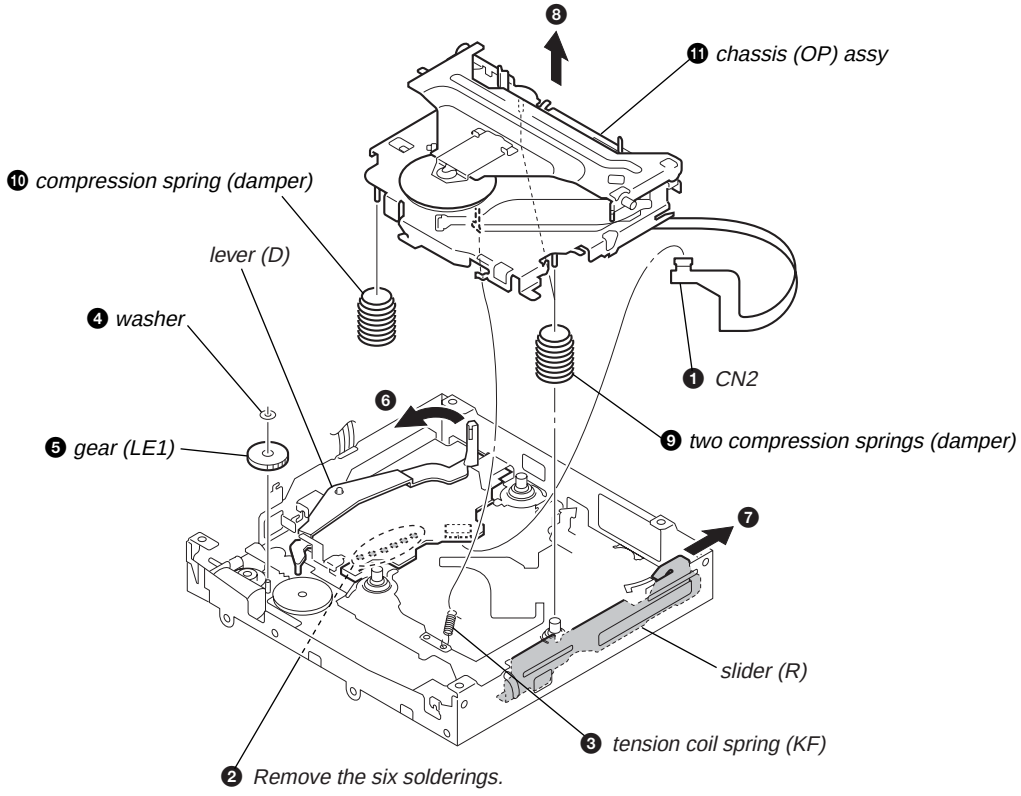

2-7. OPTICAL PICK-UP

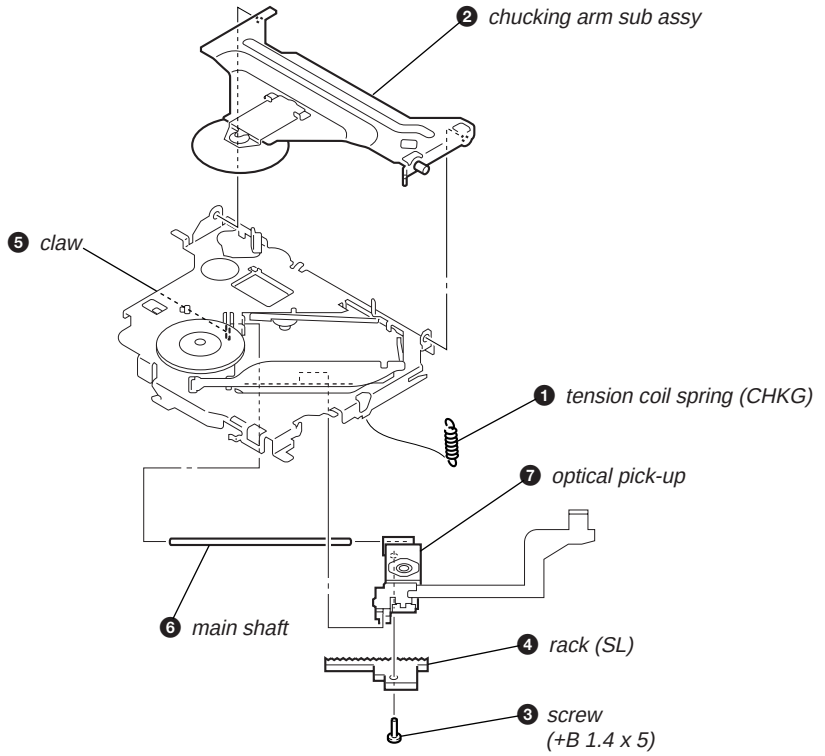

2-8. SL MOTOR ASSY (M902)

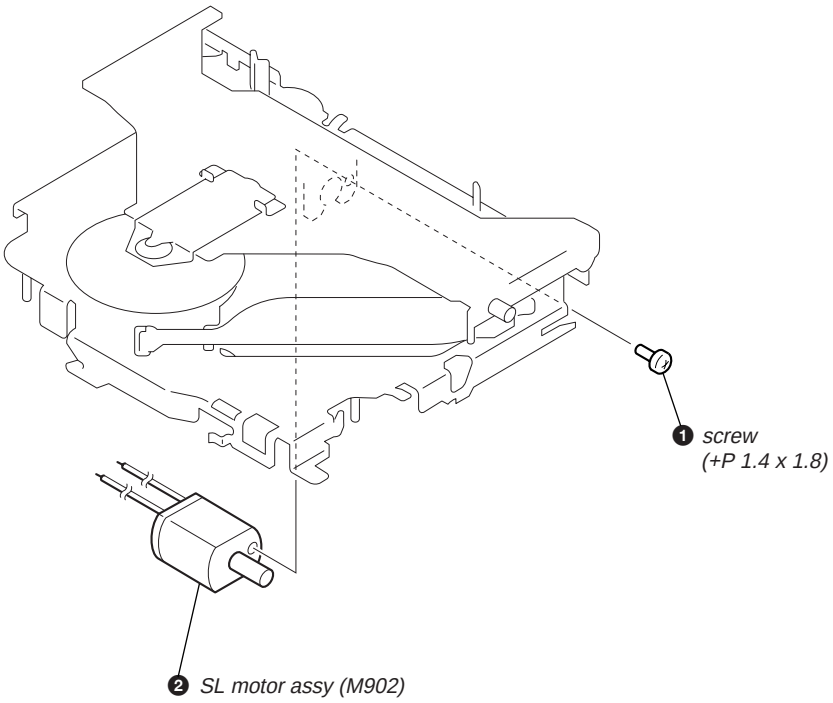

2-9. LE MOTOR ASSY (M903)

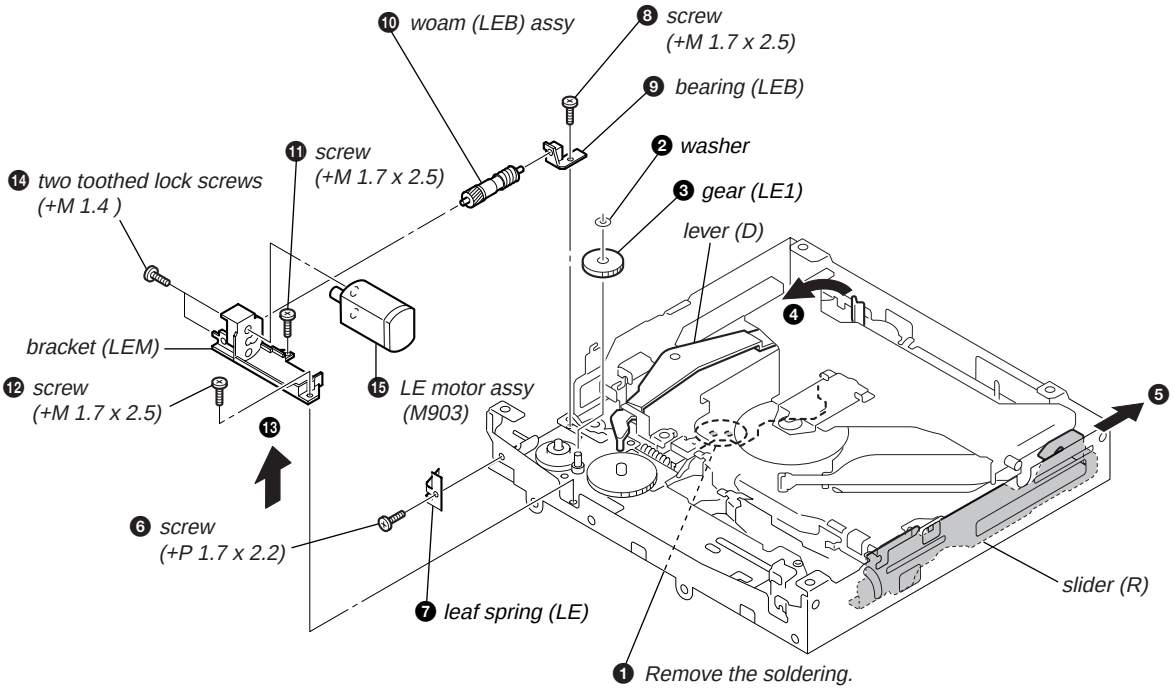

2-10. SERVO BOARD

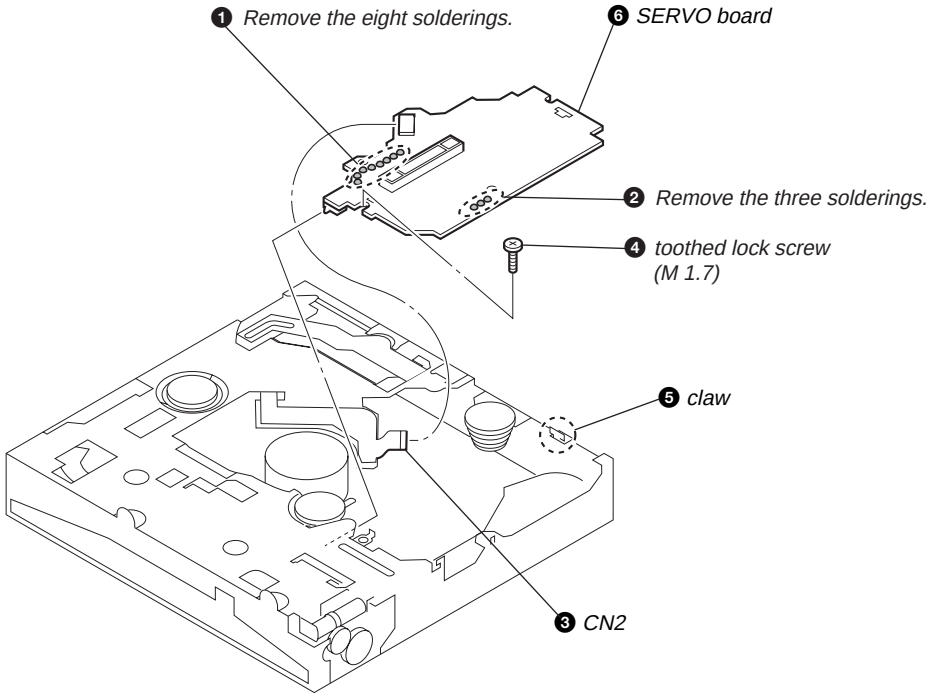

SECTION 3
DIAGRAMS

3-1. IC PIN DESCRIPTIONS

• IC1 µPD63712GC-8EU-A (RF AMP, DIGITAL SERVO, DIGITAL SIGNAL PROCESSOR) (SERVO BOARD)

Pin No.	Pin Name	I/O	Pin Description
1	LD	O	Laser diode ON/OFF control signal output (L: laser OFF, H: laser ON)
2	PD	I	Dimmer monitor input from optical pick-up laser diode.
3	PN	I	Not used. (Fixed at L in this set)
4	AVDD	—	Analog power supply pin (+3.3 V)
5	DGND	—	Ground
6	RFOK	O	RFOK signal output to system control IC.
7	INTQ	O	CD text pack synchronization signal output to system control IC.
8	RST	I	CD reset signal input from system control IC.
9	A0	I	Command/parameter discrimination signal input from system control IC. (L: command transmission, H: parameter transmission)
10	STB	I	Data strobe signal input from system control IC.
11	SCK	I	Serial clock input from system control IC.
12	SO	O	Serial data output to system control IC.
13	SI	I	Serial data input from system control IC.
14	DVDD	—	Power supply pin (+3.3 V)
15	DAVDD	—	D/A converter power supply (+) pin (+3.3 V)
16	ROUT	O	Analog audio signal output (R-ch)
17	DAGND	—	Ground
18	REGC	—	Capacitor connection pin for SCF regulator.
19	DAGND	—	Ground
20	LOUT	O	Analog audio signal output (L-ch)
21	DAVDD	—	D/A converter power supply (+) pin (+3.3 V)
22	XVDD	—	Power supply pin (+3.3 V)
23	XTAL	O	Main system clock output (16.9344 MHz)
24	XTAL	I	Main system clock input (16.9344 MHz)
25	XGND	—	Ground
26	DVDD	—	Power supply pin (+3.3 V)
27	C1D1/FZD	O	Not used. (Open)
28	C1D2/TZD	O	Not used. (Open)
29	C2D1/RMUTE	O	CD R-ch data zero detection signal output
30	C2D2/LMUTE	O	CD L-ch data zero detection signal output
31	C2D3/SHOCK/SBSY	O	Not used. (Open)
32	LOCK/FR	O	Not used. (Open)
33	WFCK/MIRR	O	Not used. (Open)
34	RFCK/HOLD	O	Not used. (Open)
35	PLCK	O	Not used. (Open)
36	C16M	O	Not used. (Open)
37	DGND	—	Ground
38	TX	O	Not used. (Open)
39	EMPH/RAMOVER	O	Not used. (Open)
40	FLAG	O	Not used. (Open)
41	DVDD	—	Power supply pin (+3.3 V)
42	LIMIT	I	Not used. (Fixed at L in this set)
43	XTALEN	I	Oscillation circuit ON/OFF control signal input (L: ON, H: OFF) (Fixed at L in this set)
44	DGND	—	Ground
45	DIN	I	Not used. (Connect to DOUT in this set)
46	DOUT	O	Not used. (Connect to DIN in this set)
47	SCKIN	I	Not used. (Connect to SCKO in this set)
48	SCKO	O	Not used. (Connect to SCKIN in this set)
49	LRCKIN	I	Not used. (Connect to LRCK in this set)

Pin No.	Pin Name	I/O	Pin Description
50	LRCK	O	Not used. (Connect to LRCKIN in this set)
51	DVDD	—	Power supply pin (+3.3 V)
52	FD+	O	Focus servo drive PWM signal output (+)
53	FD–	O	Focus servo drive PWM signal output (–)
54	TD+	O	Tracking servo drive PWM signal output (+)
55	TD–	O	Tracking servo drive PWM signal output (–)
56	SD+	O	Sled servo drive PWM signal output (+)
57	SD–	O	Sled servo drive PWM signal output (–)
58	MD+	O	Spindle servo drive PWM signal output (+)
59	MD–	O	Spindle servo drive PWM signal output (–)
60	DGND	—	Ground
61	TESTEN	I	Test setting input (Fixed at L in this set)
62 to 66	TEST4 to TEST0	I	Test setting input (Fixed at L in this set)
67	ADGND	—	A/D converter power supply (–) pin
68	EFM	O	EFM signal output
69	ASY	I	EFM comparator reference voltage input
70	ADVDD	—	A/D converter power supply pin (+3.3 V)
71	RFI	I	RF signal input for EFM data growing.
72	EQ2	—	Not used. (Open)
73	EQ1	—	RF amplifier equalizer parts connection pin
74	RF–	I	Not used. (Open)
75	RF2–	I	RF amplifier inversion input
76	AGCO	O	RF signal output after on AGC.
77	AGCI	I	RF AGC signal amplifier input
78	RFO	O	RF signal output before on AGC.
79	ATEST	I	Not used. (Open)
80	C3T	—	Capacitor connection pin for 3T detection.
81	AGND	—	Ground
82	A	I	Signal input (A) from optical pick-up detector.
83	C	I	Signal input (C) from optical pick-up detector.
84	B	I	Signal input (B) from optical pick-up detector.
85	D	I	Signal input (D) from optical pick-up detector.
86	F	I	Signal input (F) from optical pick-up detector.
87	E	I	Signal input (E) from optical pick-up detector.
88	VREFIN	I	Reference voltage (+1.65 V) input
89	AVDD	—	Analog power supply pin (+3.3 V)
90	REFOUT	O	Reference voltage (+1.65 V) output
91	REFC	—	Capacitor connection pin for reference voltage output.
92	FE–	I	Focus error signal amplifier inversion input
93	FEO	O	Focus error signal amplifier output
94	ADCIN	I	Not used. (Open)
95	TE-	I	Tracking error signal amplifier inversion input
96	TEO	O	Tracking error signal amplifier before output
97	TE2	O	Tracking error signal amplifier after output
98	TEC	I	Tracking error signal comparator input
99	AGND	—	Ground
100	PWMSW	I	Not used. (Fixed at L in this set)

• IC303 M30624MGP (SYSTEM CONTROL) (MAIN BOARD (3/3))

Pin No.	Pin Name	I/O	Pin Description
1	SIRCS	I	Remocon data input
2	(NCO)	O	Not used
3	CD SO/TSO	O	CD servo serial data output
4	CD SI/TSI	I	CD servo serial data input
5	CD CKO/TCKO	O	CD servo serial clock output
6	BYTE	I	Connecting to ground.
7	CNVSS	I	Flash write-in signal input
8	XCIN	I	Sub clock signal input (32.768kHz)
9	XCOUT	O	Sub clock signal output (32.768kHz)
10	RESET	I	CPU reset input
11	XOUT	O	Main clock signal output (6MHz)
12	VSS	—	Ground
13	XIN	I	Main clock signal input (6MHz)
14	VCC1	—	Ground
15	NMI	I	Non maskable interrupt signal input
16	CD INTQ	I	CD-TEXT sync. signal input
17	DAVN	I	RDS data block sync. detection signal input
18	BU IN	I	Back-up power detection signal input
19	NS MASK	O	NS-MASK signal output
20	BEEP	O	Beep signal output
21	FSW IN	I	DD converter OSC frequency count input
22	FSW OUT	O	DD converter OSC frequency change output
23	SA CLK	O	Spectrum analyzer clock output
24	TEL ATT	I	Telephone mute signal input
25	ATT	O	Mute signal output
26	VOL ATT	O	Electronic volume mute signal output
27	I2C CKO	O	I2C bus serial clock output
28	I2C SIO	O	I2C bus serial data output
29	UNI SO	O	SONY bus serial data output
30	UNI SI	I	SONY bus serial data input
31	UNI CKO	O	SONY bus serial clock output
32	TUNER ATT	O	Tuner mute signal output
33	EE SIO	I/O	Tuner pack EEPROM serial data input/output
34	EE CKO	O	Tuner pack EEPROM serial clock output
35	RE IN0	I	Rotary encoder signal input 0
36	RE IN1	I	Rotary encoder signal input 1
37	NOSE SW	I	Front panel detection signal input
38	DOOR SW	I	Panel open detection signal input
39	HOLD	I	External bus data input (HOLD)
40	AMP DIAG	I	AMP self-diagnosis function control signal input
41	AMP STB	O	AMP standby signal output
42	(NCO)	O	Not used
43	(NCO)	O	Not used
44	WRI/WR	I	External bus data input (WRI/WR)
45	CD LIMIT	I	CD LIMIT switch detection signal input
46	CD D SW	I	CD D switch detection signal input
47	CD IN SW	I	CD IN switch detection signal input
48	4V SEL	I	4V PRE-OUT select signal input
49	MP3 SEL	I	Deck mechanism select signal input
50	DST SEL1	I	Destination select setting pin 1
51	DST SEL2	I	Destination select setting pin 2
52	CD LM LOAD	O	CD loading signal output

Pin No.	Pin Name	I/O	Pin Description
53	CD LM EJECT	O	CD eject signal output
54	CD RESET	O	CD reset signal output
55	CD AO	O	CD AO signal output
56	CD STB	O	CD strobe signal output
57	(NCO)	O	Not used
58	CD RF OK	I	CD RF OK signal input
59	CD ON	I	CD ON signal input
60	VCC2	—	Power supply pin (+5V)
61	DISP RESET	O	Display CPU reset signal output
62	VSS	—	Ground
63	TEST IN	I	Test mode signal input
64	BUS ON	O	BUS ON signal output
65	SYS RST	O	System reset signal output
66	BUS/AUX	O	BUS AUDIO/AUX-IN select signal output
67	(NCO)	O	Not used
68	ACC IN	I	ACC power supply check signal input
69	ILL IN	I	ILL check signal input
70	RC IN1	I	Rotary commander signal input
71	CDM ON	I	CD power supply ON signal input
72	CD SELF SW	I	CD SELF switch detection signal input
73	TU ATT IN	I	Tuner attenuator zero cross signal input
74	ZERO DET1	I	ZERO detection signal input 1
75	ZERO DET2	I	ZERO detection signal input 2
76	Z ATT	I	Z mute signal input
77	(NCO)	O	Not used
78	(NCO)	O	Not used
79	ROMC EN	O	Connecting to ground.
80	QUALITY	I	Tuner noise detection signal input
81	MPTH	O	Not used
82	VSM	I	S-meter signal input
83	SA IN	I	Spectrum analyzer data input
84	KEY IN1	I	Key signal input
85	KEY IN0	I	Key signal input
86	RC IN0	I	Rotary commander signal input
87	KEY ACK2	I	Rotary commander ACK signal input
88	KEY ACK0	I	Key ACK signal input
89	KEY ACK1	I	Key ACK signal input
90	DOORING	O	Sub panel LED power supply control signal output
91	RAM BU	I	RAM back-up input
92	FLD ON	O	FL driver power supply control signal output
93	FL ON	O	FL power supply control signal output
94	AVSS	—	Ground
95	DISP CE	O	Display CPU chip enable output
96	VREF	—	AD converter reference voltage (+5V)
97	AVCC	—	Power supply pin (+5V)
98	DISP SI/RX	I	Display CPU serial data input
99	DISP SO/TX	O	Display CPU serial data output
100	DISP CKO	O	Display CPU serial clock output

• IC901 M30823MH-080GP (DISPLAY CONTROL) (KEY BOARD)

Pin No.	Pin Name	I/O	Pin Description
1	SYS CE	I	Main chip enable input
2	(NCO)	O	Not used
3	FL DAT3	O	FL serial data output 3
4	(NCO)	O	Not used
5	FL CLK IN	I	FL serial clock input
6	BYTE	I	Connecting to ground.
7	CNVSS	I	Flash write-in signal input
8	PLL LPF	O	PLL low pass filter connection pin
9	PLL GND	I	Ground
10	RESET	I	CPU reset input
11	XOUT	O	Main clock signal output (8MHz)
12	VSS	—	Ground
13	XIN	I	Main clock signal input (8MHz)
14	VCC	—	Power supply pin (+5V)
15	NMI	I	Non maskable interrupt signal input
16	(NCO)	O	Not used
17	GCP IN	I	GCP pulse interrupt signal input
18, 19	(NCO)	O	Not used
20	GCP OUT	O	GCP pulse signal output
21	LAT	O	FL data LAT output
22	BK	O	FL BK signal output
23	GCP2	O	FL GCP signal output 2
24	(NCO)	O	Not used
25	GCP1	O	FL GCP signal output 1
26	(NCO)	O	Not used
27	GCP4	O	FL GCP signal output 4
28	GCP3	O	FL GCP signal output 3
29	SYS SO	O	Main bus serial data output
30	SYS SI	I	Main bus serial data input
31	SYS CLK	O	Main bus serial clock output
32	(NCO)	O	Not used
33	FL DAT1	O	FL serial data output 1
34	(NCO)	O	Not used
35	FL CLK	O	FL serial clock output
36 to 38	(NCO)	O	Not used
39	HOLD	I	External bus data input (HOLD)
40 to 43	(NCO)	O	Not used
44	WRI/WR	I	External bus data input (WRI/WR)
45 to 59	(NCO)	O	Not used
60	VCC	—	Power supply pin (+5V)
61	(NCO)	O	Not used
62	VSS	—	Ground
63 to 93	(NCO)	O	Not used
94	AVSS	—	Ground
95	(NCO)	O	Not used
96	VREF	—	Reference voltage (+5V)
97	AVCC	—	Power supply pin (+5V)
98	(NCO)	—	Not used
99	FL DAT2	O	FL serial data output 2
100	FL CLK IN	I	FL serial clock input

3-2. BLOCK DIAGRAM — CD SECTION —

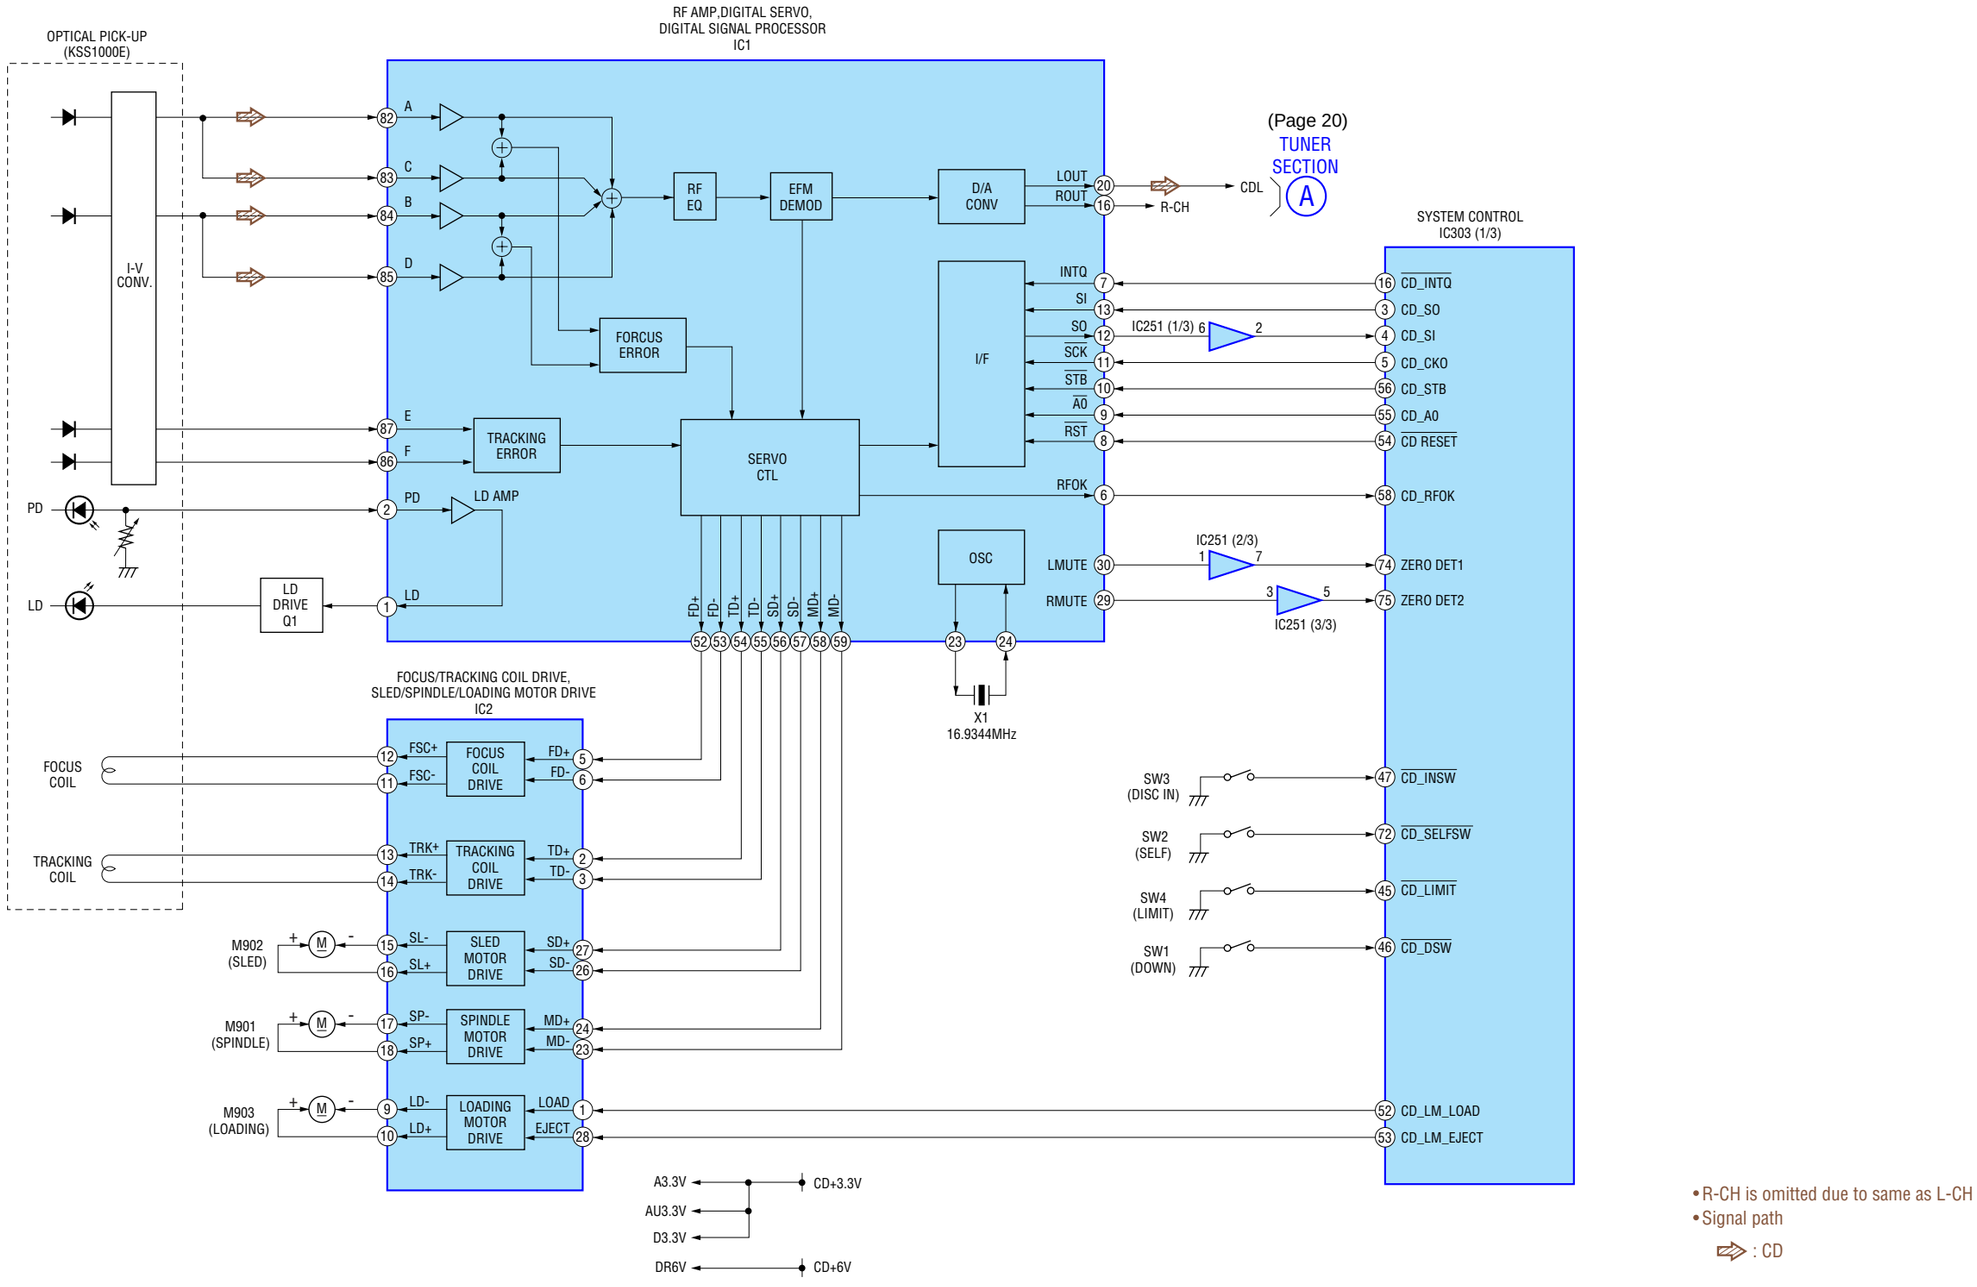

- R-CH is omitted due to same as L-CH
- Signal path

  ⇨ : CD

3-3. BLOCK DIAGRAM — MAIN SECTION —

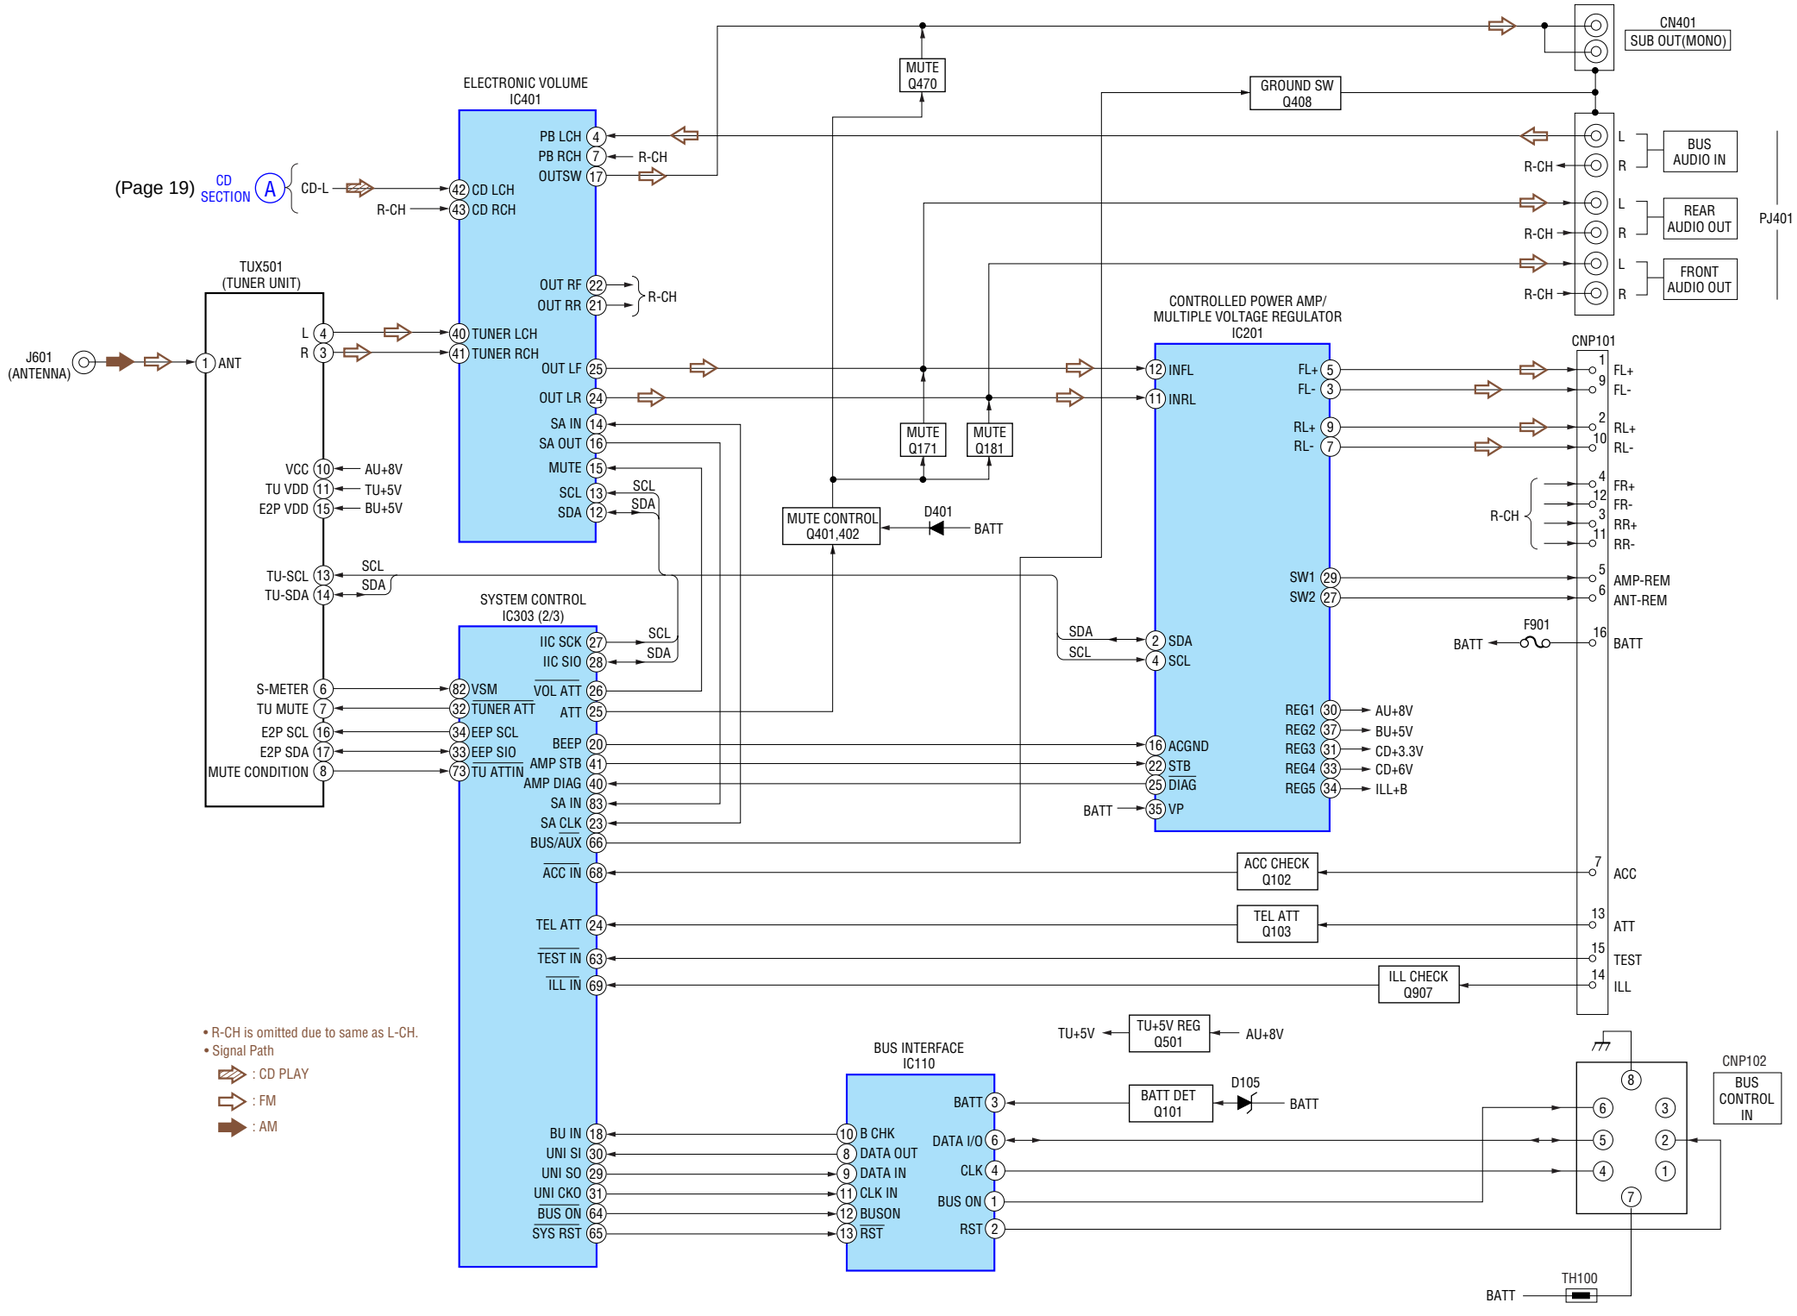

3-4. BLOCK DIAGRAM — DISPLAY SECTION —

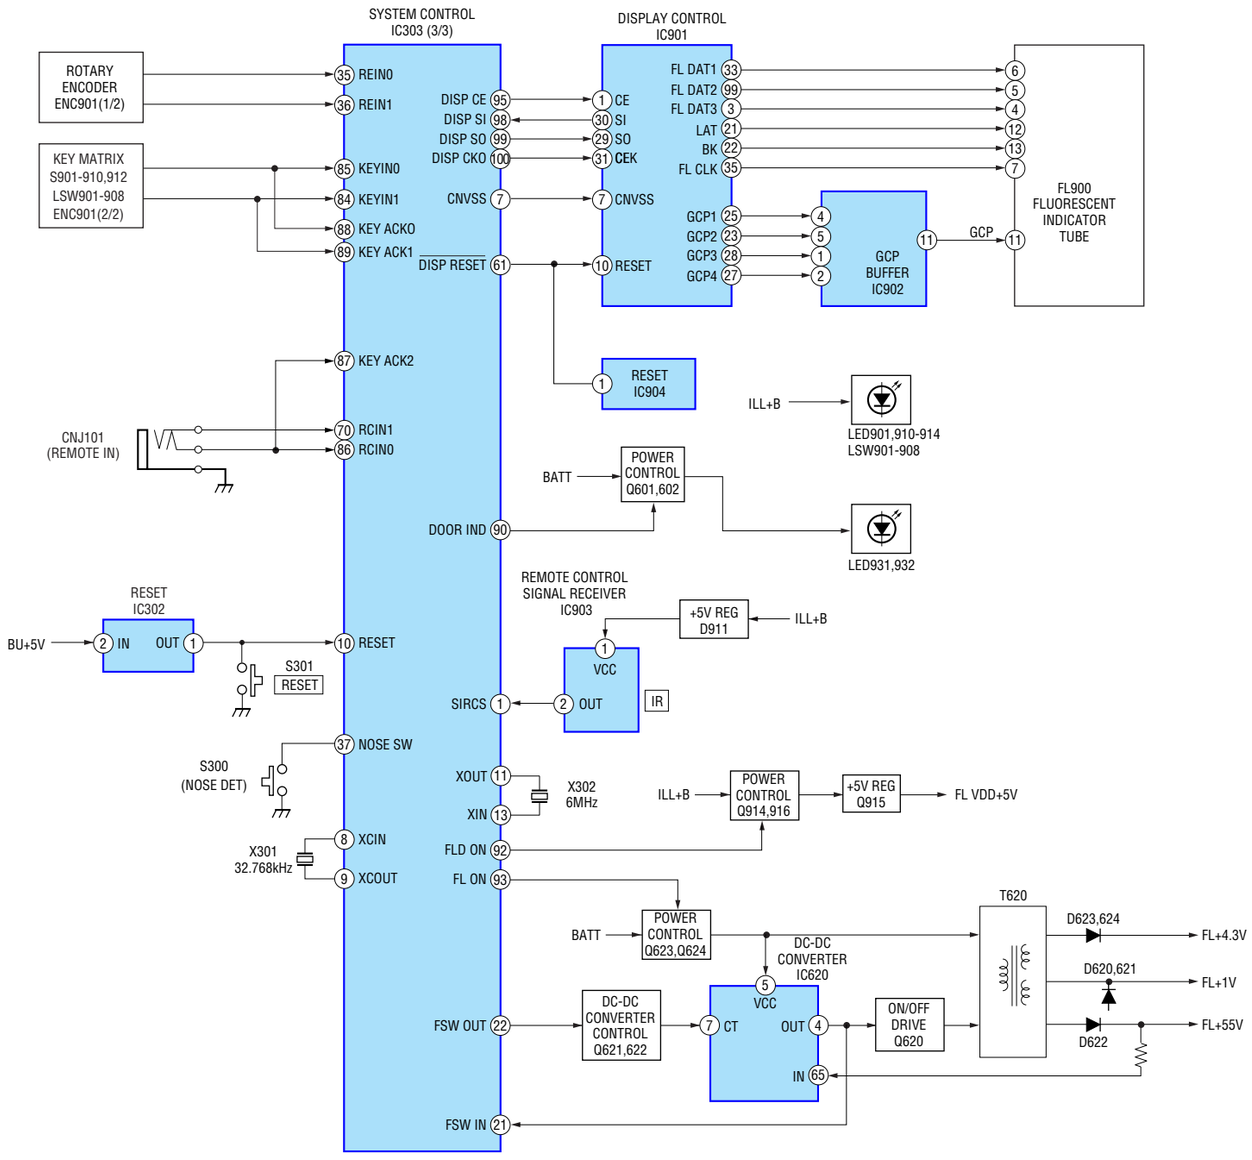

3-5. NOTE FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.
(In addition to this, the necessary note is printed in each block.)

For schematic diagrams.

Note:

- All capacitors are in µF unless otherwise noted. pF: µµF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/4 W or less unless otherwise specified.
- △ : internal component.
- ▭ : panel designation.

Note:	**Note:**
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une piéce portant le numéro spécifié.

- ▬ : B+ Line.
- ▬ ▬ : B– Line.
- ▭ : adjustment for repair.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions.
- CD mechanism section
  no mark : CD PLAY
- Main (1/3), (2/3), (3/3) and Key sections
  no mark : FM
  ( ) : AM
  < > : CD PLAY
  * : Impossible to measure
- Voltages are taken with a VOM (Input impedance 10 MΩ). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
  ⇨ : CD PLAY
  ⇨ : FM
  ➡ : AM
- Abbreviation
  CND : Canadian model.

For printed wiring boards.

Note:

- o—— : parts extracted from the component side.
- —— : parts extracted from the conductor side.
- ○ : Through hole.
- ▬ : Pattern from the side which enables seeing.

(The other layers' patterns are not indicated.)

Caution:	
Pattern face side: (Side B)	Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: (Side A)	Parts on the parts face side seen from the parts face are indicated.



These are omitted

These are omitted

These are omitted

- Abbreviation
  CND : Canadian model.

3-6. WAVEFORMS

— Servo Board —

(MODE: CD PLAY)

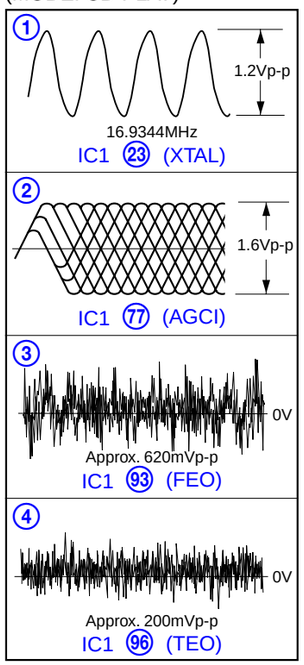

— Main Board —

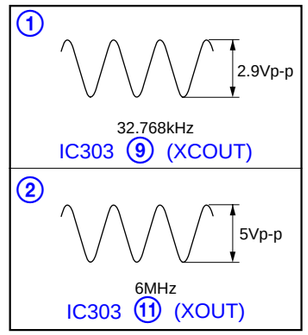

3-7. CIRCUIT BOARDS LOCATION

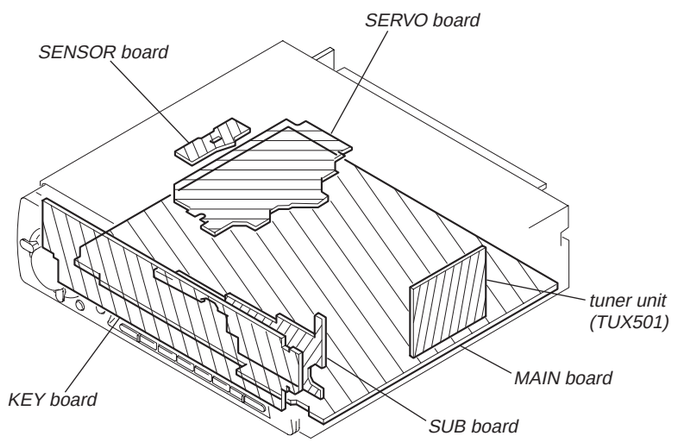

3-8. PRINTED WIRING BOARDS — CD MECHANISM SECTION — • Refer to page 22 for Circuit Boards Location. : Uses unleaded solder.

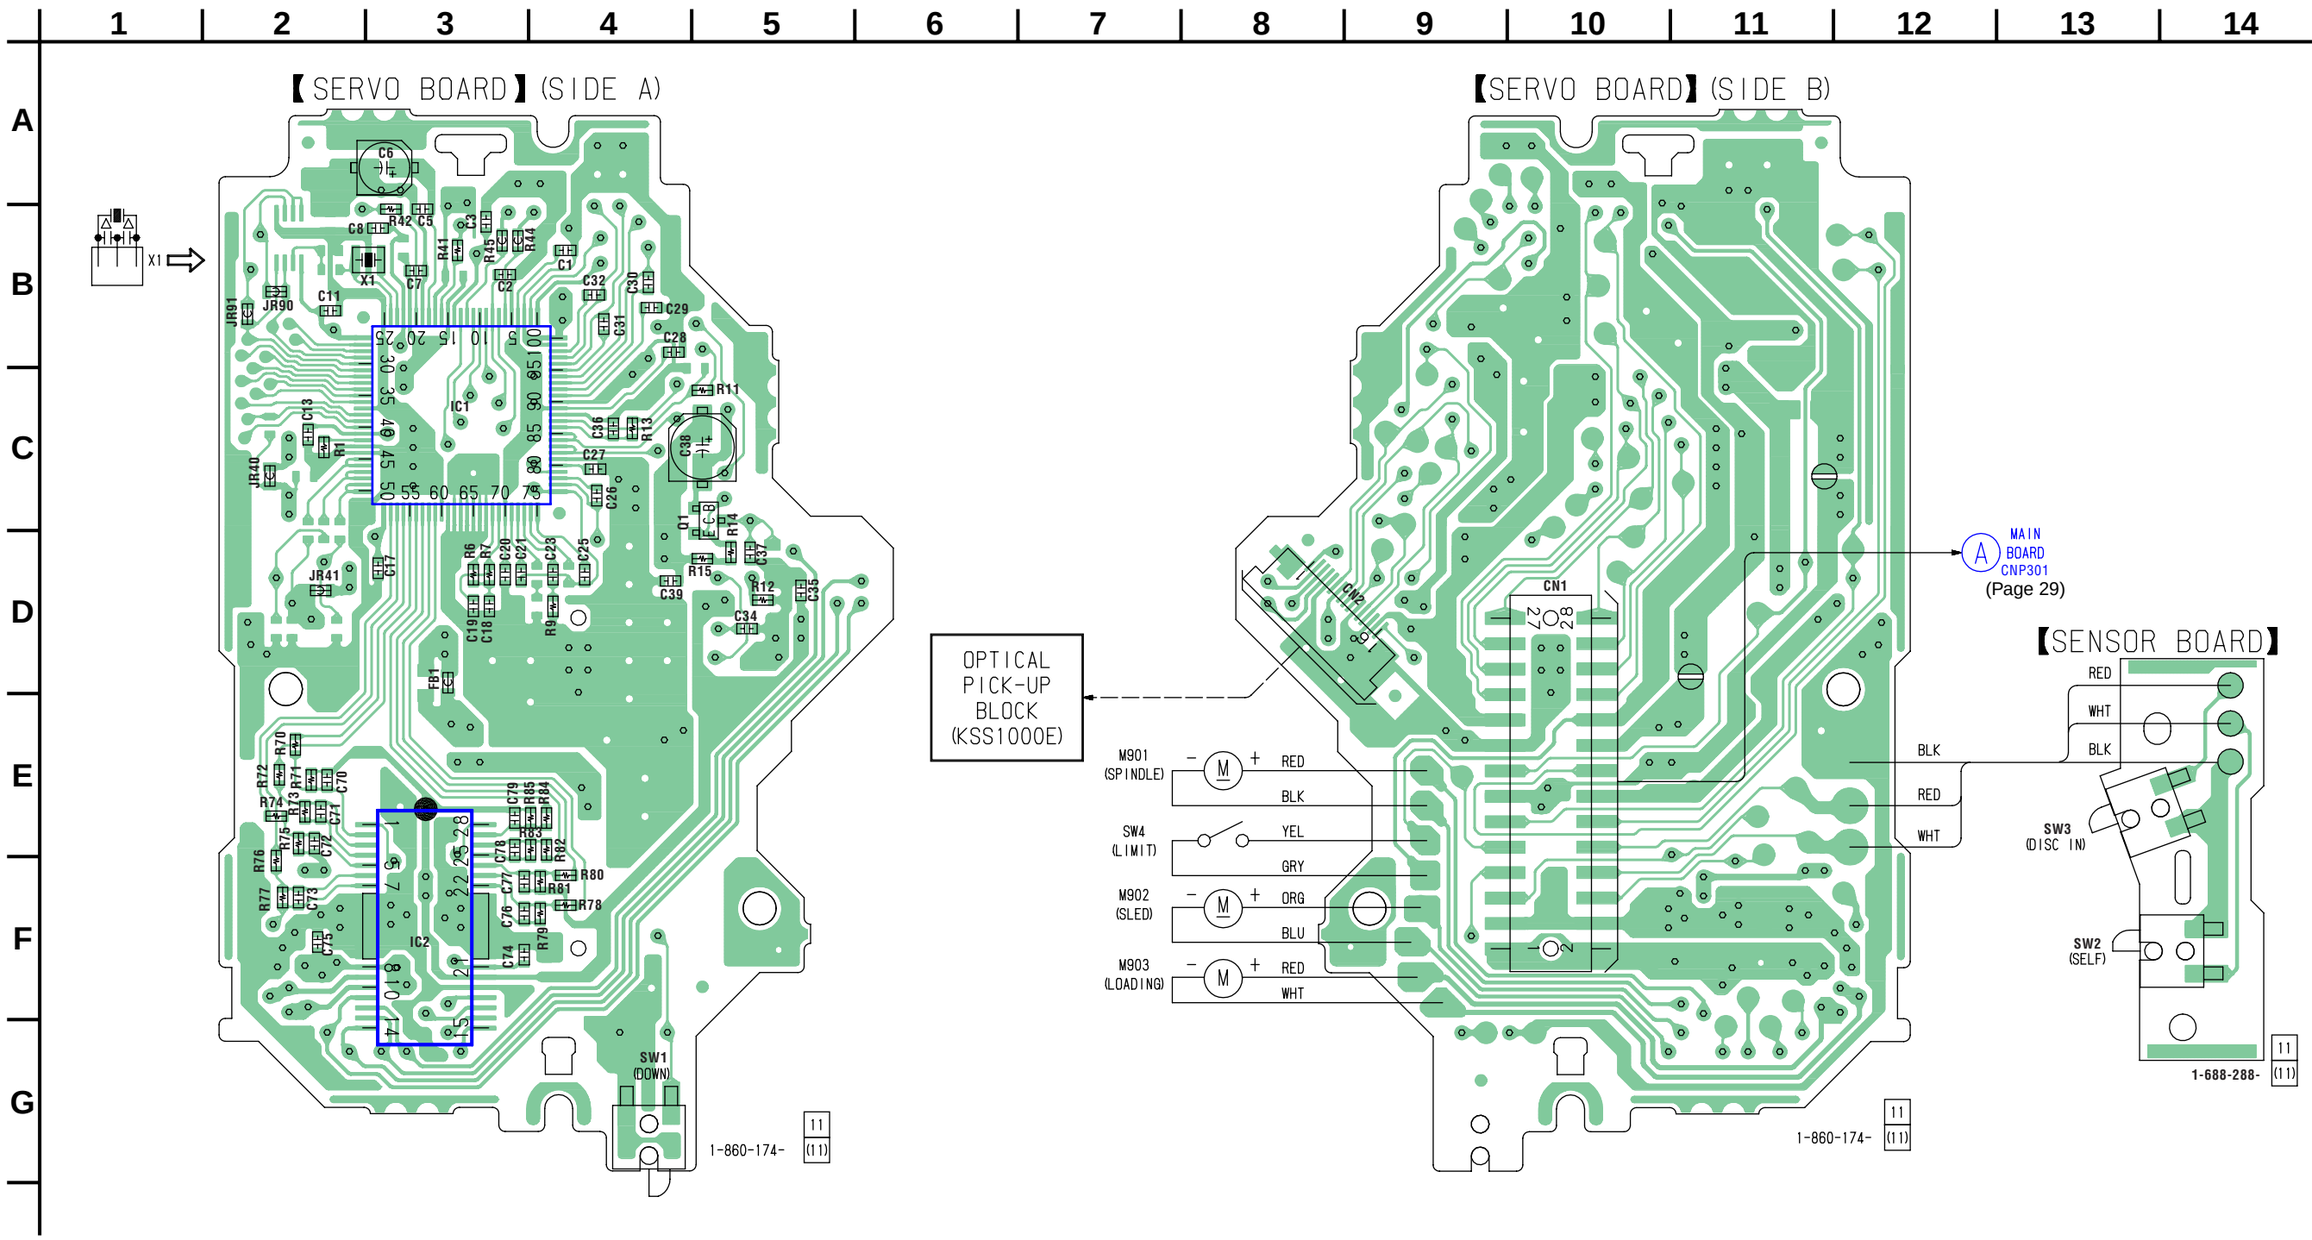

• Refer to page 22 for Waveforms.

3-9. SCHEMATIC DIAGRAM — CD MECHANISM SECTION —

• Refer to page 34 for IC Block Diagram.

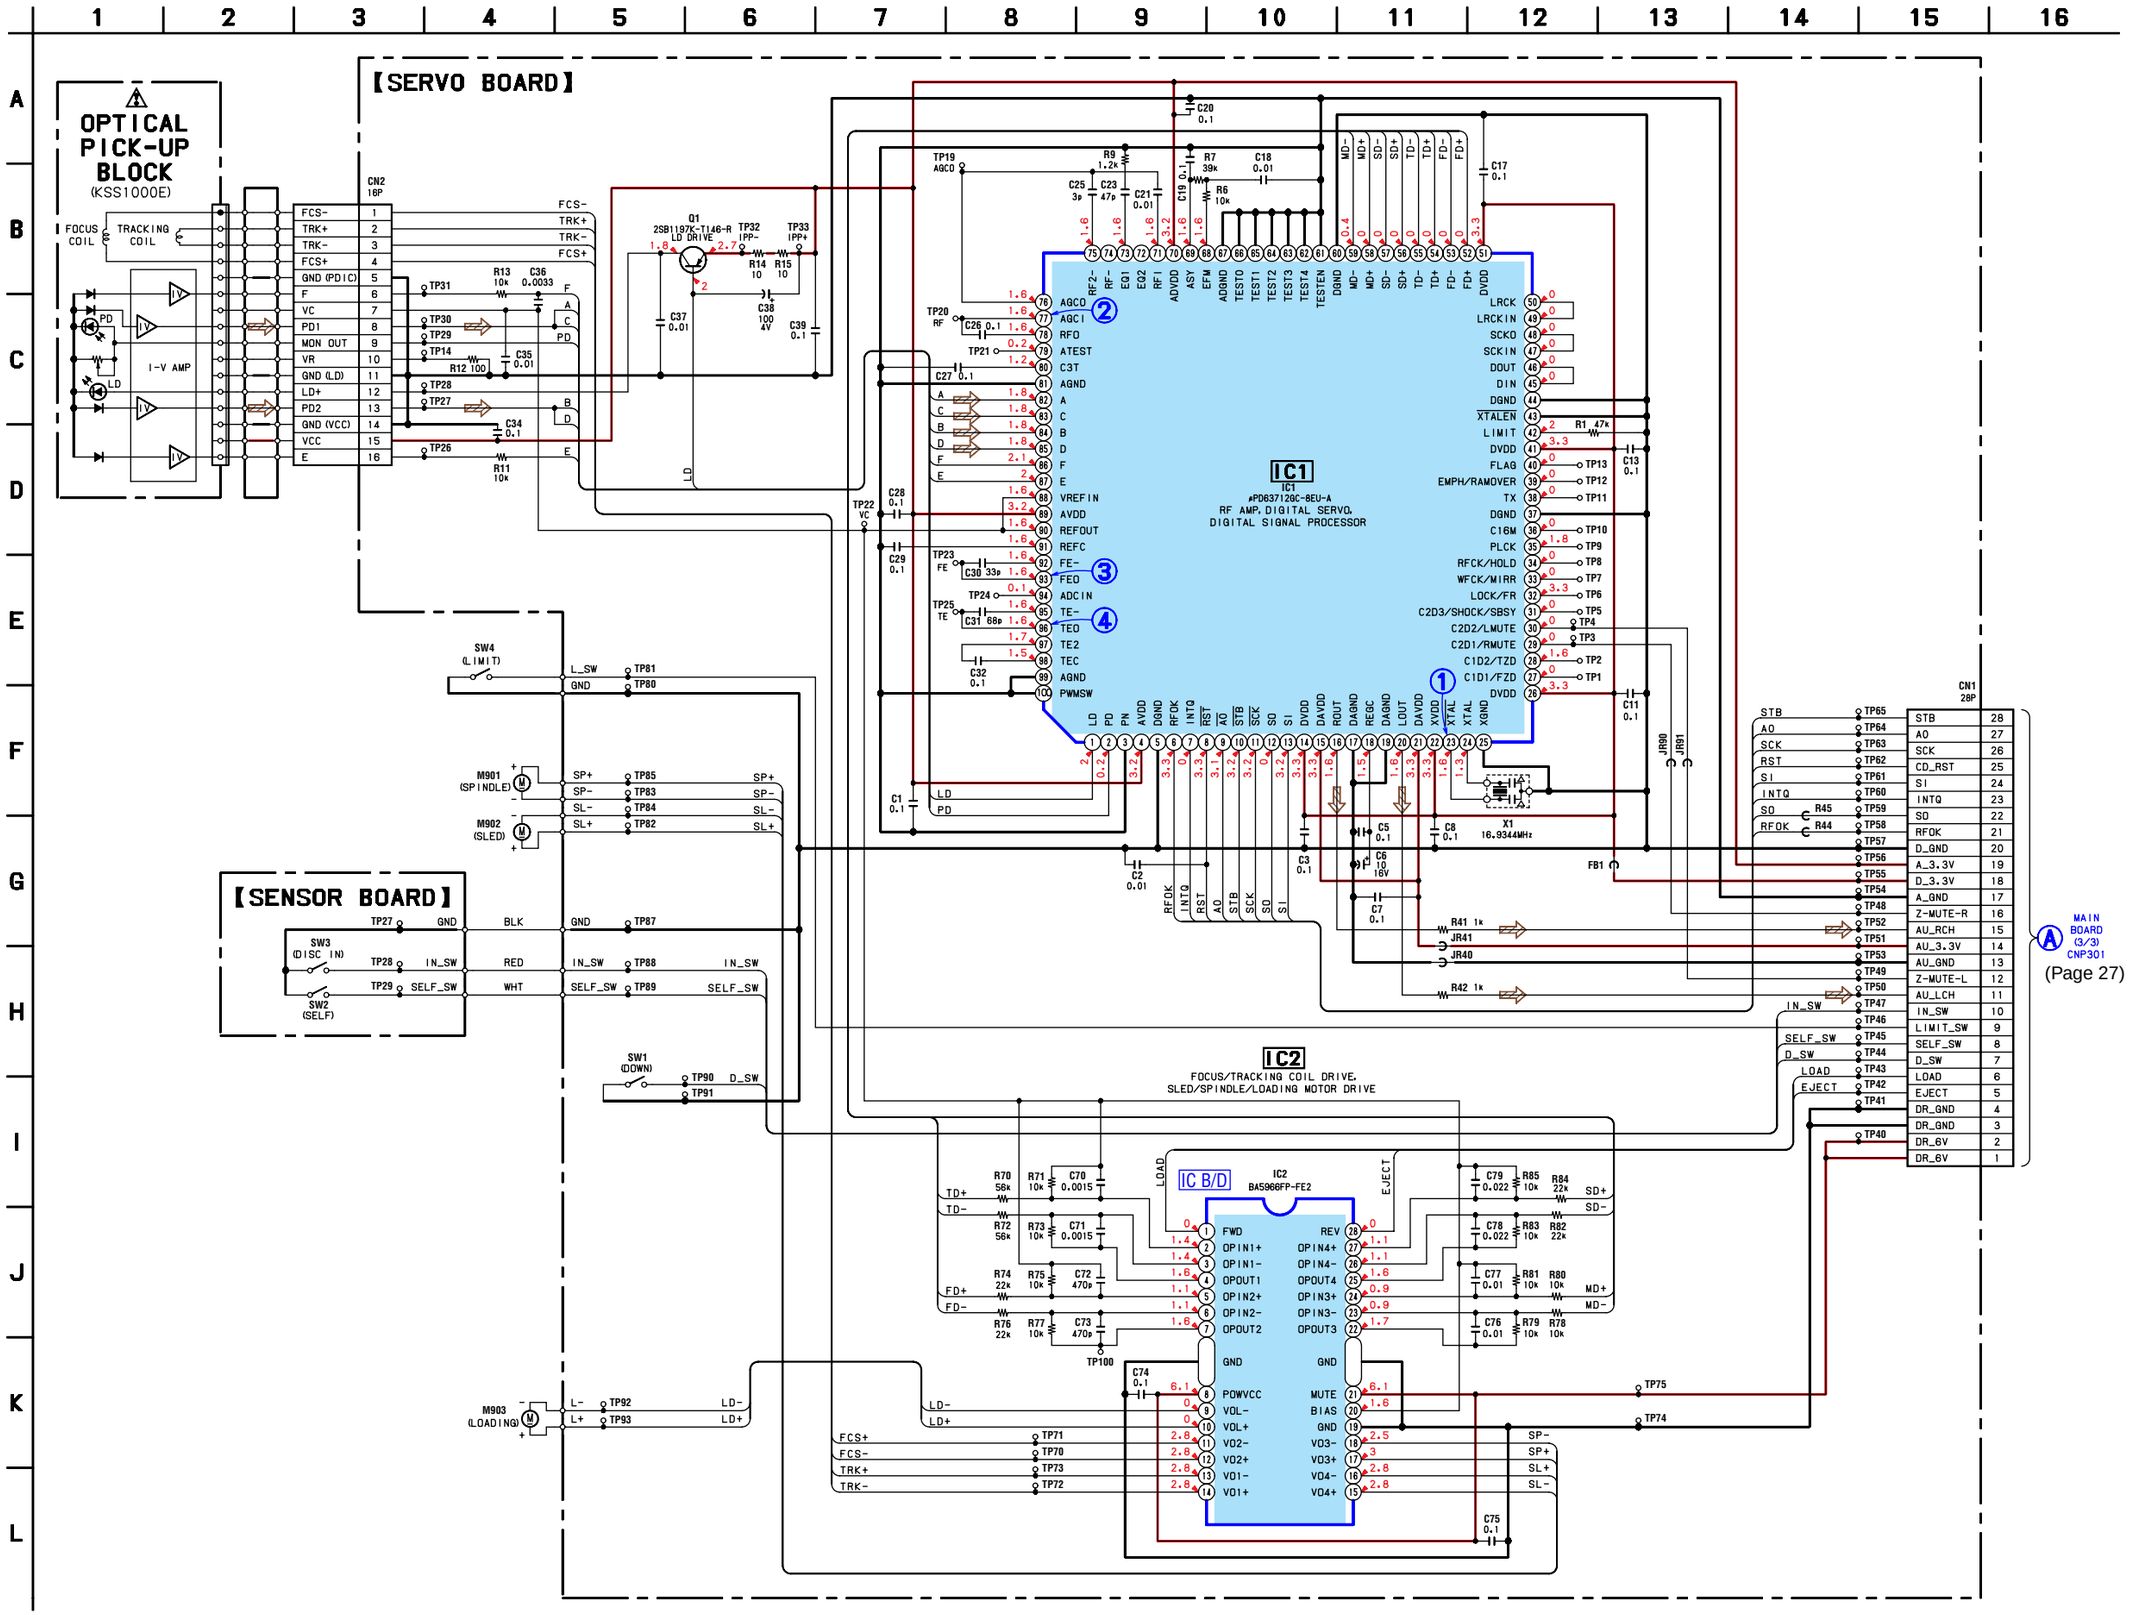

3-10. SCHEMATIC DIAGRAM — MAIN SECTION (1/3) — • Refer to page 34 for IC Block Diagram.

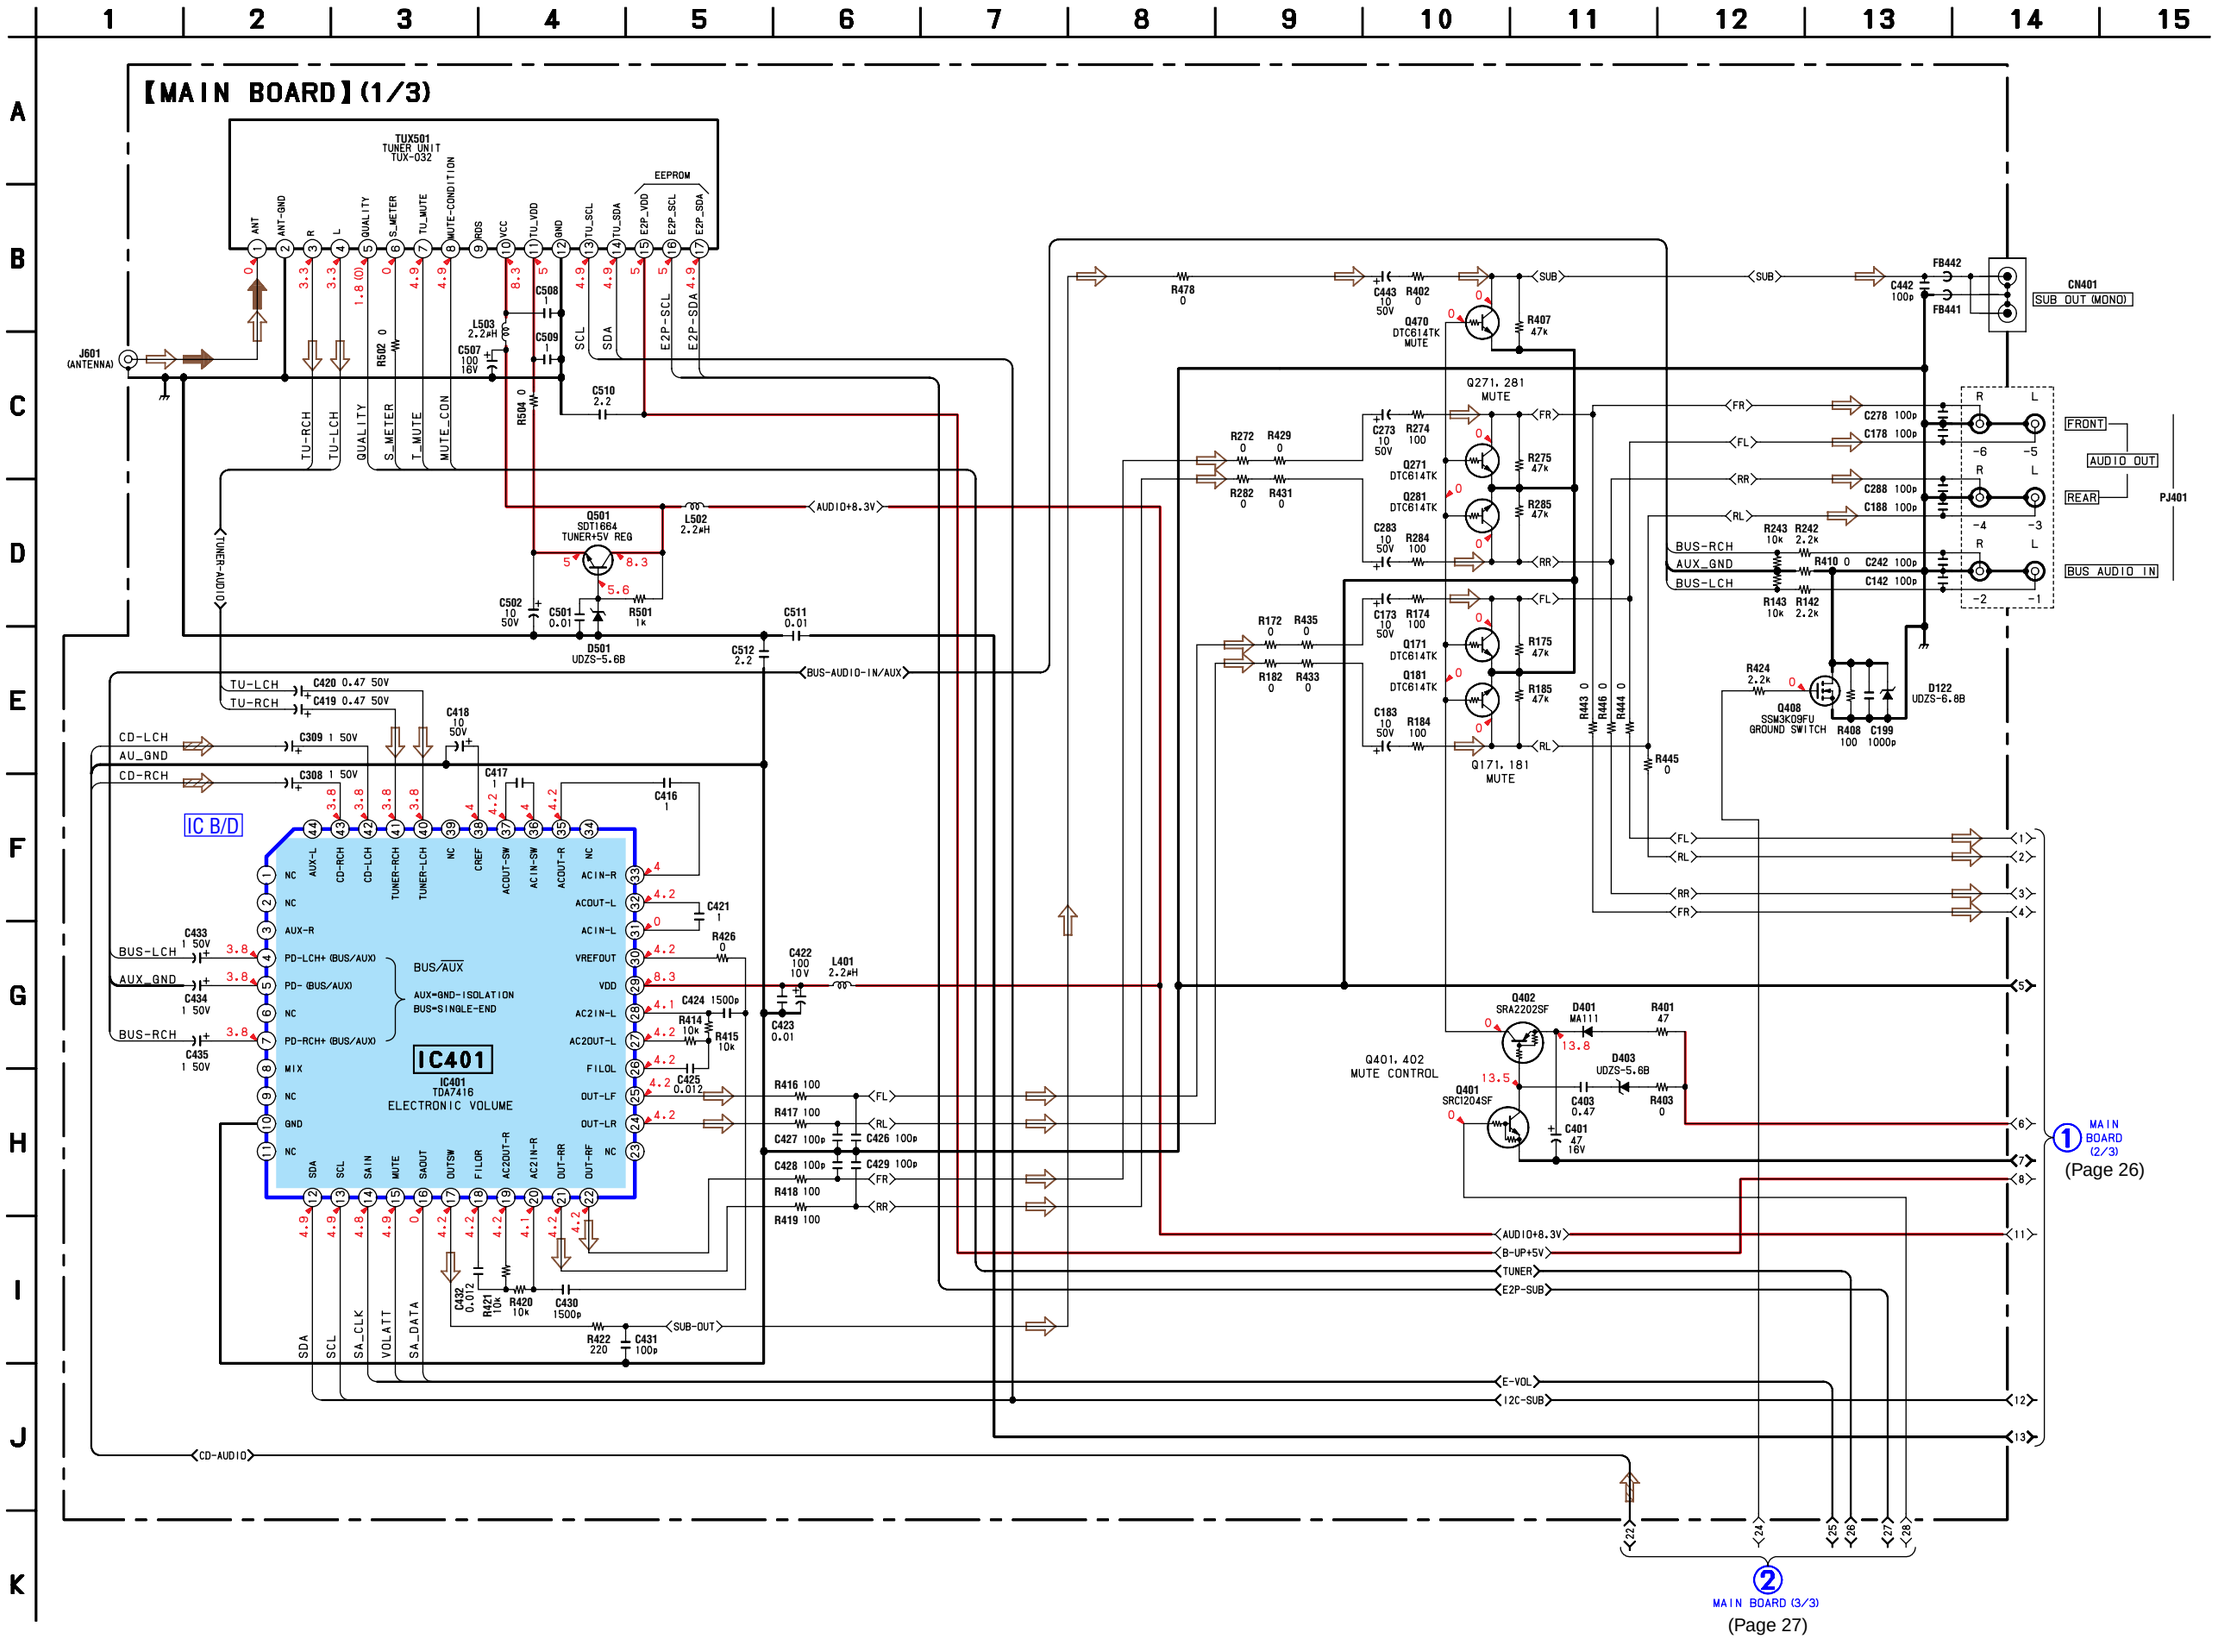

3-11. SCHEMATIC DIAGRAM — MAIN SECTION (2/3) — • Refer to page 34 for IC Block Diagram.

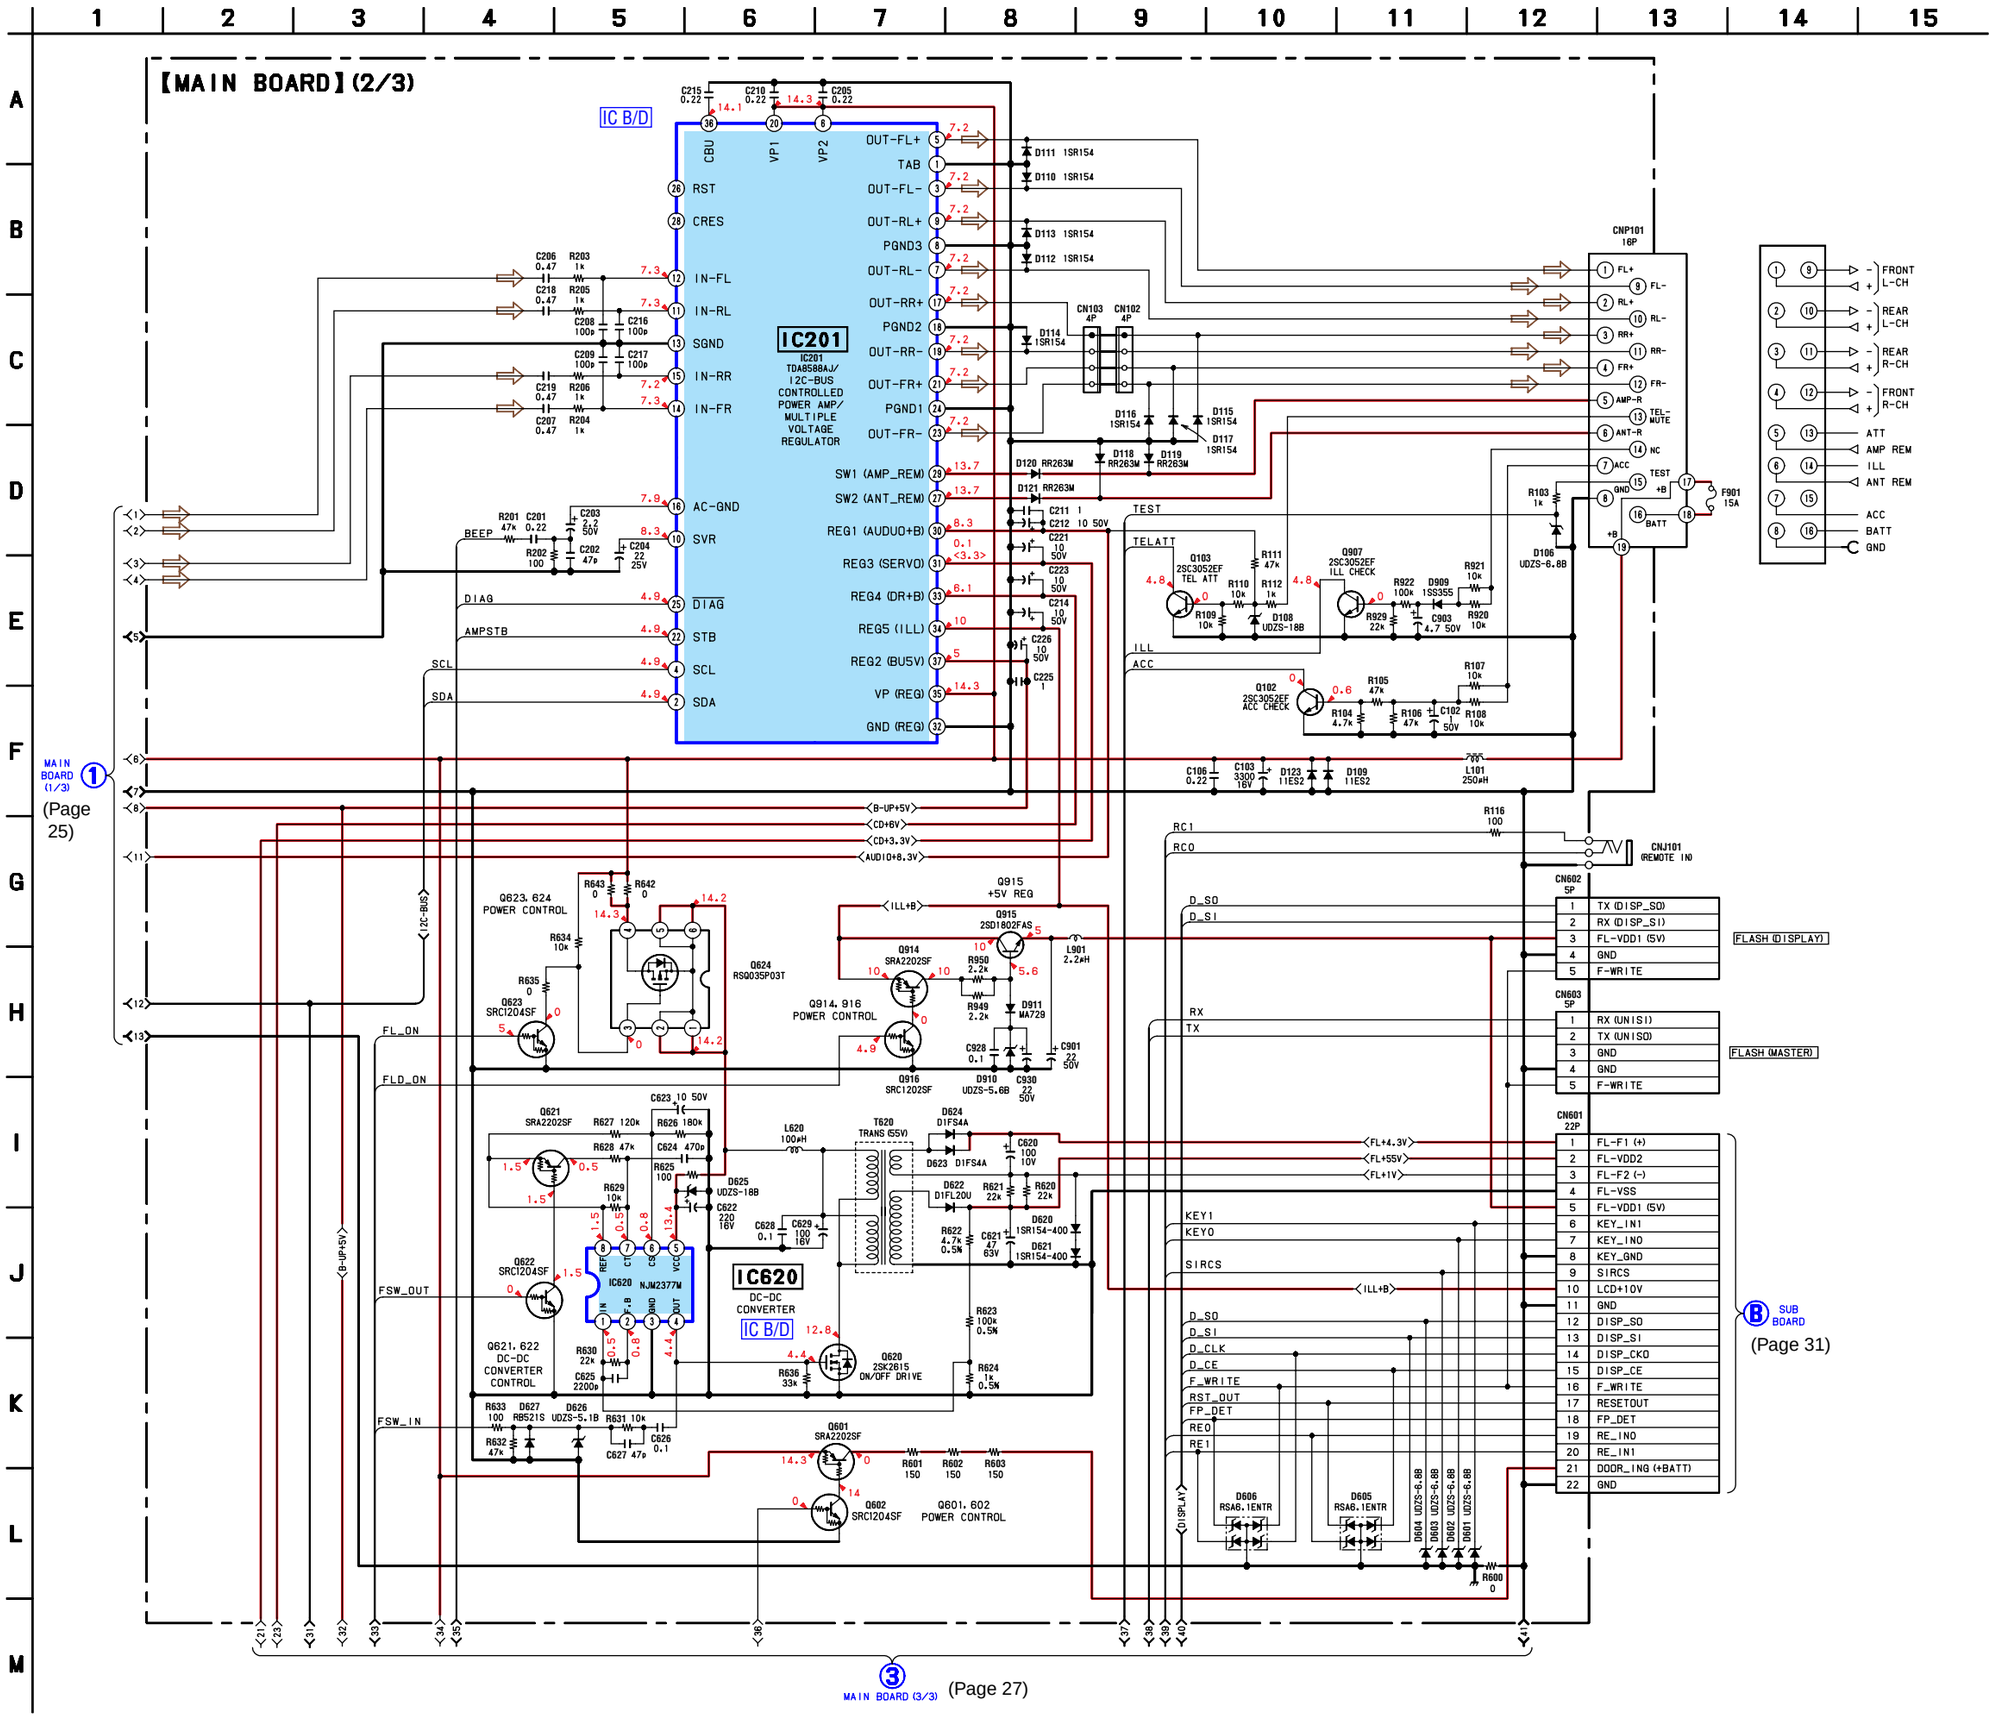

• Refer to page 22 for Waveforms.

3-12. SCHEMATIC DIAGRAM — MAIN SECTION (3/3) — • Refer to page 35 for IC Block Diagram.

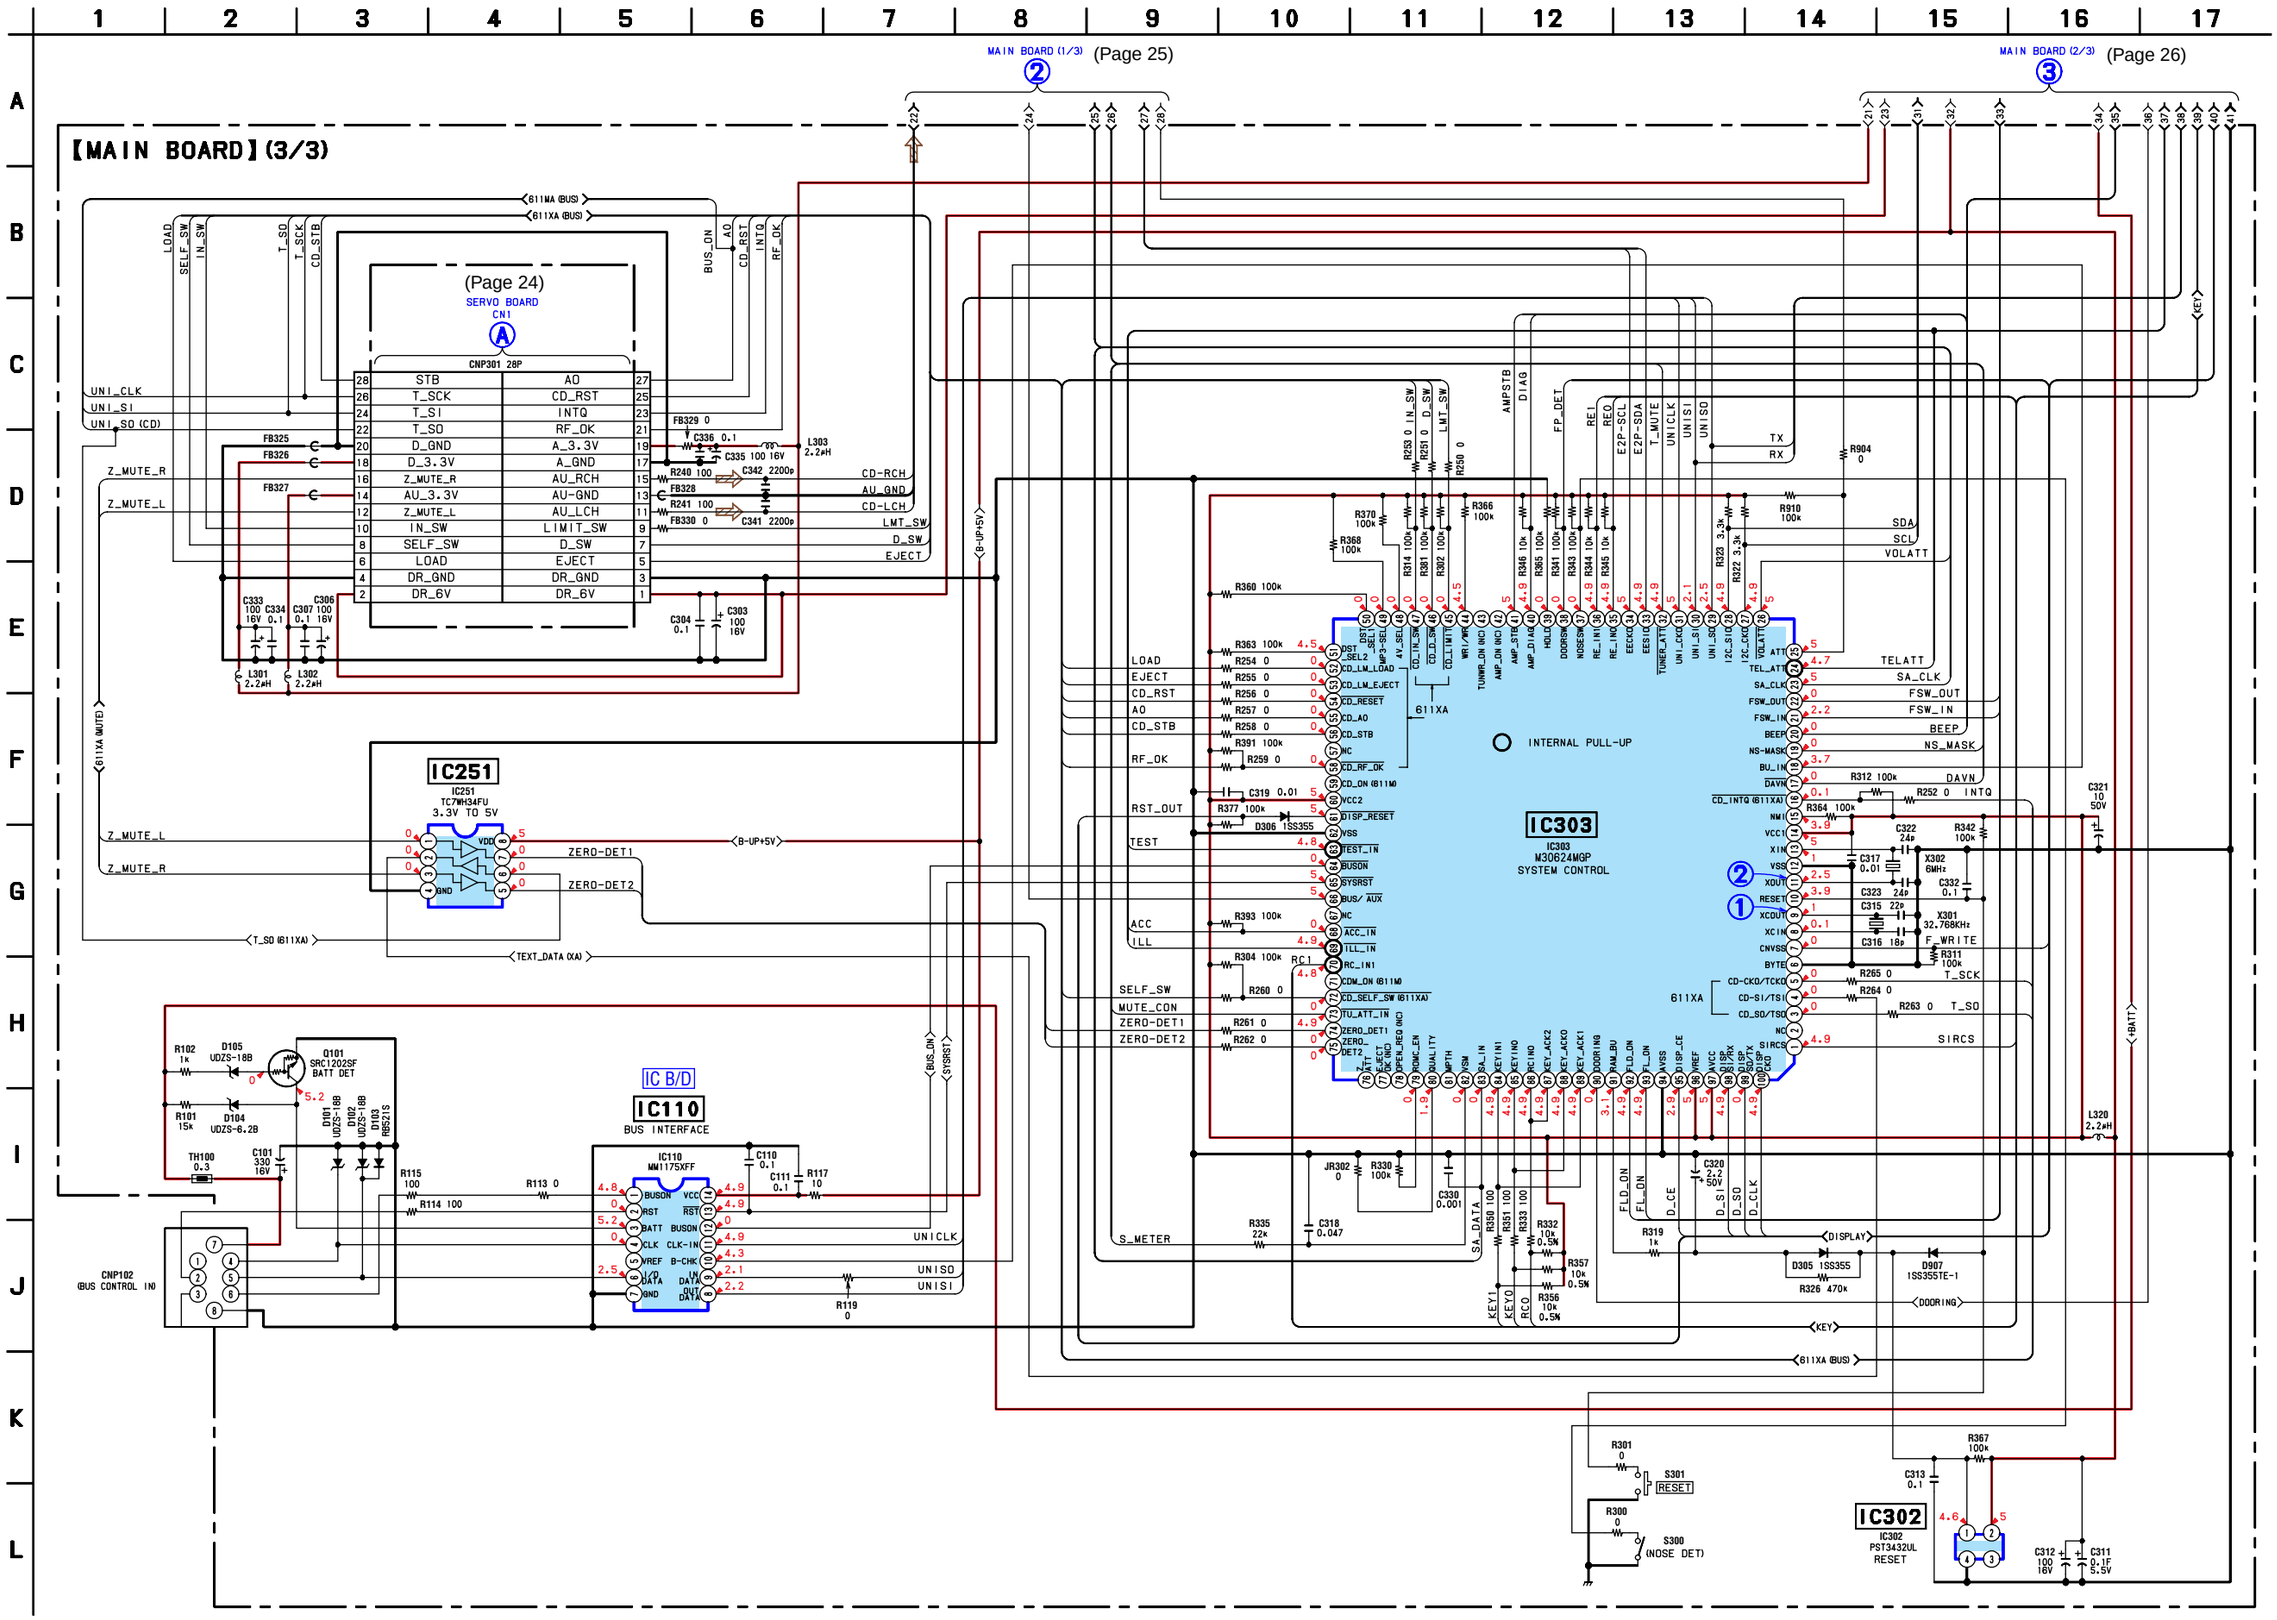

3-13. PRINTED WIRING BOARDS — MAIN SECTION — **• Refer to page 22 for Circuit Boards Location.** **: Uses unleaded solder.**

14 13 12 11 10 9 8 7 6 5 4 3 2 1

A B C D E F G H I J

【MAIN BOARD】(SIDE A)

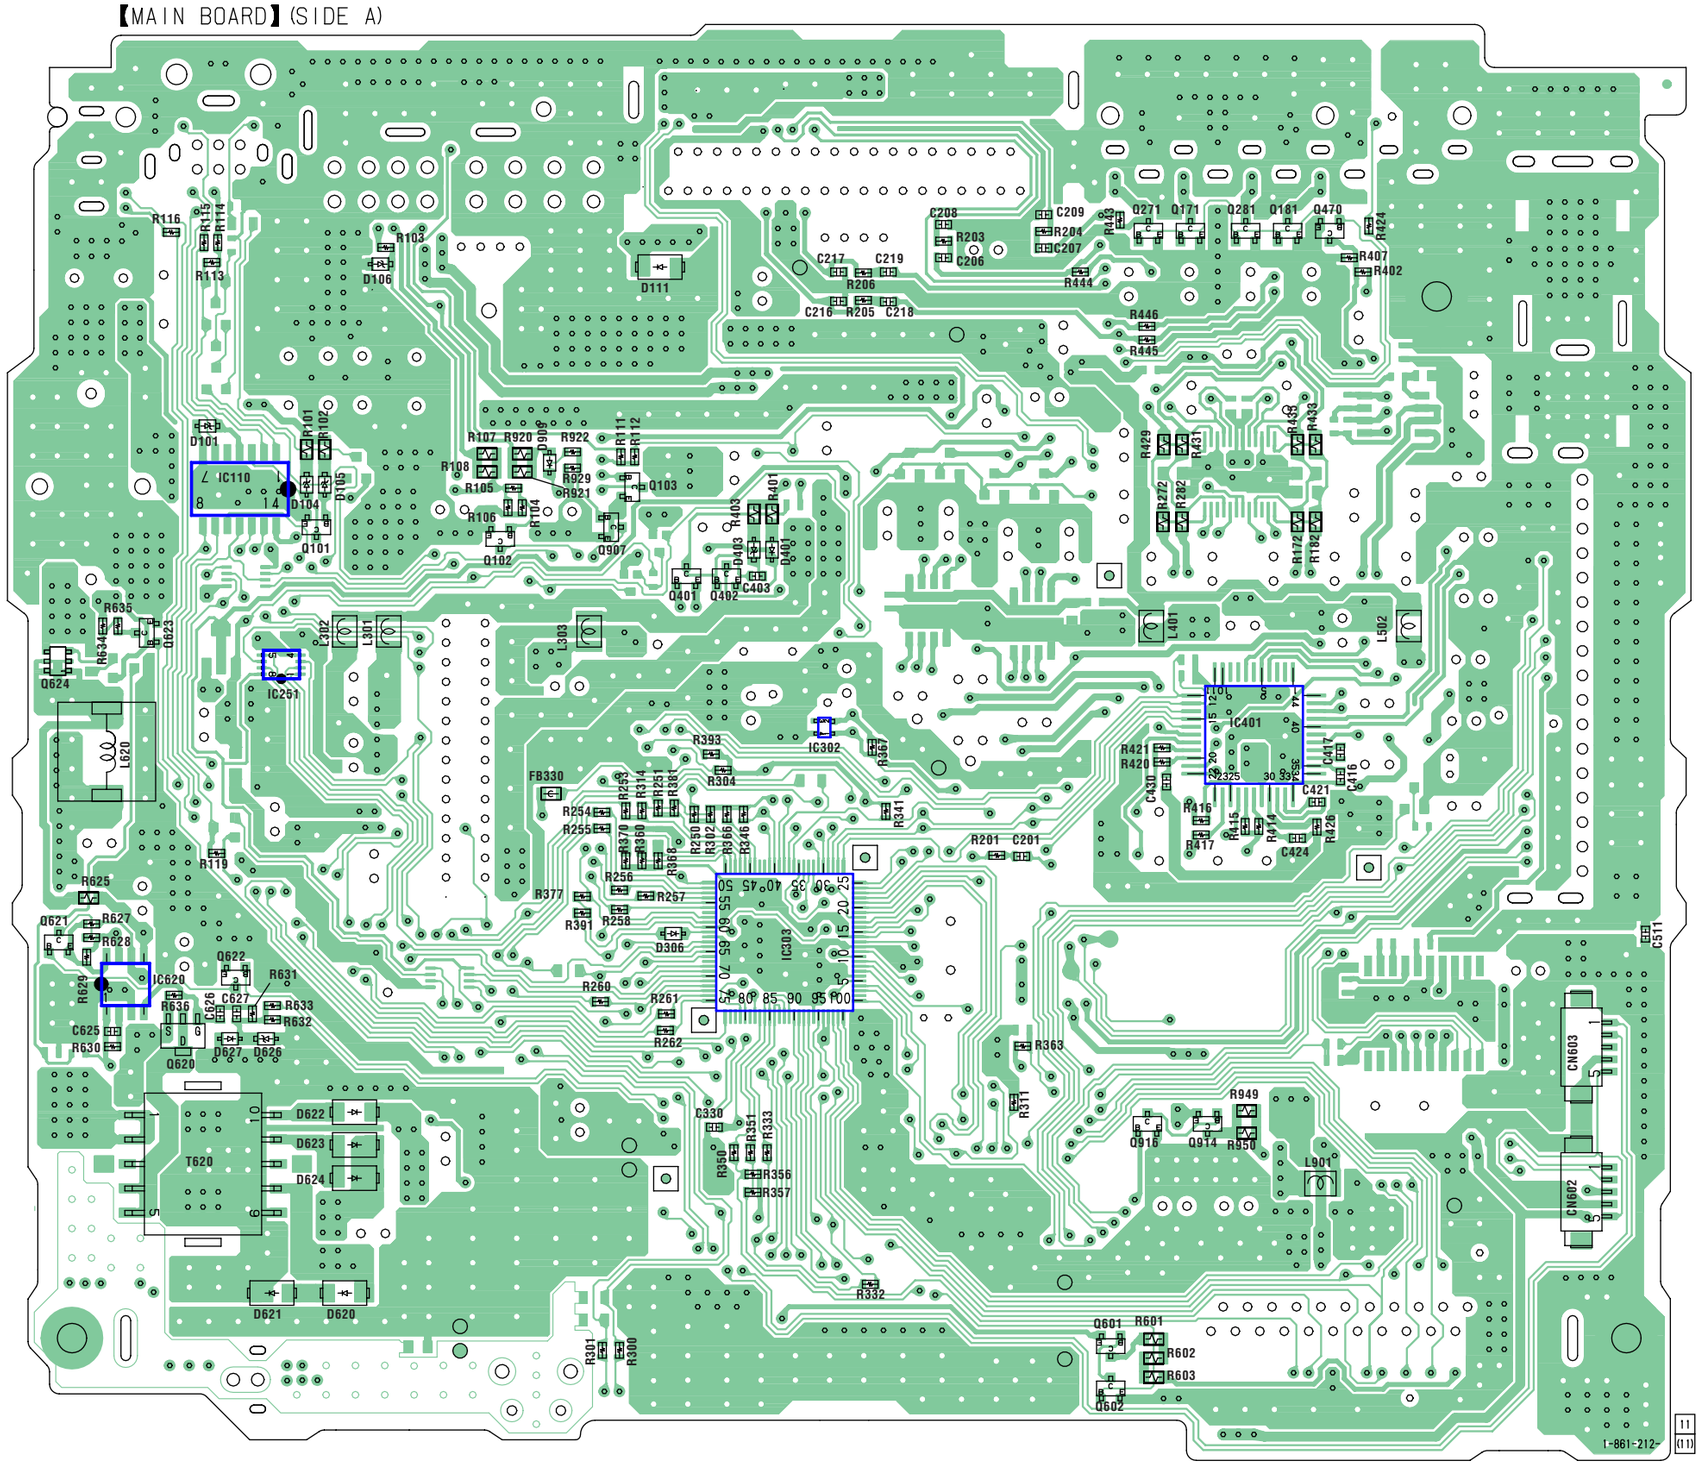

- **Semiconductor Location**

Ref. No.	Location
D101	D-9
D104	D-8
D105	D-8
D106	C-8
D111	C-6
D306	G-6
D401	E-5
D403	E-6
D620	I-8
D621	I-9
D622	H-8
D623	H-8
D624	H-8
D626	H-9
D627	H-9
D909	D-7
IC110	D-9
IC251	E-9
IC302	F-5
IC303	G-5
IC401	F-3
IC620	G-9
Q101	D-8
Q102	E-9
Q103	D-6
Q171	C-3
Q181	C-2
Q271	C-3
Q281	C-3
Q401	E-6
Q402	E-6
Q470	C-2
Q601	I-3
Q602	J-3
Q620	H-9
Q621	G-10
Q622	G-9
Q623	E-9
Q624	E-10
Q907	E-6
Q914	H-3
Q916	H-3

【MAIN BOARD】
(SIDE B)

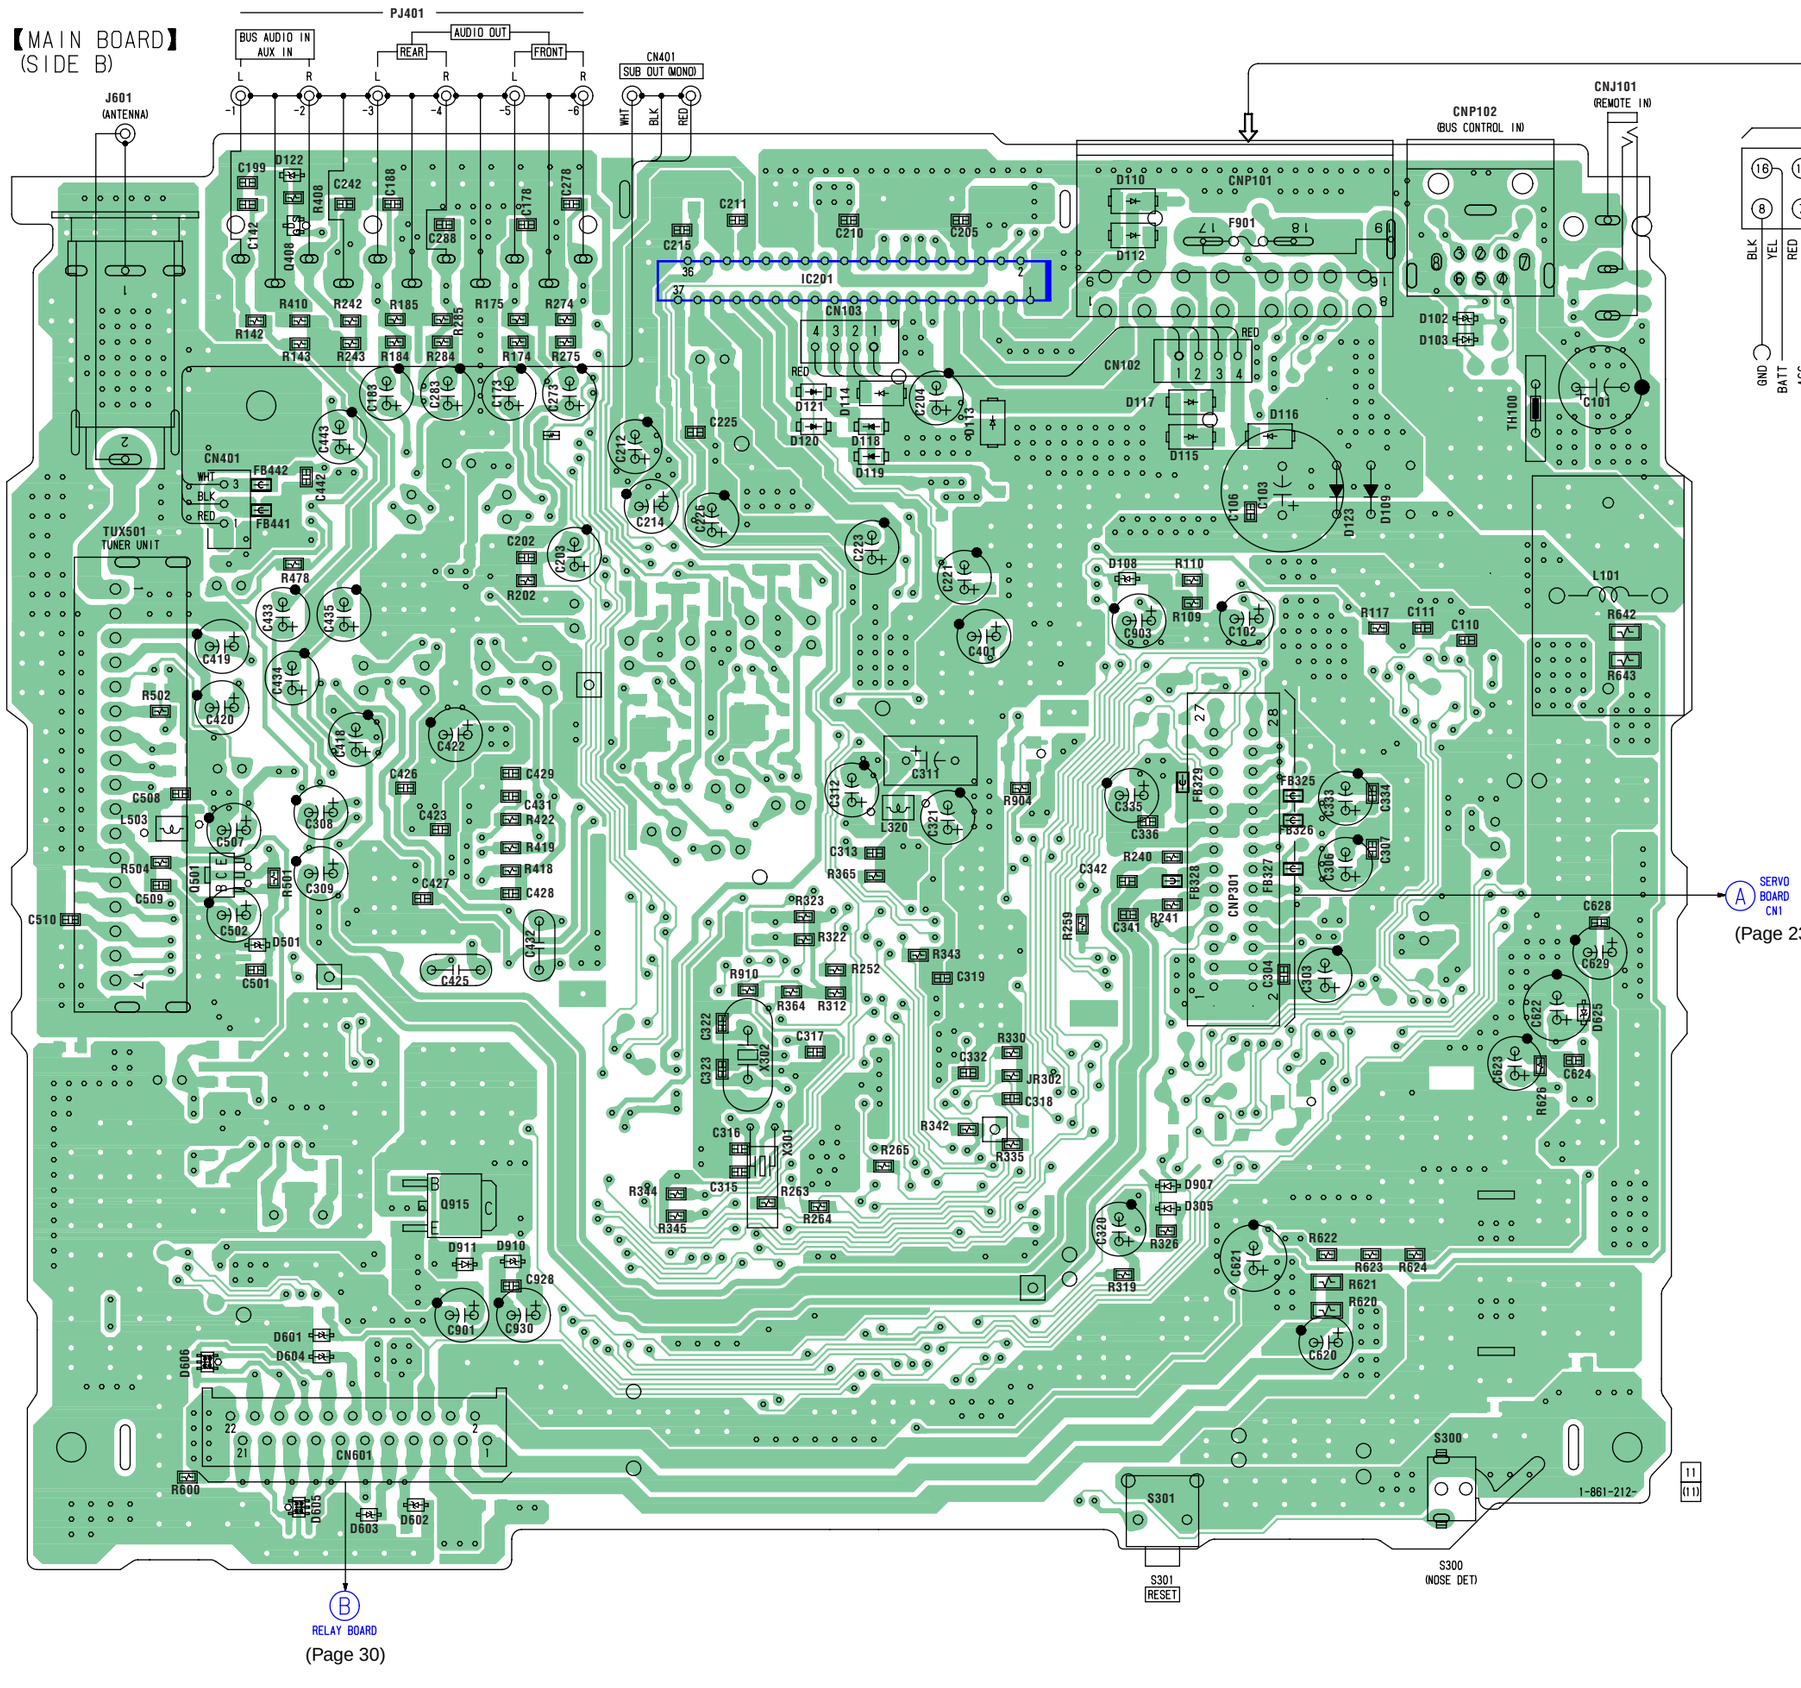

- **Semiconductor Location**

Ref. No.	Location
D102	B-10
D103	C-10
D108	D-8
D109	D-9
D110	B-8
D112	B-8
D113	C-7
D114	C-6
D115	C-8
D116	C-9
D117	C-8
D118	C-6
D119	C-6
D120	C-6
D121	C-6
D122	B-3
D123	D-9
D305	H-8
D501	F-3
D601	I-3
D602	J-3
D603	J-3
D604	I-3
D605	J-3
D606	I-2
D625	G-11
D907	H-8
D910	H-4
D911	H-4
IC201	B-6
Q408	B-3
Q501	F-2
Q915	H-4

3-14. PRINTED WIRING BOARD — SUB SECTION — • Refer to page 22 for Circuit Boards Location. : Uses unleaded solder.

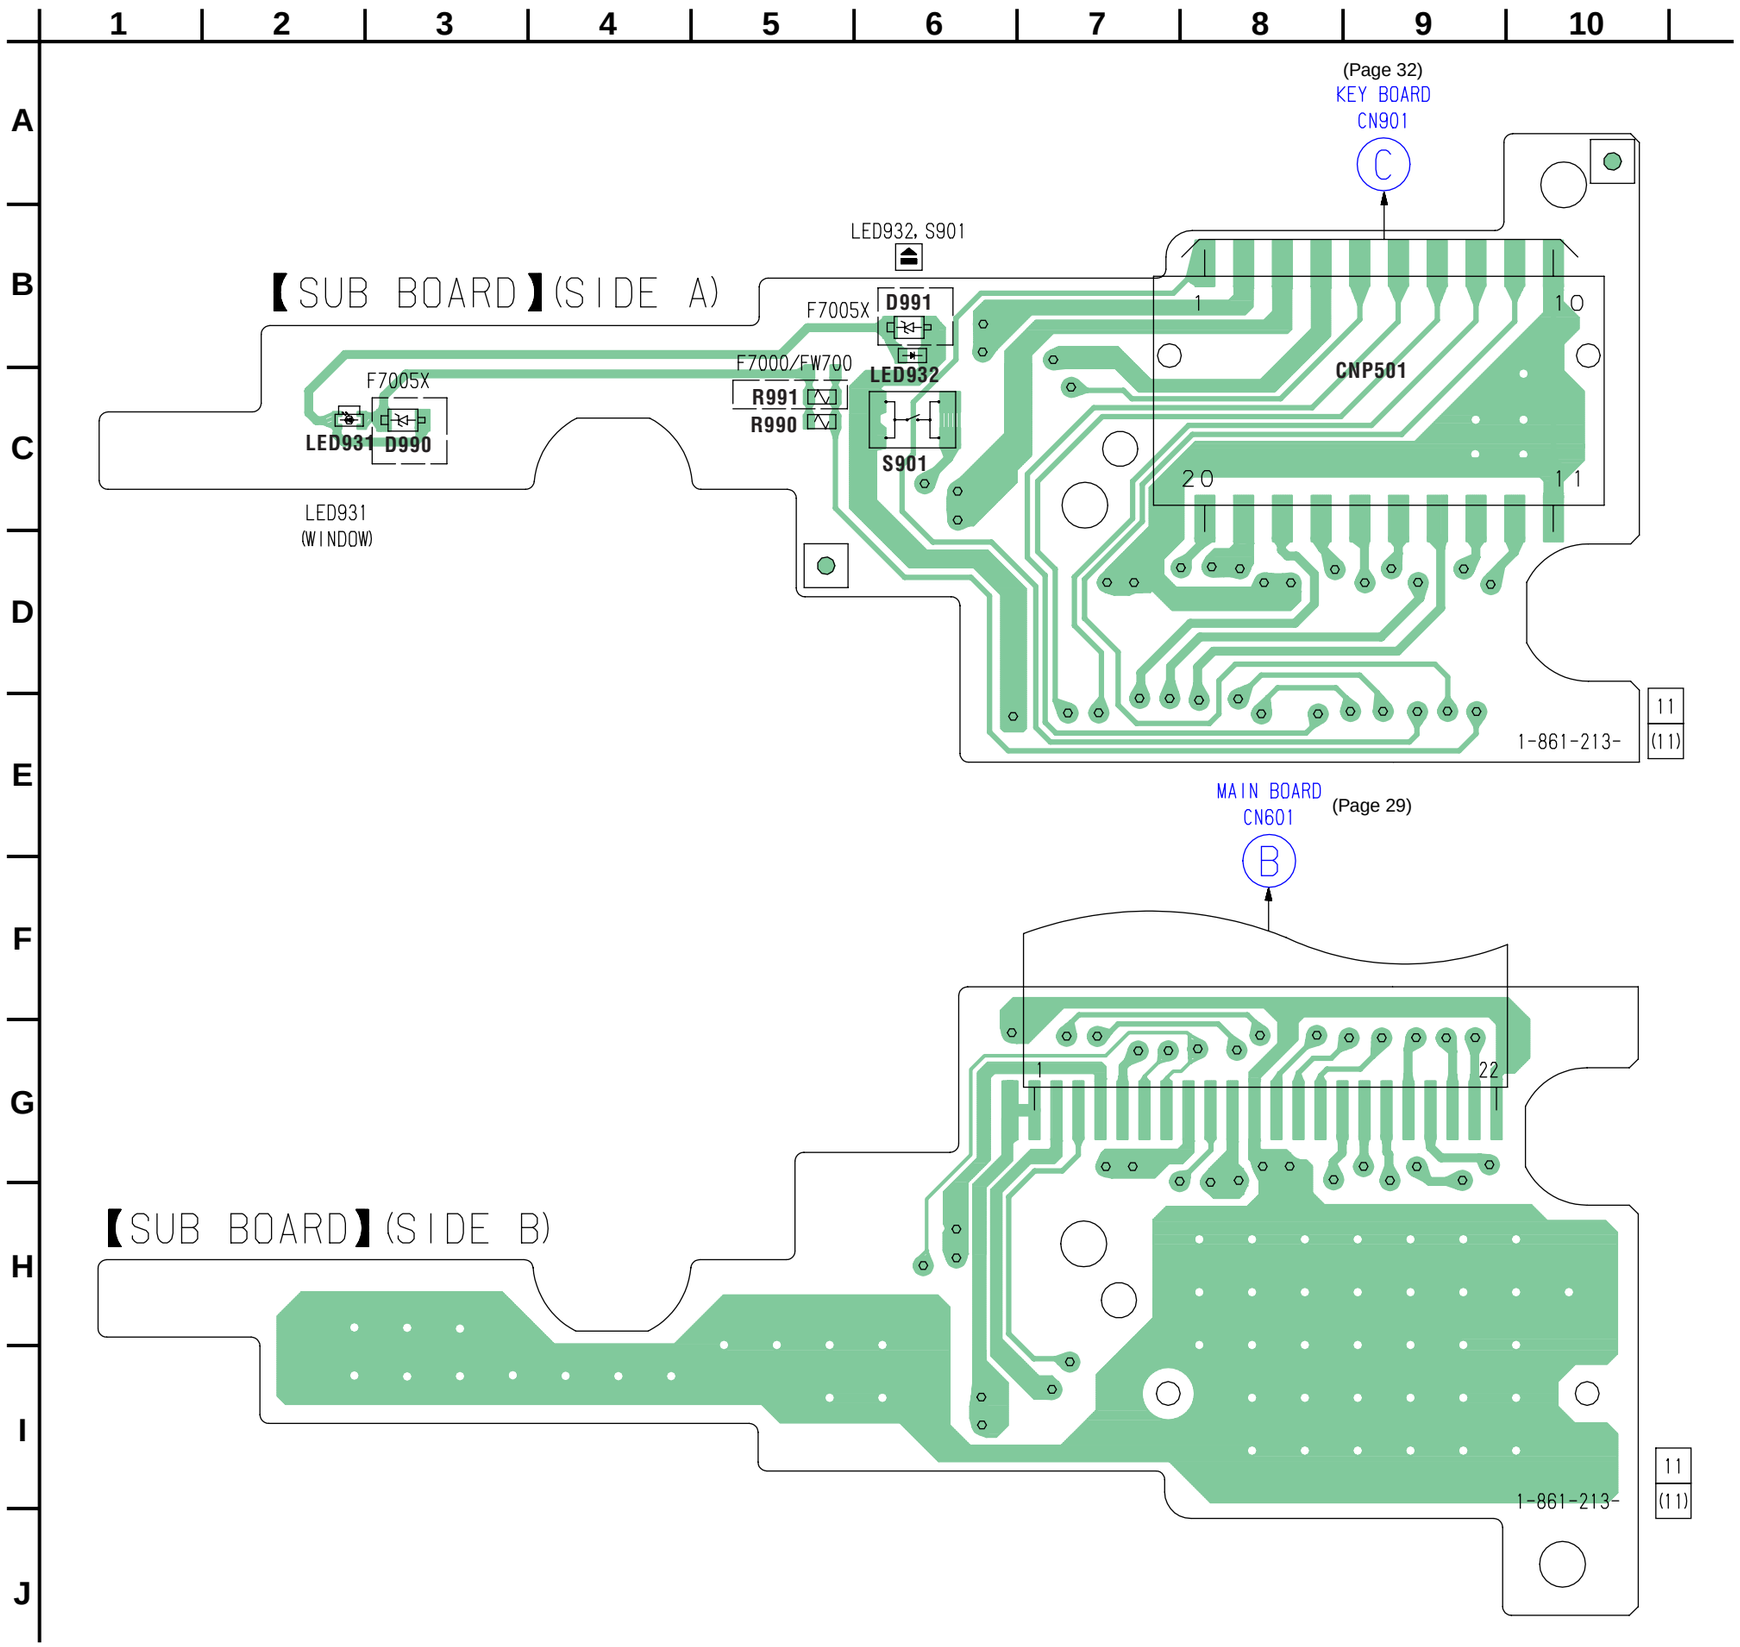

3-15. SCHEMATIC DIAGRAM — SUB SECTION —

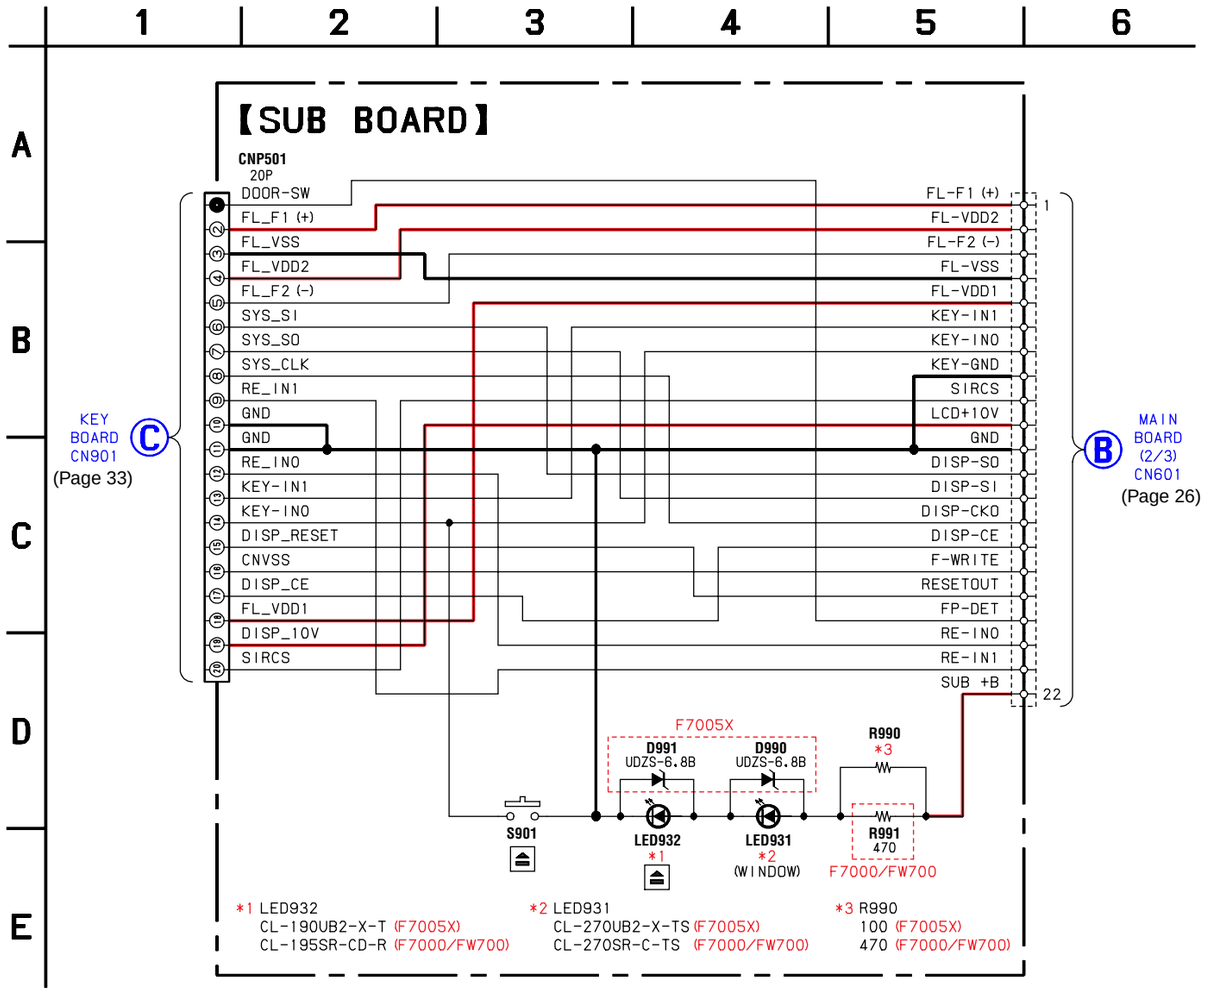

3-16. PRINTED WIRING BOARD — KEY SECTION — • Refer to page 22 for Circuit Boards Location. : Uses unleaded solder.

【KEY BOARD】(SIDE A)

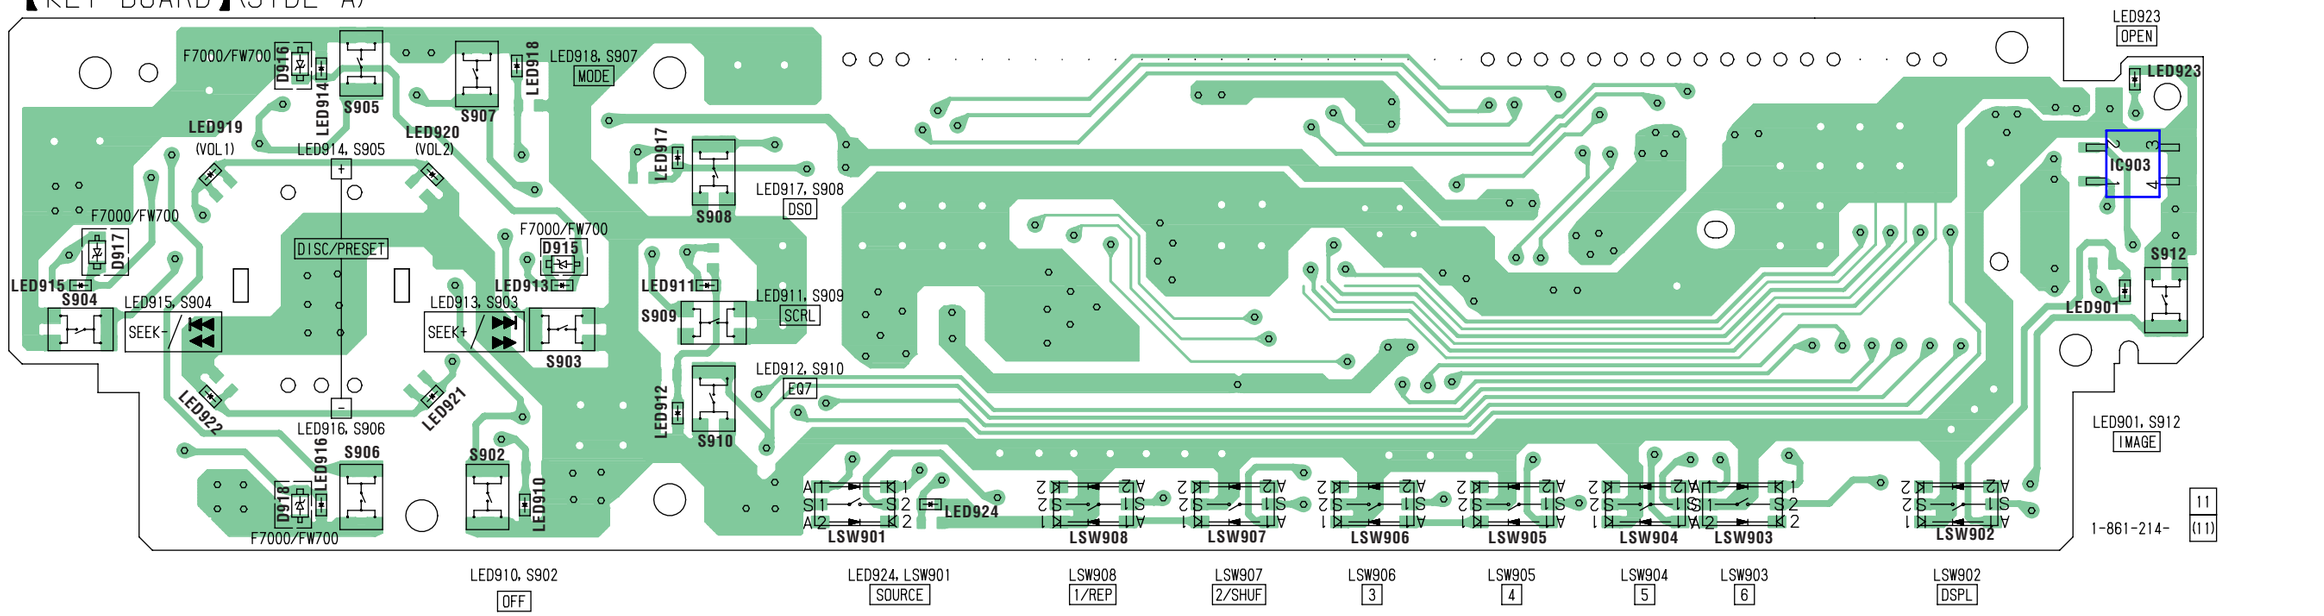

(Page 30)
SUB BOARD
CNP501
C

【KEY BOARD】(SIDE B)

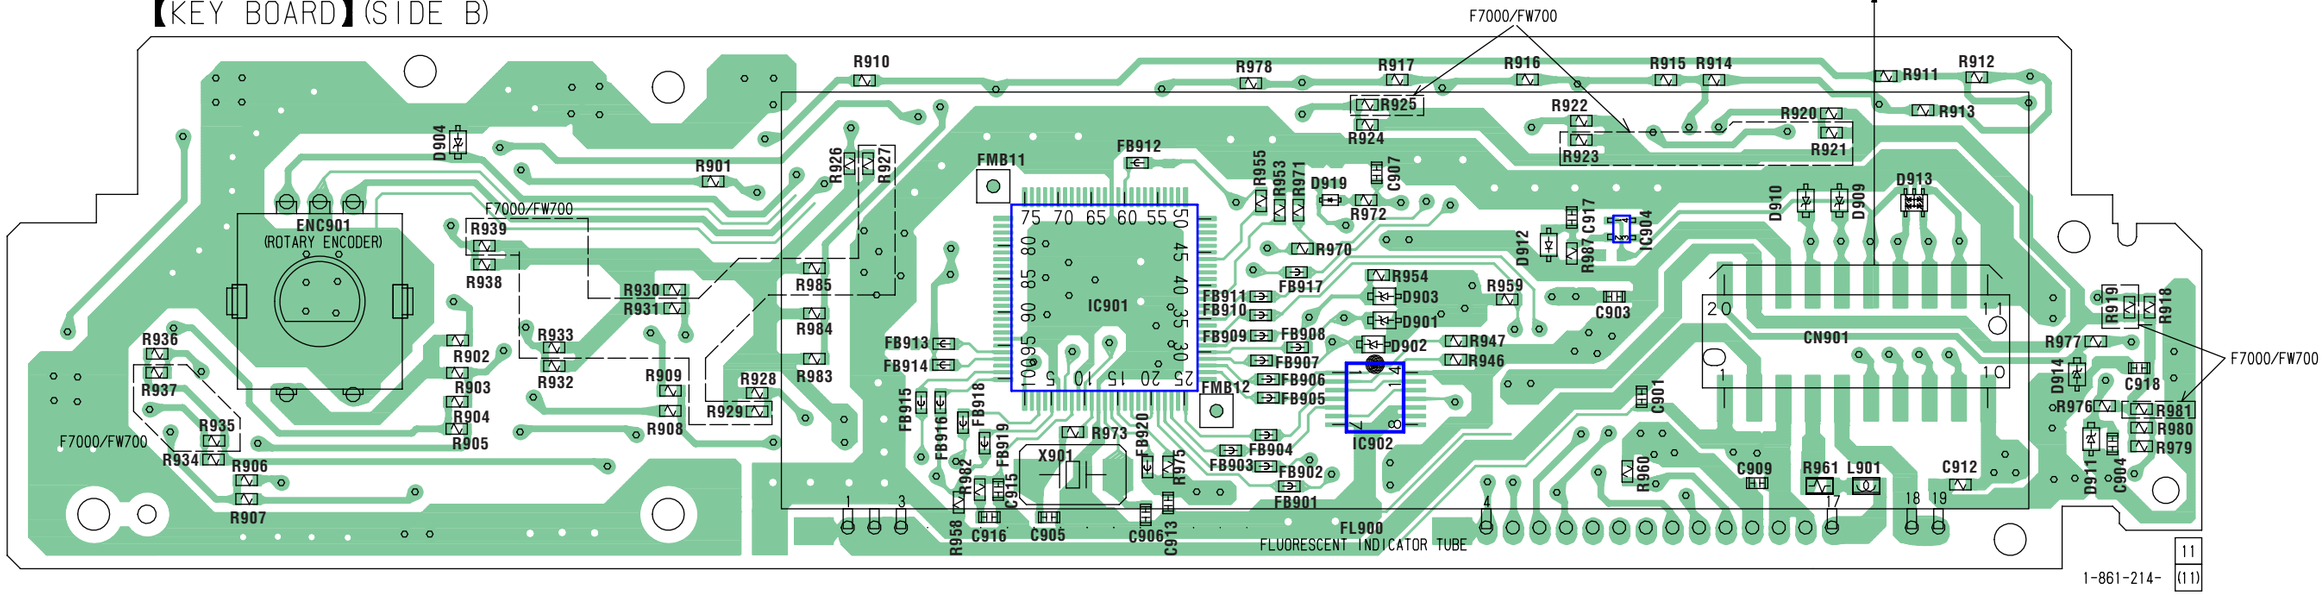

• Semiconductor Location

Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
D901	G-9	D913	H-13	IC901	G-8	LED912	C-5	LED920	B-3
D902	H-9	D914	H-13	IC902	H-9	LED913	C-4	LED921	C-3
D903	G-9	(D915)	B-4	IC903	B-14	LED914	A-3	LED922	C-2
D904	F-3	(D916)	A-2	IC904	G-11	LED915	C-1	LED923	A-13
D909	G-12	(D917)	B-1			LED916	D-3	LED924	D-7
D910	G-12	(D918)	D-2	LED901	C-14	LED917	B-5		
D911	H-14	(D919)	G-9	LED910	D-4	LED918	A-4		
D912	G-10			LED911	C-5	LED919	B-2		

( ): CDX-F7000/FW700 only

3-17. SCHEMATIC DIAGRAM — KEY SECTION —

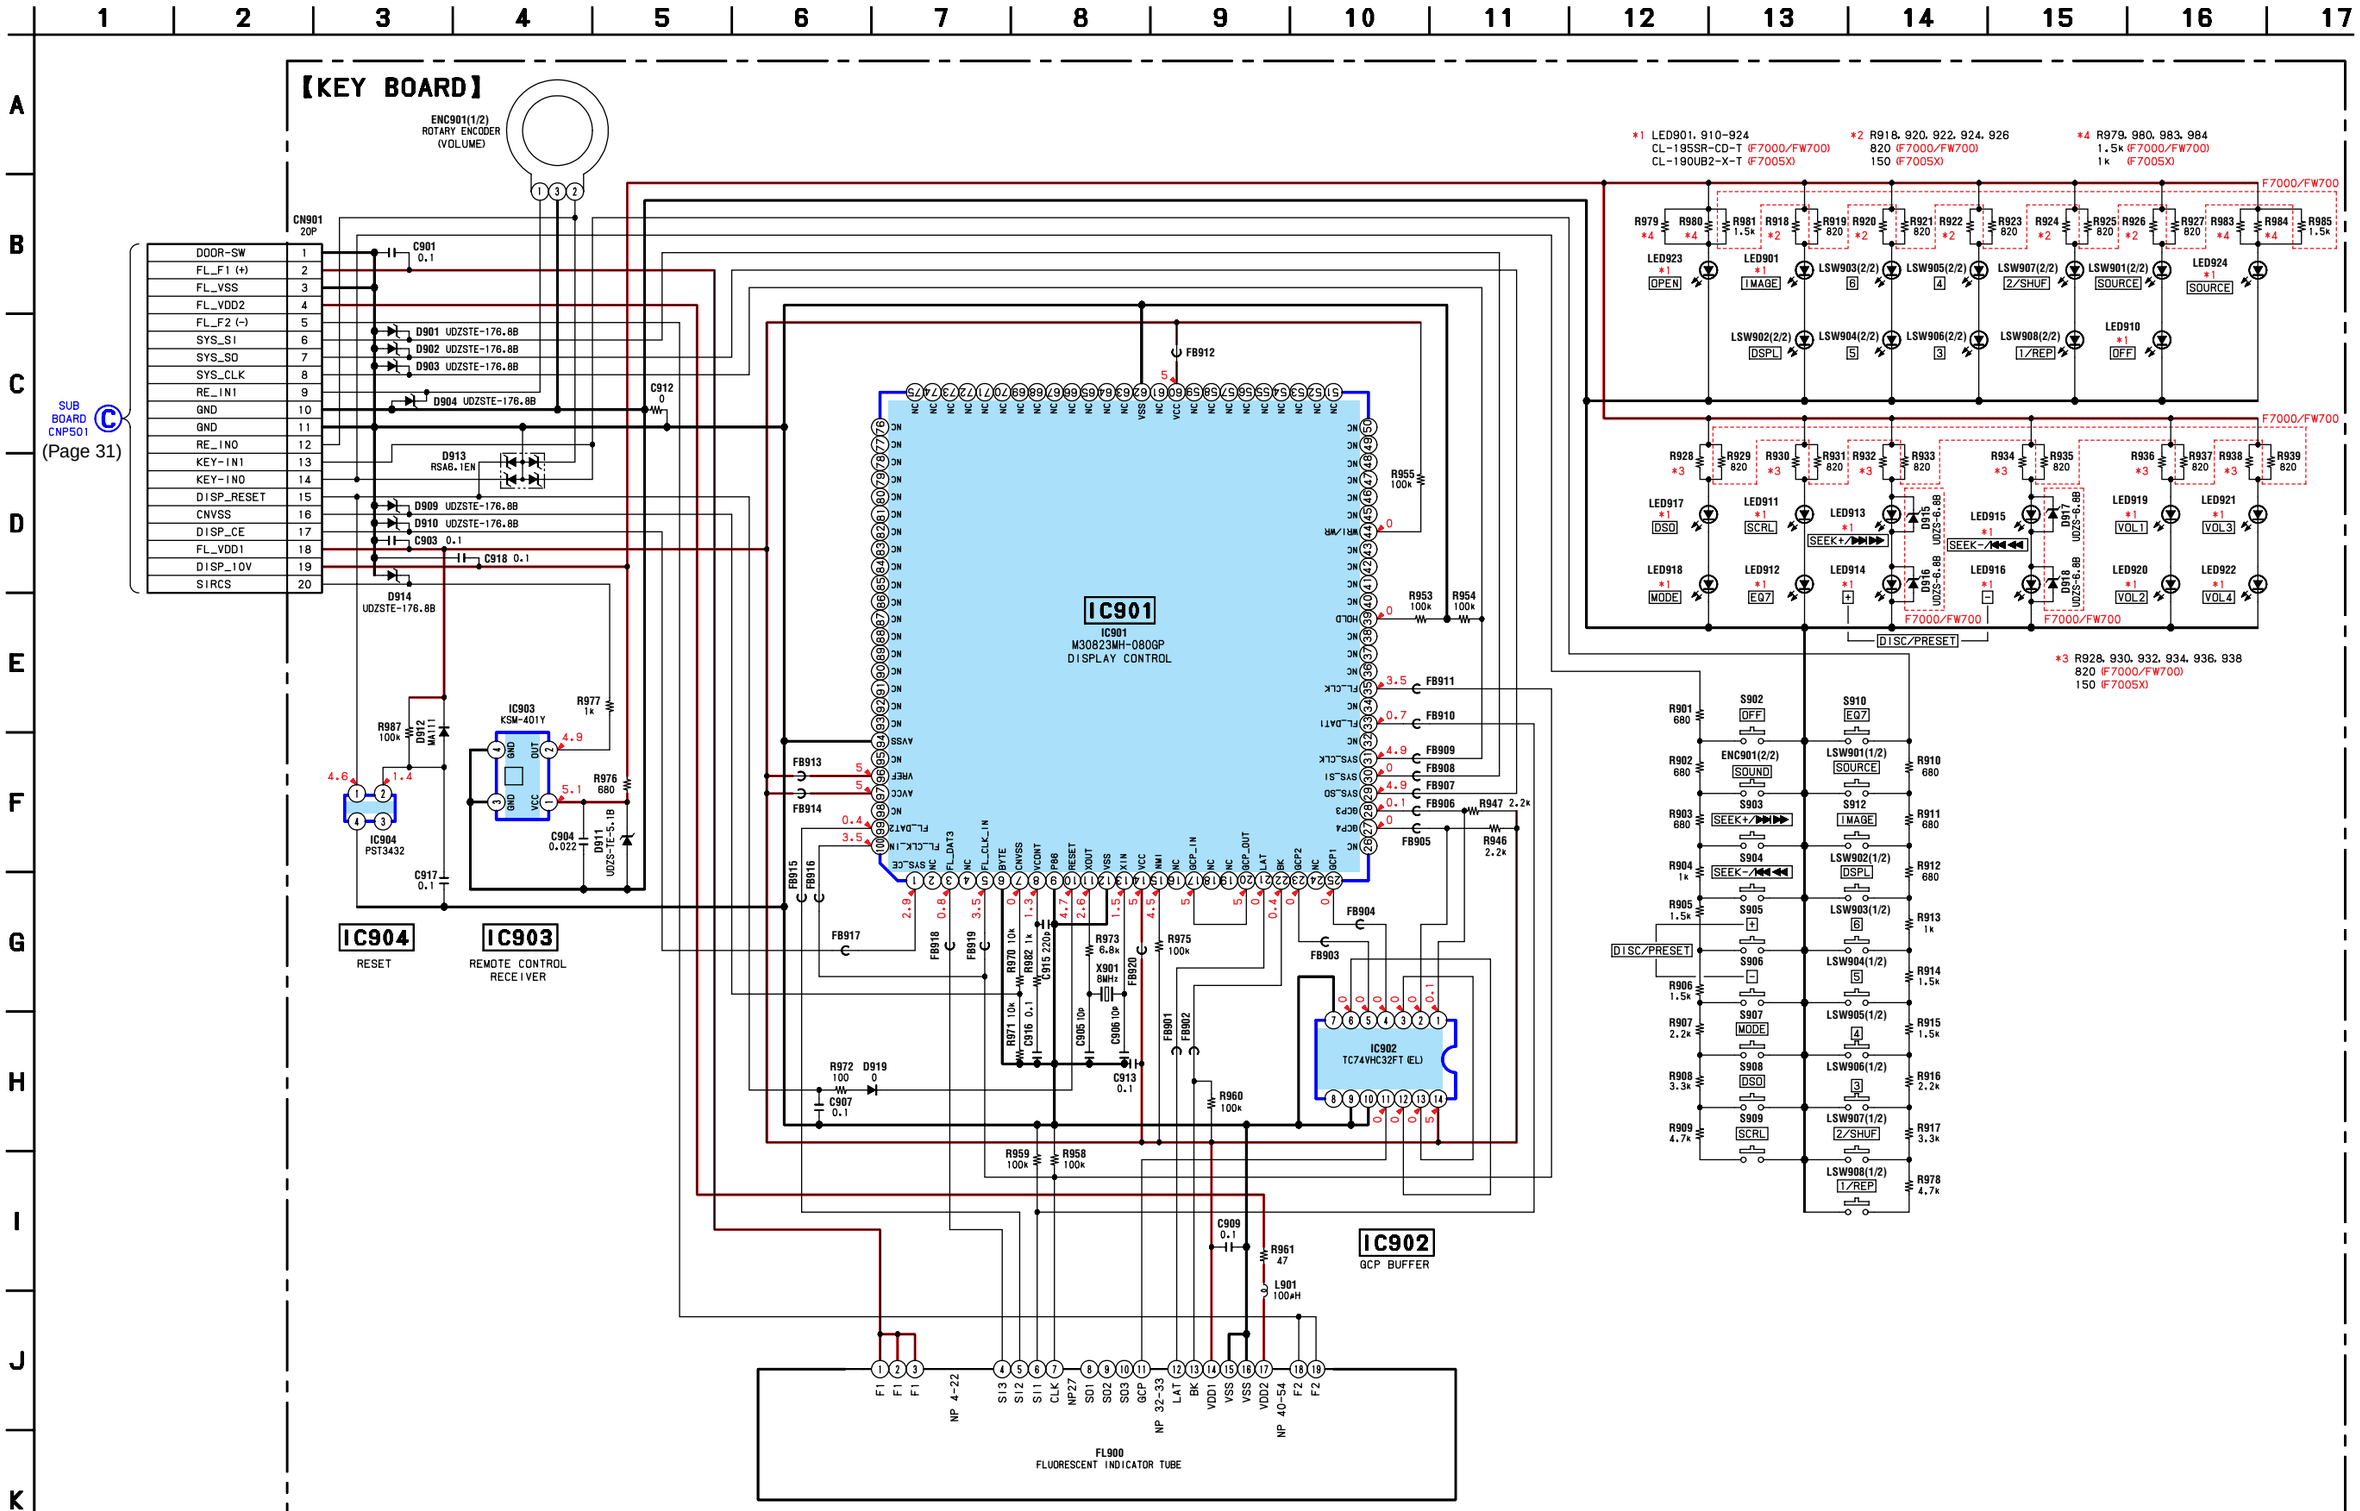

3-18. IC BLOCK DIAGRAMS

IC2 BA5966FP-FE2 (SERVO Board)

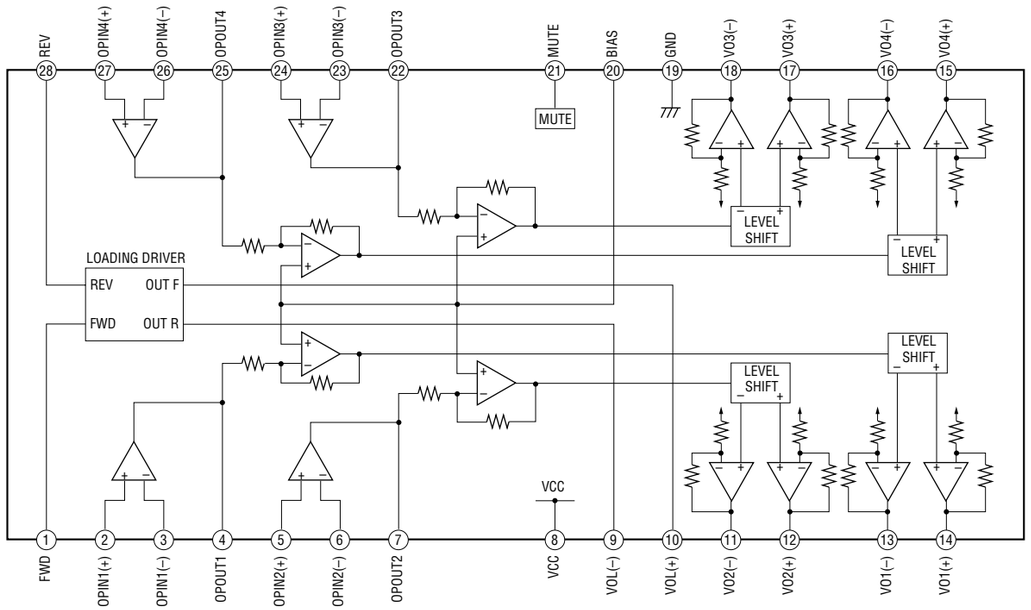

IC401 TDA7416 (MAIN Board (1/3))

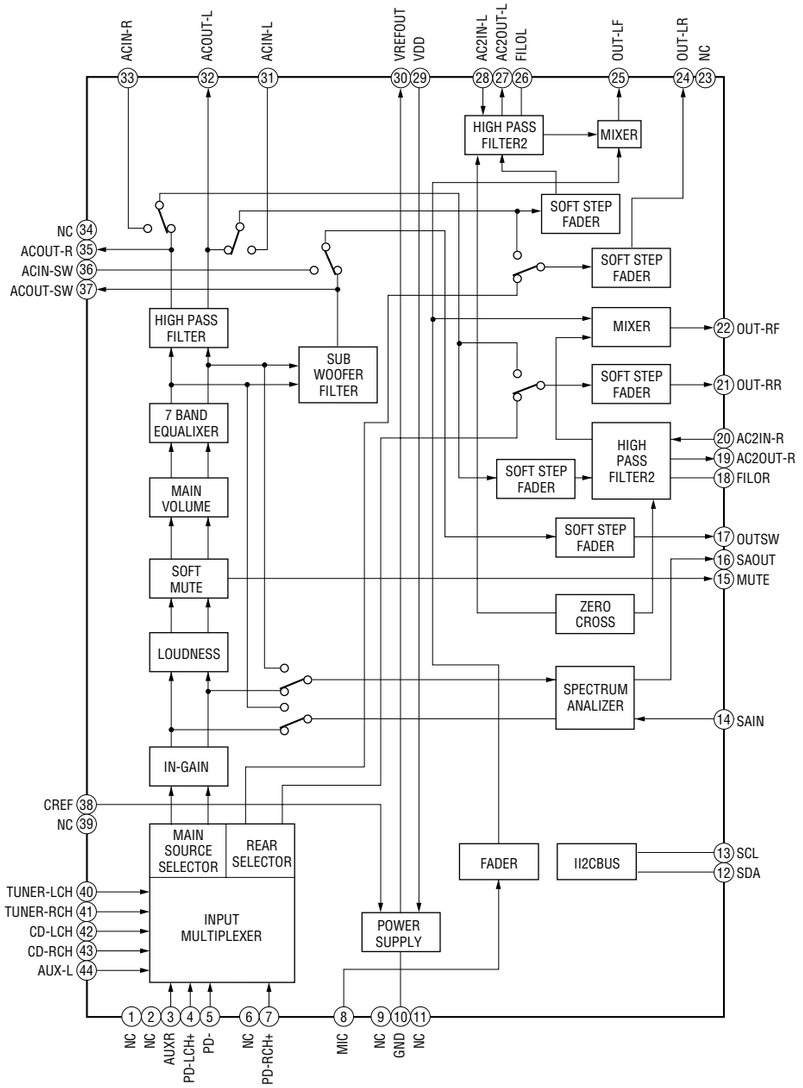

IC620 NJM2377M(TE2) (MAIN Board (2/3))

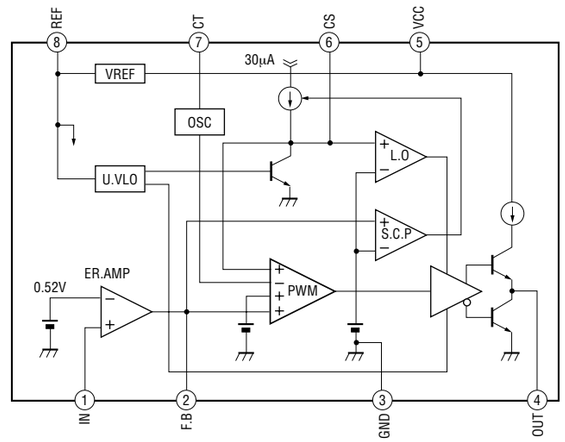

IC201 TDA8588AJ/N2 (MAIN Board (2/3))

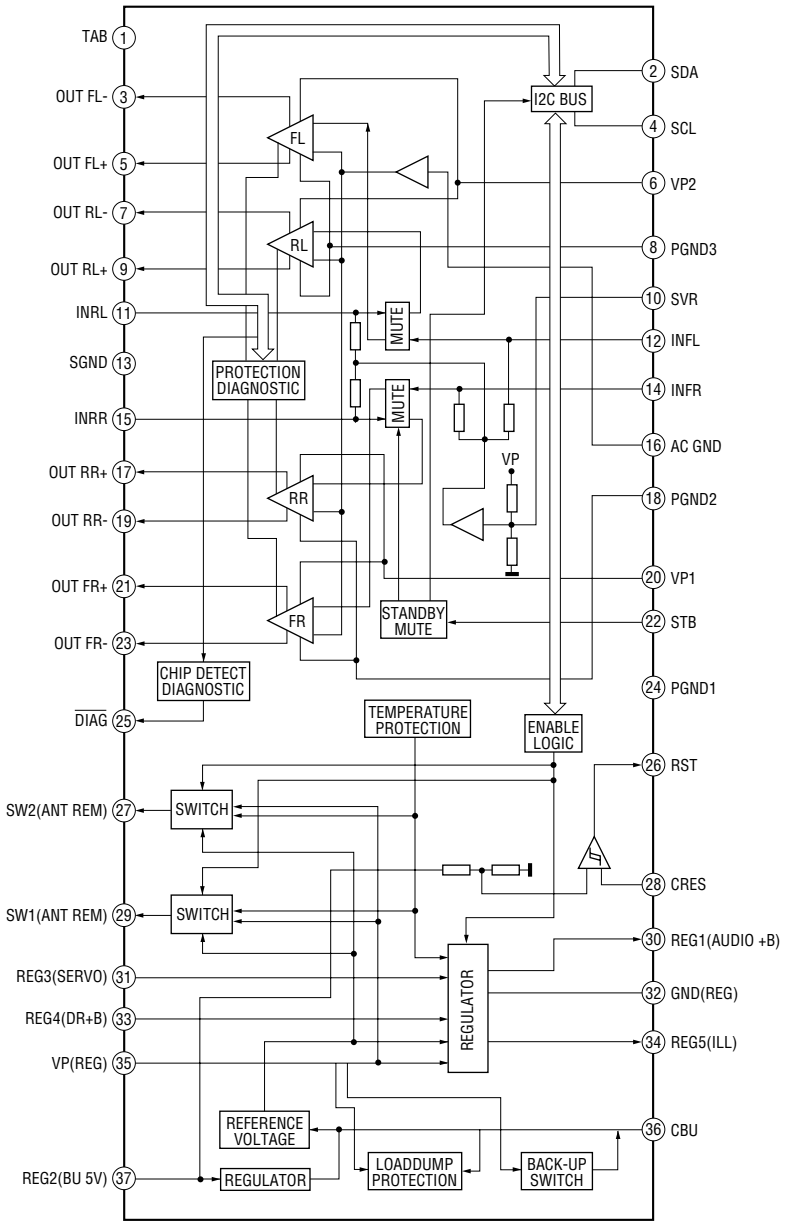

IC110 MM1175XFF (MAIN Board (3/3))

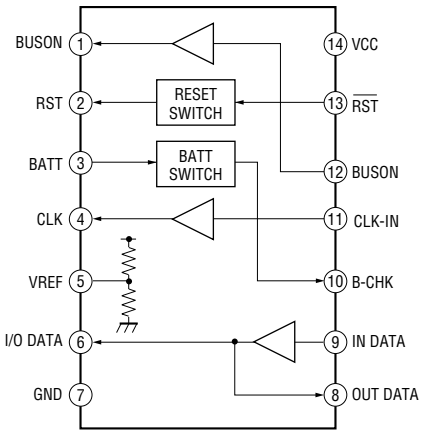

SECTION 4
EXPLODED VIEWS

NOTE:
- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- -XX and -X mean standardized parts, so they may have some difference from the original one.

- Color Indication of Appearance Parts
  Example :
  KNOB, BALANCE (WHITE) ... (RED)
  ↑ Parts Color ↑ Cabinet's Color
- Accessories are given in the last of this parts list.
- Abbreviation
  CND : Canadian model

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une piéce portant le numéro spécifié.

4-1. MAIN SECTION

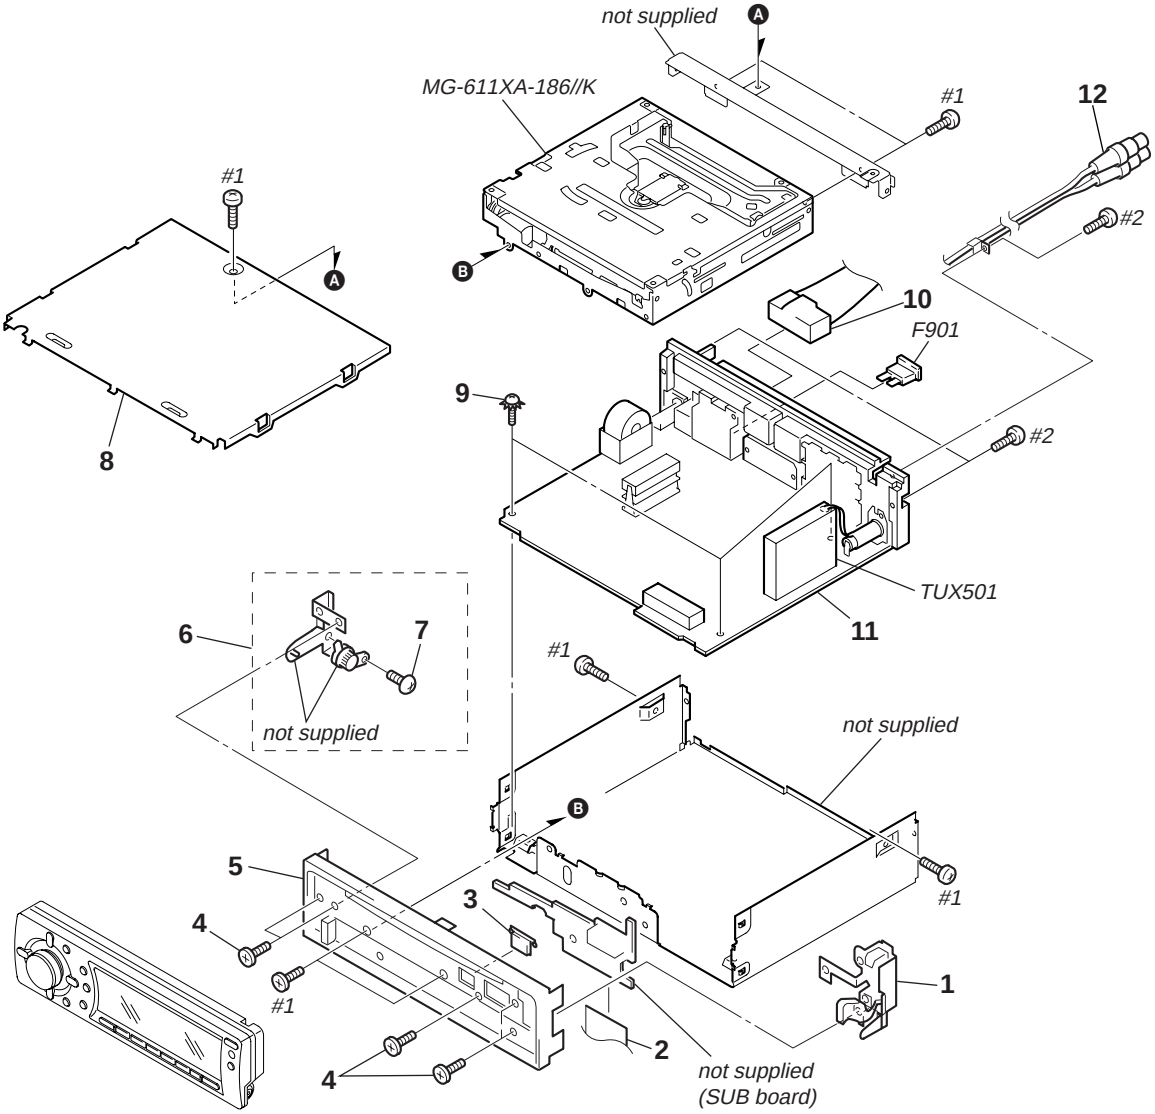

Ref. No.	Part No.	Description	Remark
1	X-3384-273-1	LOCK ASSY	
2	1-828-511-11	CABLE, FLAT (FFC) 22P	
3	3-246-030-01	BUTTON (EJECT)	
4	3-261-903-01	SCREW (+BTT 2X5)	
5	X-3384-490-1	PANEL ASSY (CD), SUB	
6	X-3384-271-1	GEAR ASSY	
7	3-713-786-51	SCREW +P 2X3	
* 8	3-246-006-31	COVER	

Ref. No.	Part No.	Description	Remark
9	3-376-464-11	SCREW (+PTT 2.6X6), GROUND POINT	
10	1-776-207-72	CORD (WITH CONNECTOR) (POWER)	
11	A-3283-429-A	MAIN BOARD, COMPLETE	
12	1-790-375-12	CORD (WITH CONNECTOR) (SUB OUT (MONO))	
F901	1-532-877-11	FUSE (BLADE TYPE) (AUTO FUSE) 10A	
TUX501	A-3220-959-A	TUNER UNIT (TUX-032)	
#1	7-685-792-09	SCREW +PTT 2.6X6 (S)	
#2	7-685-793-09	SCREW +PTT 2.6X8 (S)	

4-2. FRONT PANEL SECTION

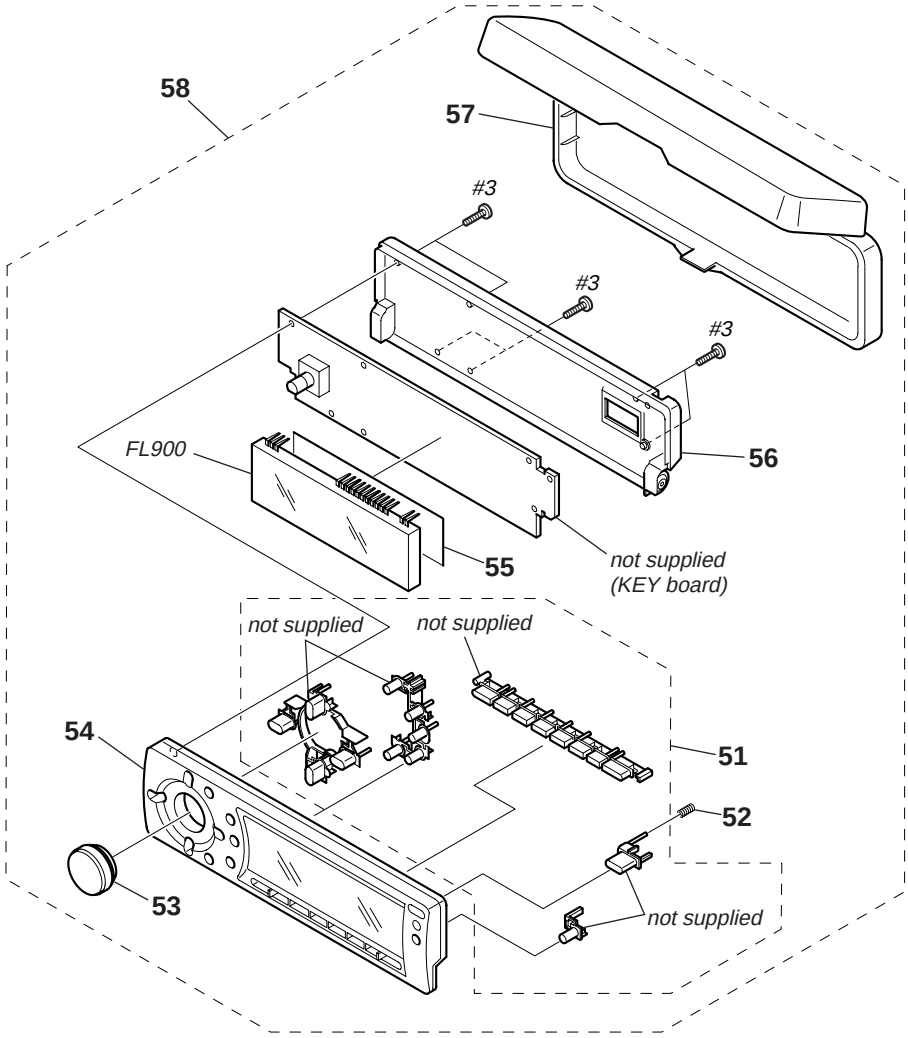

Ref. No.	Part No.	Description	Remark
51	X-3384-492-1	BUTTON KIT ASSY (S)	
52	3-032-321-01	SPRING (OPEN)	
53	X-3384-635-1	KNOB ASSY (S)	
54	X-3384-491-1	PANEL ASSY (S), FRONT (F7000)	
54	X-3385-020-1	PANEL ASSY (S), FRONT (F7005X)	
54	X-3385-021-1	PANEL ASSY (S), FRONT (FW700)	
55	3-260-341-01	SHEET (FL)	

Ref. No.	Part No.	Description	Remark
56	X-3384-495-1	PANEL ASSY, FRONT BACK	
57	X-3378-390-3	CASE ASSY (for FRONT PANEL)	
58	A-3372-612-A	PANEL COMPLETE ASSY, FRONT (F7000)	
58	A-3372-677-A	PANEL COMPLETE ASSY, FRONT (F7005X)	
58	A-3372-682-A	PANEL COMPLETE ASSY, FRONT (FW700)	
FL900	1-518-953-11	INDICATOR TUBE, FLUORESCENT	
#3	7-685-105-19	SCREW +P 2X8 TYPE2 NON-SLIT	

4-3. CD MECHANISM SECTION (1)
(MG-611XA-186//K)

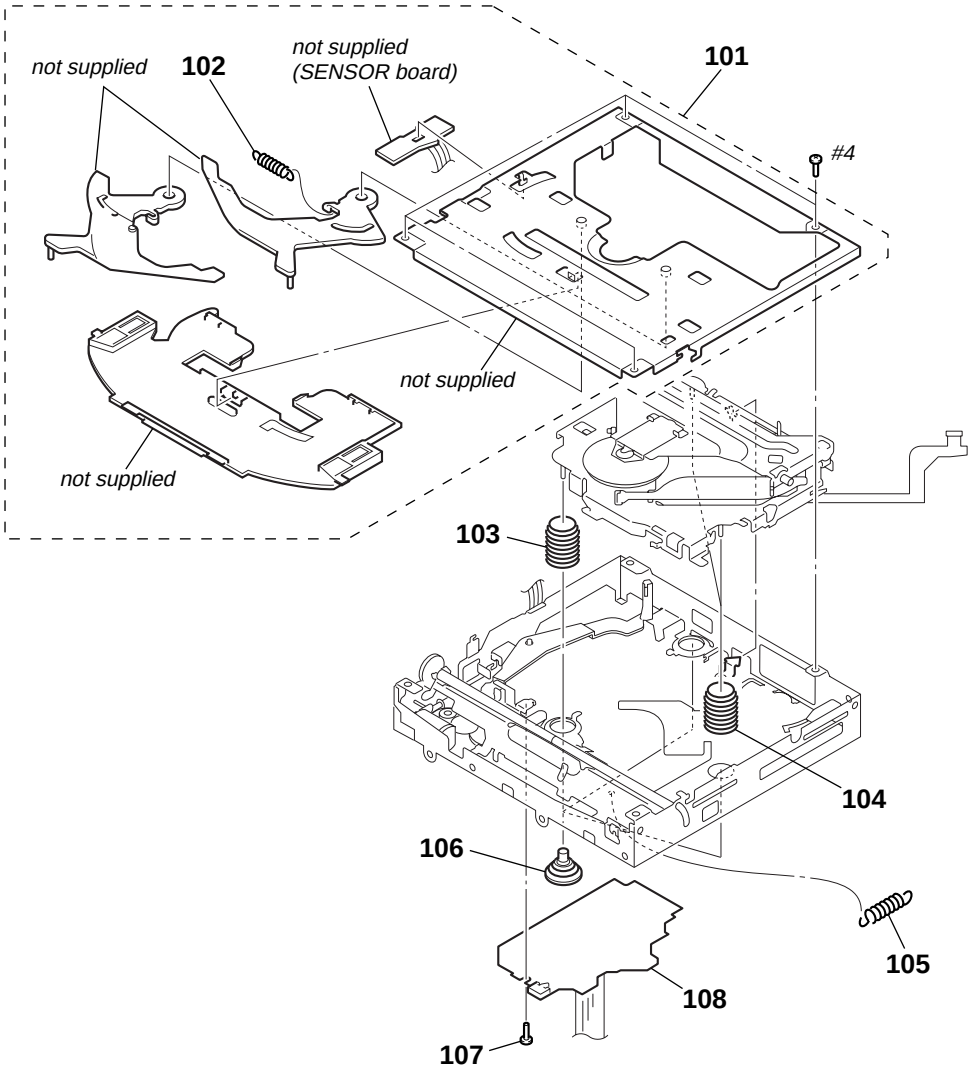

Ref. No.	Part No.	Description	Remark
101	A-3372-455-A	CHASSIS (T) SUB ASSY	
102	3-253-729-01	SPRING (LTR), TENSION COIL	
103	3-253-746-13	SPRING (DAMPER), COMPRESSION	
104	3-253-746-03	SPRING (DAMPER), COMPRESSION	
105	3-253-695-01	SPRING (KF), TENSION COIL	
106	3-253-748-01	DAMPER (S)	
107	3-352-758-31	SCREW (M1.7), TOOTHED LOCK	
108	A-3283-350-A	SERVO BOARD, COMPLETE	
#4	7-627-552-87	SCREW, PRECISION +P 1.7X2.2	

4-4. CD MECHANISM SECTION (2)
(MG-611XA-186//K)

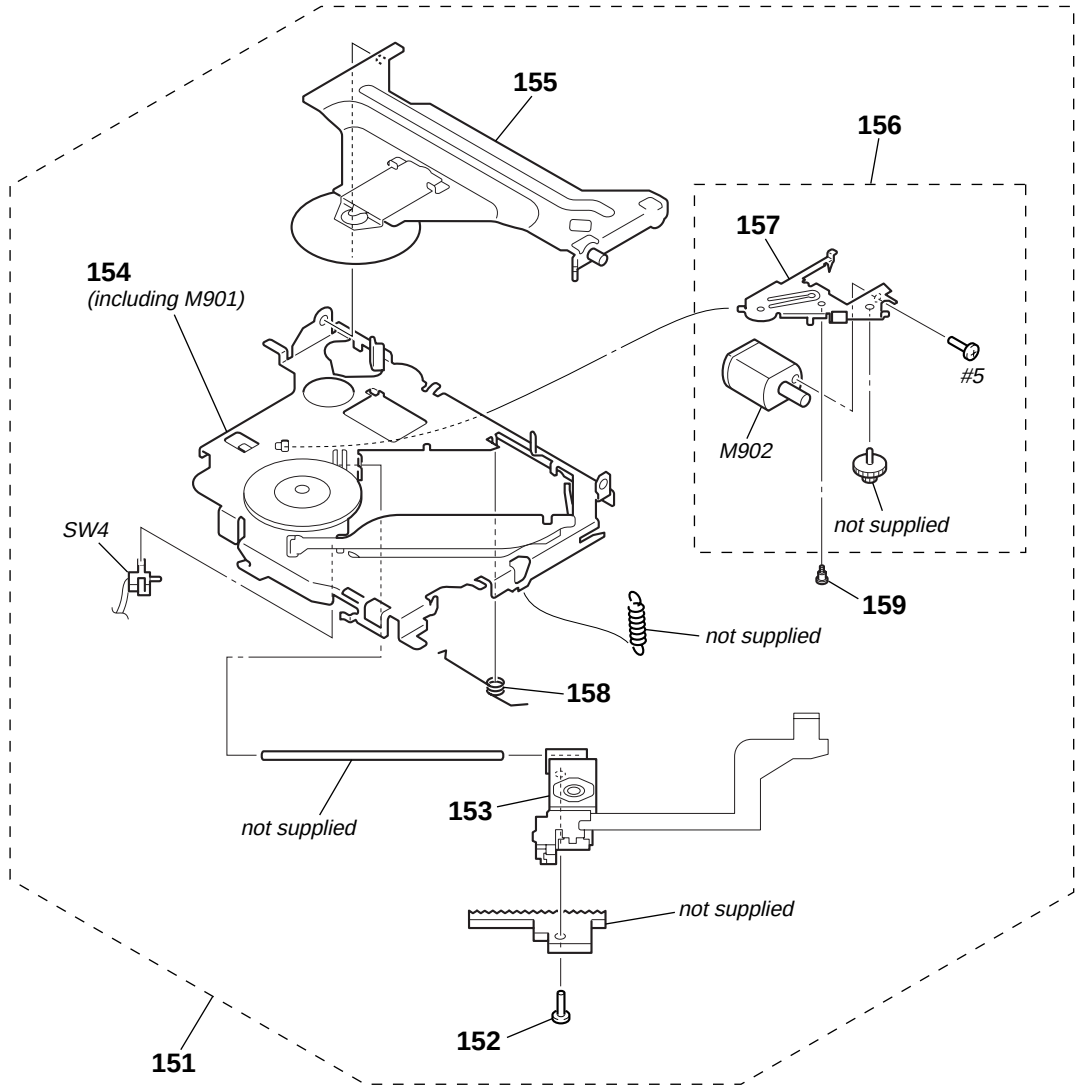

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une piéce portant le numéro spécifié.

Ref. No.	Part No.	Description	Remark
151	A-3337-637-A	CHASSIS (OP) COMPLETE ASSY	
152	3-316-938-91	SCREW (B1.4X5), TAPPING	
⚠153	8-820-207-02	OPTICAL PICK-UP (KSS1000E/K1RP)	
154	A-3337-640-A	CHASSIS (OP) SUB ASSY (including M901)	
155	A-3337-641-A	ARM SUB ASSY, CHUCKING	
156	A-3337-639-A	LEVER (SL) SUB ASSY	

Ref. No.	Part No.	Description	Remark
157	X-3383-454-2	LEVER (SL) ASSY	
158	3-261-959-01	SPRING (SL), TORSION	
159	3-264-165-02	SCREW	
M902	A-3337-638-A	MOTOR ASSY, SL (SLED)	
SW4	1-571-099-11	SWITCH (1 KEY) (LIMIT)	
#5	7-627-850-77	SCREW, PRECISION +P 1.4X1.8	

4-5. CD MECHANISM SECTION (3)
(MG-611XA-186//K)

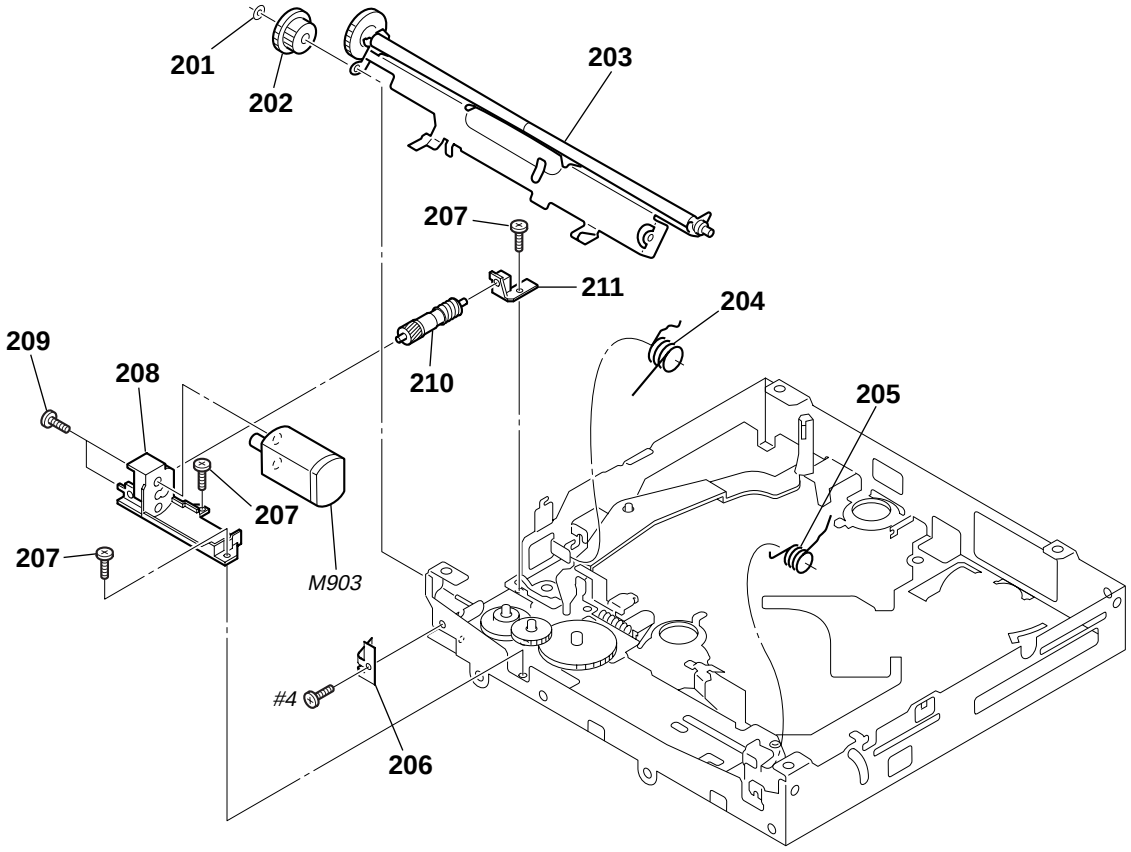

Ref. No.	Part No.	Description	Remark
201	3-262-755-01	WASHER (1.1-2.5)	
202	3-259-024-01	WHEEL (RA), WORM	
203	A-3337-633-A	ARM ASSY, ROLLER	
204	3-259-455-02	SPRING (RAL)	
205	3-253-713-01	SPRING (RAR)	
206	3-259-469-01	SPRING (LE), LEAF	
207	2-134-636-31	SCREW (M1.7X2.5)	
208	3-259-467-01	BRACKET (LEM)	
209	3-345-648-91	SCREW (M1.4), TOOTHED LOCK	
210	A-3372-456-A	WORM (LEB) ASSY	
211	3-259-468-01	BEARING (LEB)	
M903	A-3372-454-A	MOTOR ASSY, LE (LOADING)	
#4	7-627-552-87	SCREW, PRECISION +P 1.7X2.2	

4-6. CD MECHANISM SECTION (4)
(MG-611XA-186//K)

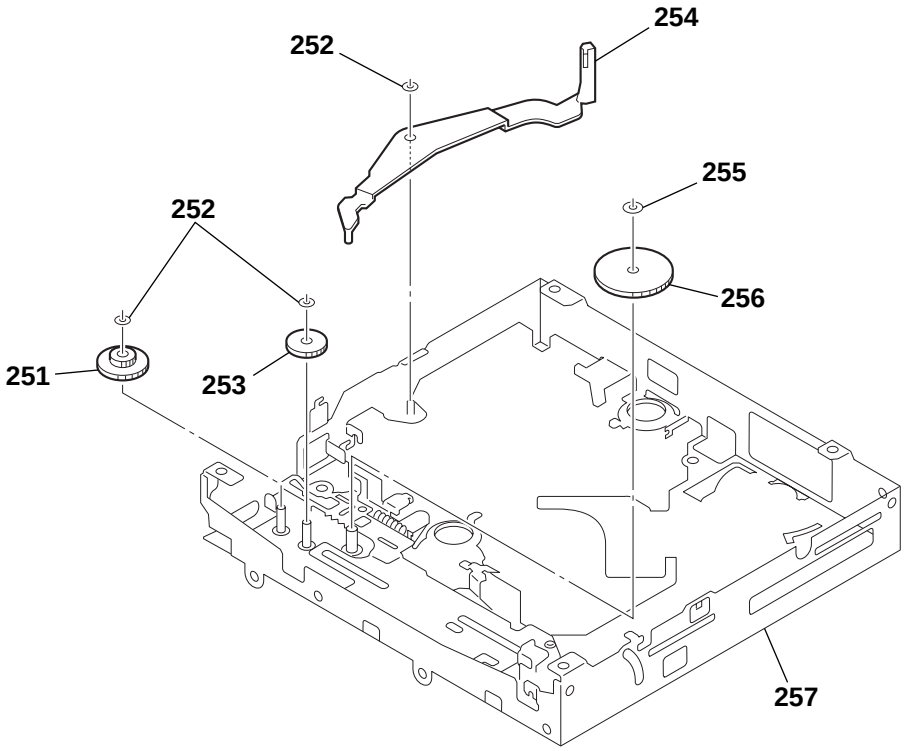

Ref. No.	Part No.	Description	Remark
251	3-259-429-01	WHEEL (LE), WORM	
252	3-344-223-01	WASHER	
253	3-259-470-01	GEAR (LE1)	
254	3-253-755-01	LEVER (D)	
255	3-899-829-01	WASHER (SLIT)	
256	3-259-032-01	GEAR (LE2)	
257	A-3372-453-A	CHASSIS (M) BLOCK ASSY	

KEY

SECTION 5
ELECTRICAL PARTS LIST

NOTE:
- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
  All resistors are in ohms.
  METAL:Metal-film resistor.
  METAL OXIDE: Metal oxide-film resistor.
  F:nonflammable

When indicating parts by reference number, please include the board.

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
  In each case, u : µ, for example:
  uA.. : µA.. uPA.. : µPA..
  uPB.. : µPB.. uPC.. : µPC.. uPD.. : µPD..
- CAPACITORS
  uF : µF
- COILS
  uH : µH
- Abbreviation
  CND : Canadian model

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une piéce portant le numéro spécifié.

Ref. No.	Part No.	Description			Remark
		KEY BOARD			
		**********			
	3-260-341-01	SHEET (FL)			
		< CAPACITOR >			
C901	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C903	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C904	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C905	1-162-915-11	CERAMIC CHIP	10PF	0.25PF	50V
C906	1-162-915-11	CERAMIC CHIP	10PF	0.25PF	50V
C907	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C909	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C912	1-216-864-11	METAL CHIP	0	5%	1/10W
C913	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C915	1-164-230-11	CERAMIC CHIP	220PF	5%	50V
C916	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C917	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C918	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
		< CONNECTOR >			
CN901	1-818-141-11	PLUG, CONNECTOR 20P			
		< DIODE >			
D901	8-719-978-33	DIODE DTZ-TT11-6.8B			
D902	8-719-978-33	DIODE DTZ-TT11-6.8B			
D903	8-719-978-33	DIODE DTZ-TT11-6.8B			
D904	8-719-978-33	DIODE DTZ-TT11-6.8B			
D909	8-719-978-33	DIODE DTZ-TT11-6.8B			
D910	8-719-978-33	DIODE DTZ-TT11-6.8B			
D911	8-719-069-54	DIODE UDZS-TE17-5.1B			
D912	8-719-404-50	DIODE MA111-TX			
D913	6-500-886-01	DIODE RSA6.1ENTR			
D914	8-719-978-33	DIODE DTZ-TT11-6.8B			
D915	8-719-978-33	DIODE DTZ-TT11-6.8B (F7000/FW700)			
D916	8-719-978-33	DIODE DTZ-TT11-6.8B (F7000/FW700)			
D917	8-719-978-33	DIODE DTZ-TT11-6.8B (F7000/FW700)			
D918	8-719-978-33	DIODE DTZ-TT11-6.8B (F7000/FW700)			
D919	1-216-864-11	METAL CHIP	0	5%	1/10W
		< ROTARY ENCODER >			
ENC901	1-478-474-11	ENCODER, ROTARY (VOLUME/PUSH SOUND)			

Ref. No.	Part No.	Description	Remark
		< FERRITE BEAD >	
FB901	1-414-760-21	INDUCTOR, FERRITE BEAD	
FB902	1-414-760-21	INDUCTOR, FERRITE BEAD	
FB903	1-414-760-21	INDUCTOR, FERRITE BEAD	
FB904	1-414-760-21	INDUCTOR, FERRITE BEAD	
FB905	1-414-760-21	INDUCTOR, FERRITE BEAD	
FB906	1-414-760-21	INDUCTOR, FERRITE BEAD	
FB907	1-414-760-21	INDUCTOR, FERRITE BEAD	
FB908	1-414-760-21	INDUCTOR, FERRITE BEAD	
FB909	1-414-760-21	INDUCTOR, FERRITE BEAD	
FB910	1-414-760-21	INDUCTOR, FERRITE BEAD	
FB911	1-414-760-21	INDUCTOR, FERRITE BEAD	
FB912	1-414-760-21	INDUCTOR, FERRITE BEAD	
FB913	1-414-760-21	INDUCTOR, FERRITE BEAD	
FB914	1-414-760-21	INDUCTOR, FERRITE BEAD	
FB915	1-414-760-21	INDUCTOR, FERRITE BEAD	
FB916	1-414-760-21	INDUCTOR, FERRITE BEAD	
FB917	1-414-760-21	INDUCTOR, FERRITE BEAD	
FB918	1-414-760-21	INDUCTOR, FERRITE BEAD	
FB919	1-414-760-21	INDUCTOR, FERRITE BEAD	
FB920	1-414-760-21	INDUCTOR, FERRITE BEAD	
		< FLUORESCENT INDICATOR >	
FL900	1-518-953-11	INDICATOR TUBE, FLUORESCENT	
		< IC >	
IC901	6-803-991-01	IC M30823MH-080GP	
IC902	8-759-523-94	IC TC74VHC32FT(EL)	
IC903	6-600-321-01	IC KSM-401Y (IR)	
IC904	8-759-658-25	IC PST3432UL	
		< COIL >	
L901	1-469-847-11	INDUCTOR 100uH	
		< DIODE >	
LED901	6-500-204-01	LED CL-190UB2-X-T (IMAGE) (F7005X)	
LED901	6-500-450-01	LED CL-195SR-CD-T (IMAGE) (F7000/FW700)	
LED910	6-500-204-01	LED CL-190UB2-X-T (OFF) (F7005X)	
LED910	6-500-450-01	LED CL-195SR-CD-T (OFF) (F7000/FW700)	
LED911	6-500-204-01	LED CL-190UB2-X-T (SCRL) (F7005X)	
LED911	6-500-450-01	LED CL-195SR-CD-T (SCRL) (F7000/FW700)	
LED912	6-500-204-01	LED CL-190UB2-X-T (EQ7) (F7005X)	
LED912	6-500-450-01	LED CL-195SR-CD-T (EQ7) (F7000/FW700)	

Ref. No.	Part No.	Description	Remark
LED913	6-500-204-01	LED CL-190UB2-X-T (SEEK +/▶▶I/▶▶)	(F7005X)
LED913	6-500-450-01	LED CL-195SR-CD-T (SEEK +/▶▶I/▶▶)	(F7000/FW700)
LED914	6-500-204-01	LED CL-190UB2-X-T (DISC/PRESET +)	(F7005X)
LED914	6-500-450-01	LED CL-195SR-CD-T (DISC/PRESET +)	(F7000/FW700)
LED915	6-500-204-01	LED CL-190UB2-X-T (SEEK –/I◀◀/◀◀)	(F7005X)
LED915	6-500-450-01	LED CL-195SR-CD-T (SEEK –/I◀◀/◀◀)	(F7000/FW700)
LED916	6-500-204-01	LED CL-190UB2-X-T (DISC/PRESET –)	(F7005X)
LED916	6-500-450-01	LED CL-195SR-CD-T (DISC/PRESET –)	(F7000/FW700)
LED917	6-500-204-01	LED CL-190UB2-X-T (DSO) (F7005X)	
LED917	6-500-450-01	LED CL-195SR-CD-T (DSO) (F7000/FW700)	
LED918	6-500-204-01	LED CL-190UB2-X-T (MODE) (F7005X)	
LED918	6-500-450-01	LED CL-195SR-CD-T (MODE) (F7000/FW700)	
LED919	6-500-204-01	LED CL-190UB2-X-T (VOL1) (F7005X)	
LED919	6-500-450-01	LED CL-195SR-CD-T (VOL1) (F7000/FW700)	
LED920	6-500-204-01	LED CL-190UB2-X-T (VOL2) (F7005X)	
LED920	6-500-450-01	LED CL-195SR-CD-T (VOL2) (F7000/FW700)	
LED921	6-500-204-01	LED CL-190UB2-X-T (VOL3) (F7005X)	
LED921	6-500-450-01	LED CL-195SR-CD-T (VOL3) (F7000/FW700)	
LED922	6-500-204-01	LED CL-190UB2-X-T (VOL4) (F7005X)	
LED922	6-500-450-01	LED CL-195SR-CD-T (VOL4) (F7000/FW700)	
LED923	6-500-204-01	LED CL-190UB2-X-T (OPEN) (F7005X)	
LED923	6-500-450-01	LED CL-195SR-CD-T (OPEN) (F7000/FW700)	
LED924	6-500-204-01	LED CL-190UB2-X-T (SOURCE) (F7005X)	
LED924	6-500-450-01	LED CL-195SR-CD-T (SOURCE)	(F7000/FW700)
		< SWITCH >	
LSW901	1-771-883-31	SWITCH, TACTILE (WITH LED) (SOURCE)	(F7000/FW700)
LSW901	1-786-711-31	SWITCH, TACTILE (WITH LED) (SOURCE)	(F7005X)
LSW902	1-771-883-31	SWITCH, TACTILE (WITH LED) (DSPL)	(F7000/FW700)
LSW902	1-786-711-31	SWITCH, TACTILE (WITH LED) (DSPL)	(F7005X)
LSW903	1-771-883-31	SWITCH, TACTILE (WITH LED) (6)	(F7000/FW700)
LSW903	1-786-711-31	SWITCH, TACTILE (WITH LED) (6) (F7005X)	
LSW904	1-771-883-31	SWITCH, TACTILE (WITH LED) (5)	(F7000/FW700)
LSW904	1-786-711-31	SWITCH, TACTILE (WITH LED) (5) (F7005X)	
LSW905	1-771-883-31	SWITCH, TACTILE (WITH LED) (4)	(F7000/FW700)
LSW905	1-786-711-31	SWITCH, TACTILE (WITH LED) (4) (F7005X)	
LSW906	1-771-883-31	SWITCH, TACTILE (WITH LED) (3)	(F7000/FW700)
LSW906	1-786-711-31	SWITCH, TACTILE (WITH LED) (3) (F7005X)	
LSW907	1-771-883-31	SWITCH, TACTILE (WITH LED) (2/SHUF)	(F7000/FW700)
LSW907	1-786-711-31	SWITCH, TACTILE (WITH LED) (2/SHUF)	(F7005X)
LSW908	1-771-883-31	SWITCH, TACTILE (WITH LED) (1/REP)	(F7000/FW700)
LSW908	1-786-711-31	SWITCH, TACTILE (WITH LED) (1/REP)	(F7005X)
		< RESISTOR >	
R901	1-219-286-11	RES-CHIP 680 2%	1/16W
R902	1-219-286-11	RES-CHIP 680 2%	1/16W
R903	1-219-286-11	RES-CHIP 680 2%	1/16W
R904	1-218-847-11	RES-CHIP 1K 2%	1/16W
R905	1-218-851-11	RES-CHIP 1.5K 2%	1/16W
R906	1-218-851-11	RES-CHIP 1.5K 2%	1/16W
R907	1-218-855-11	RES-CHIP 2.2K 2%	1/16W
R908	1-218-859-11	RES-CHIP 3.3K 2%	1/16W
R909	1-218-863-11	RES-CHIP 4.7K 2%	1/16W
R910	1-219-286-11	RES-CHIP 680 2%	1/16W
R911	1-219-286-11	RES-CHIP 680 2%	1/16W
R912	1-219-286-11	RES-CHIP 680 2%	1/16W
R913	1-218-847-11	RES-CHIP 1K 2%	1/16W
R914	1-218-851-11	RES-CHIP 1.5K 2%	1/16W
R915	1-218-851-11	RES-CHIP 1.5K 2%	1/16W
R916	1-218-855-11	RES-CHIP 2.2K 2%	1/16W
R917	1-218-859-11	RES-CHIP 3.3K 2%	1/16W
R918	1-216-811-11	METAL CHIP 150 5%	1/10W (F7005X)
R918	1-216-820-11	METAL CHIP 820 5%	1/10W (F7000/FW700)
R919	1-216-820-11	METAL CHIP 820 5%	1/10W (F7000/FW700)
R920	1-216-811-11	METAL CHIP 150 5%	1/10W (F7005X)
R920	1-216-820-11	METAL CHIP 820 5%	1/10W (F7000/FW700)
R921	1-216-820-11	METAL CHIP 820 5%	1/10W (F7000/FW700)
R922	1-216-811-11	METAL CHIP 150 5%	1/10W (F7005X)
R922	1-216-820-11	METAL CHIP 820 5%	1/10W (F7000/FW700)
R923	1-216-820-11	METAL CHIP 820 5%	1/10W (F7000/FW700)
R924	1-216-811-11	METAL CHIP 150 5%	1/10W (F7005X)
R924	1-216-820-11	METAL CHIP 820 5%	1/10W (F7000/FW700)
R925	1-216-820-11	METAL CHIP 820 5%	1/10W (F7000/FW700)
R926	1-216-811-11	METAL CHIP 150 5%	1/10W (F7005X)
R926	1-216-820-11	METAL CHIP 820 5%	1/10W (F7000/FW700)
R927	1-216-820-11	METAL CHIP 820 5%	1/10W (F7000/FW700)
R928	1-216-811-11	METAL CHIP 150 5%	1/10W (F7005X)
R928	1-216-820-11	METAL CHIP 820 5%	1/10W (F7000/FW700)
R929	1-216-820-11	METAL CHIP 820 5%	1/10W (F7000/FW700)
R930	1-216-811-11	METAL CHIP 150 5%	1/10W (F7005X)
R930	1-216-820-11	METAL CHIP 820 5%	1/10W (F7000/FW700)

KEY **MAIN**

Ref. No.	Part No.	Description			Remark
R931	1-216-820-11	METAL CHIP	820	5%	1/10W (F7000/FW700)
R932	1-216-811-11	METAL CHIP	150	5%	1/10W (F7005X)
R932	1-216-820-11	METAL CHIP	820	5%	1/10W (F7000/FW700)
R933	1-216-820-11	METAL CHIP	820	5%	1/10W (F7000/FW700)
R934	1-216-811-11	METAL CHIP	150	5%	1/10W (F7005X)
R934	1-216-820-11	METAL CHIP	820	5%	1/10W (F7000/FW700)
R935	1-216-820-11	METAL CHIP	820	5%	1/10W (F7000/FW700)
R936	1-216-811-11	METAL CHIP	150	5%	1/10W (F7005X)
R936	1-216-820-11	METAL CHIP	820	5%	1/10W (F7000/FW700)
R937	1-216-820-11	METAL CHIP	820	5%	1/10W (F7000/FW700)
R938	1-216-811-11	METAL CHIP	150	5%	1/10W (F7005X)
R938	1-216-820-11	METAL CHIP	820	5%	1/10W (F7000/FW700)
R939	1-216-820-11	METAL CHIP	820	5%	1/10W (F7000/FW700)
R946	1-218-855-11	RES-CHIP	2.2K	2%	1/16W
R947	1-218-855-11	RES-CHIP	2.2K	2%	1/16W
R953	1-216-845-11	METAL CHIP	100K	5%	1/10W
R954	1-216-845-11	METAL CHIP	100K	5%	1/10W
R955	1-216-845-11	METAL CHIP	100K	5%	1/10W
R958	1-216-845-11	METAL CHIP	100K	5%	1/10W
R959	1-216-845-11	METAL CHIP	100K	5%	1/10W
R960	1-216-845-11	METAL CHIP	100K	5%	1/10W
R961	1-216-017-11	RES-CHIP	47	5%	1/10W
R970	1-216-833-11	METAL CHIP	10K	5%	1/10W
R971	1-216-833-11	METAL CHIP	10K	5%	1/10W
R972	1-216-809-11	METAL CHIP	100	5%	1/10W
R973	1-216-831-11	METAL CHIP	6.8K	5%	1/10W
R975	1-216-845-11	METAL CHIP	100K	5%	1/10W
R976	1-216-819-11	METAL CHIP	680	5%	1/10W
R977	1-216-821-11	METAL CHIP	1K	5%	1/10W
R978	1-218-863-11	RES-CHIP	4.7K	2%	1/16W
R979	1-216-821-11	METAL CHIP	1K	5%	1/10W (F7005X)
R979	1-216-823-11	METAL CHIP	1.5K	5%	1/10W (F7000/FW700)
R980	1-216-821-11	METAL CHIP	1K	5%	1/10W (F7005X)
R980	1-216-823-11	METAL CHIP	1.5K	5%	1/10W (F7000/FW700)
R981	1-216-823-11	METAL CHIP	1.5K	5%	1/10W (F7000/FW700)
R982	1-216-821-11	METAL CHIP	1K	5%	1/10W
R983	1-216-821-11	METAL CHIP	1K	5%	1/10W (F7005X)
R983	1-216-823-11	METAL CHIP	1.5K	5%	1/10W (F7000/FW700)
R984	1-216-821-11	METAL CHIP	1K	5%	1/10W (F7005X)
R984	1-216-823-11	METAL CHIP	1.5K	5%	1/10W (F7000/FW700)
R985	1-216-823-11	METAL CHIP	1.5K	5%	1/10W (F7000/FW700)
R987	1-216-845-11	METAL CHIP	100K	5%	1/10W
		< SWITCH >			
S902	1-771-884-31	SWITCH, TACTILE (OFF)			
S903	1-771-884-31	SWITCH, TACTILE (SEEK +/▶▶I/▶▶)			
S904	1-771-884-31	SWITCH, TACTILE (SEEK –/I◀◀/◀◀)			
S905	1-771-884-31	SWITCH, TACTILE (DISC/PRESET +)			
S906	1-771-884-31	SWITCH, TACTILE (DISC/PRESET –)			
S907	1-771-884-31	SWITCH, TACTILE (MODE)			
S908	1-771-884-31	SWITCH, TACTILE (DSO)			
S909	1-771-884-31	SWITCH, TACTILE (SCRL)			
S910	1-771-884-31	SWITCH, TACTILE (EQ7)			
S912	1-771-884-31	SWITCH, TACTILE (IMAGE)			
		< VIBRATOR >			
X901	1-813-250-11	VIBRATOR, CRYSTAL (8MHz)			
**********					
	A-3283-429-A	MAIN BOARD, COMPLETE			
		**********			
		< CAPACITOR >			
C101	1-126-940-11	ELECT	330uF	20%	16V
C102	1-126-960-11	ELECT	1uF	20%	50V
C103	1-131-868-81	ELECT	3300uF	20%	16V
C106	1-115-340-11	CERAMIC CHIP	0.22uF	10%	25V
C110	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C111	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C142	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C173	1-124-721-85	ELECT	10uF	20%	50V
C178	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C183	1-124-721-85	ELECT	10uF	20%	50V
C188	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C199	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C201	1-115-467-11	CERAMIC CHIP	0.22uF	10%	10V
C202	1-162-923-11	CERAMIC CHIP	47PF	5%	50V
C203	1-126-961-11	ELECT	2.2uF	20%	50V
C204	1-124-695-85	ELECT	22uF	20%	25V
C205	1-115-340-11	CERAMIC CHIP	0.22uF	10%	25V
C206	1-125-891-11	CERAMIC CHIP	0.47uF	10%	10V
C207	1-125-891-11	CERAMIC CHIP	0.47uF	10%	10V
C208	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C209	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C210	1-115-340-11	CERAMIC CHIP	0.22uF	10%	25V
C211	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C212	1-126-964-11	ELECT	10uF	20%	50V
C214	1-126-964-11	ELECT	10uF	20%	50V
C215	1-115-340-11	CERAMIC CHIP	0.22uF	10%	25V
C216	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C217	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C218	1-125-891-11	CERAMIC CHIP	0.47uF	10%	10V
C219	1-125-891-11	CERAMIC CHIP	0.47uF	10%	10V
C221	1-126-964-11	ELECT	10uF	20%	50V
C223	1-126-964-11	ELECT	10uF	20%	50V
C225	1-165-908-11	CERAMIC CHIP	1uF	10%	10V
C226	1-126-964-11	ELECT	10uF	20%	50V
C227	1-115-340-11	CERAMIC CHIP	0.22uF	10%	25V

Ref. No.	Part No.	Description			Remark
C242	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C273	1-124-721-85	ELECT	10uF	20%	50V
C278	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C283	1-124-721-85	ELECT	10uF	20%	50V
C288	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C303	1-126-933-11	ELECT	100uF	20%	16V
C304	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C306	1-126-933-11	ELECT	100uF	20%	16V
C307	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C308	1-124-717-85	ELECT	1uF	20%	50V
C309	1-124-717-85	ELECT	1uF	20%	50V
C311	1-125-710-11	DOUBLE LAYERS	0.1F		5.5V
C312	1-126-933-11	ELECT	100uF	20%	16V
C313	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C315	1-162-919-11	CERAMIC CHIP	22PF	5%	50V
C316	1-162-918-11	CERAMIC CHIP	18PF	5%	50V
C317	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C318	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C319	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C320	1-126-961-11	ELECT	2.2uF	20%	50V
C321	1-126-964-11	ELECT	10uF	20%	50V
C322	1-162-975-11	CERAMIC CHIP	24PF	5%	50V
C323	1-162-975-11	CERAMIC CHIP	24PF	5%	50V
C330	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C332	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C333	1-126-933-11	ELECT	100uF	20%	16V
C334	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C335	1-126-933-11	ELECT	100uF	20%	16V
C336	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C341	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C342	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C401	1-126-947-11	ELECT	47uF	20%	16V
C403	1-125-891-11	CERAMIC CHIP	0.47uF	10%	10V
C416	1-125-837-11	CERAMIC CHIP	1uF	10%	6.3V
C417	1-125-837-11	CERAMIC CHIP	1uF	10%	6.3V
C418	1-124-721-85	ELECT	10uF	20%	50V
C419	1-126-959-11	ELECT	0.47uF	20%	50V
C420	1-126-959-11	ELECT	0.47uF	20%	50V
C421	1-125-837-11	CERAMIC CHIP	1uF	10%	6.3V
C422	1-124-673-85	ELECT	100uF	20%	10V
C423	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C424	1-162-965-11	CERAMIC CHIP	0.0015uF	10%	50V
C425	1-136-154-00	FILM	0.012uF	5%	50V
C426	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C427	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C428	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C429	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C430	1-162-965-11	CERAMIC CHIP	0.0015uF	10%	50V
C431	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C432	1-136-154-00	FILM	0.012uF	5%	50V
C433	1-126-960-11	ELECT	1uF	20%	50V
C434	1-126-960-11	ELECT	1uF	20%	50V
C435	1-126-960-11	ELECT	1uF	20%	50V
C442	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C443	1-126-964-11	ELECT	10uF	20%	50V
C501	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C502	1-126-964-11	ELECT	10uF	20%	50V
C507	1-126-933-11	ELECT	100uF	20%	16V
C508	1-125-837-11	CERAMIC CHIP	1uF	10%	6.3V
C509	1-125-837-11	CERAMIC CHIP	1uF	10%	6.3V
C510	1-135-834-11	CERAMIC CHIP	2.2uF		6.3V
C511	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C620	1-104-665-11	ELECT	100uF	20%	10V
C621	1-128-552-11	ELECT	47uF	20%	63V
C622	1-126-934-11	ELECT	220uF	20%	16V
C623	1-126-964-11	ELECT	10uF	20%	50V
C624	1-164-315-11	CERAMIC CHIP	470PF	5%	50V
C625	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C626	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C627	1-162-923-11	CERAMIC CHIP	47PF	5%	50V
C628	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C629	1-126-933-11	ELECT	100uF	20%	16V
C901	1-126-965-11	ELECT	22uF	20%	50V
C903	1-126-963-11	ELECT	4.7uF	20%	50V
C928	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C930	1-126-965-11	ELECT	22uF	20%	50V

< CONNECTOR >

* CN401	1-506-985-11	PIN, CONNECTOR (PC BOARD) 3P	
CN601	1-569-915-11	SOCKET, CONNECTOR 22P	
CN602	1-779-056-21	PIN, CONNECTOR (PC BOARD) 5P	
CN603	1-779-056-21	PIN, CONNECTOR (PC BOARD) 5P	
CNP101	1-774-701-21	PIN, CONNECTOR 16P	
CNP102	1-580-907-41	PLUG, CONNECTOR (BUS CONTROL IN)	
CNP301	1-817-536-11	CONNECTOR, BOARD TO BOARD 28P	

< JACK >

CNJ101	1-764-270-21	JACK, STEREO MINIATURE (DIA.3.5)	(REMOTE IN)

< DIODE >

D101	8-719-083-66	DIODE	UDZS-TE17-18B
D102	8-719-083-66	DIODE	UDZS-TE17-18B
D103	6-500-540-01	DIODE	RB521S-30FTE61
D104	8-719-069-56	DIODE	UDZS-TE17-6.2B
D105	8-719-083-66	DIODE	UDZS-TE17-18B
D106	8-719-978-33	DIODE	DTZ-TT11-6.8B
D108	8-719-083-66	DIODE	UDZS-TE17-18B
D109	8-719-200-82	DIODE	11ES2
D110	8-719-053-18	DIODE	1SR154-400TE-25
D111	8-719-053-18	DIODE	1SR154-400TE-25
D112	8-719-053-18	DIODE	1SR154-400TE-25
D113	8-719-053-18	DIODE	1SR154-400TE-25
D114	8-719-053-18	DIODE	1SR154-400TE-25
D115	8-719-053-18	DIODE	1SR154-400TE-25
D116	8-719-053-18	DIODE	1SR154-400TE-25
D117	8-719-053-18	DIODE	1SR154-400TE-25
D118	6-500-508-01	DIODE	RR263M-400FTR
D119	6-500-508-01	DIODE	RR263M-400FTR
D120	6-500-508-01	DIODE	RR263M-400FTR
D121	6-500-508-01	DIODE	RR263M-400FTR
D122	8-719-978-33	DIODE	DTZ-TT11-6.8B
D123	8-719-200-82	DIODE	11ES2
D305	8-719-988-61	DIODE	1SS355TE-17
D306	8-719-988-61	DIODE	1SS355TE-17
D401	8-719-404-50	DIODE	MA111-TX

MAIN

Ref. No.	Part No.	Description	Remark
D403	8-719-069-55	DIODE UDZS-TE17-5.6B	
D501	8-719-069-55	DIODE UDZS-TE17-5.6B	
D601	8-719-978-33	DIODE DTZ-TT11-6.8B	
D602	8-719-978-33	DIODE DTZ-TT11-6.8B	
D603	8-719-978-33	DIODE DTZ-TT11-6.8B	
D604	8-719-978-33	DIODE DTZ-TT11-6.8B	
D605	6-500-886-01	DIODE RSA6.1ENTR	
D606	6-500-886-01	DIODE RSA6.1ENTR	
D620	8-719-053-18	DIODE 1SR154-400TE-25	
D621	8-719-053-18	DIODE 1SR154-400TE-25	
D622	8-719-055-33	DIODE D1FL40	
D623	8-719-055-30	DIODE D1FS4A-TA	
D624	8-719-055-30	DIODE D1FS4A-TA	
D625	8-719-083-66	DIODE UDZS-TE17-18B	
D626	8-719-069-54	DIODE UDZS-TE17-5.1B	
D627	6-500-540-01	DIODE RB521S-30FTE61	
D907	8-719-988-61	DIODE 1SS355TE-17	
D909	8-719-988-61	DIODE 1SS355TE-17	
D910	8-719-069-55	DIODE UDZS-TE17-5.6B	
D911	8-719-420-51	DIODE MA729	
		< EMI FILTER >	
FB325	1-414-813-11	FILTER, EMI (SMD)	
FB326	1-414-813-11	FILTER, EMI (SMD)	
FB327	1-414-813-11	FILTER, EMI (SMD)	
FB328	1-414-813-11	FILTER, EMI (SMD)	
		< JUMPER RESISTOR >	
FB329	1-216-295-11	SHORT CHIP 0	
FB330	1-216-295-11	SHORT CHIP 0	
		< FERRITE BEAD >	
FB441	1-414-813-11	FERRITE, EMI (SMD)	
FB442	1-414-813-11	FERRITE, EMI (SMD)	
		< IC >	
IC110	8-759-096-16	IC MM1175XFF	
IC201	6-705-359-01	IC TDA8588AJ/N2	
IC251	8-759-679-05	IC TC7WH34FU(TE12R)	
IC302	8-759-658-25	IC PST3432UL	
IC303	6-803-989-01	IC M30624MGP-122GP	
IC401	6-703-303-01	IC TDA7416	
IC620	6-705-542-01	IC NJM2377M(TE2)	
		< JACK >	
J601	1-793-598-11	JACK (ANTENNA)	
		< JUMPER RESISTOR >	
JR302	1-216-864-11	METAL CHIP 0 5%	1/10W
		< COIL >	
L101	1-456-617-11	COIL, CHOKE 250uH	
L301	1-414-394-41	INDUCTOR 2.2uH	
L302	1-414-394-41	INDUCTOR 2.2uH	
L303	1-414-394-41	INDUCTOR 2.2uH	
L320	1-414-394-41	INDUCTOR 2.2uH	
L401	1-414-394-41	INDUCTOR 2.2uH	
L502	1-414-394-41	INDUCTOR 2.2uH	
L503	1-414-394-41	INDUCTOR 2.2uH	
L620	1-456-729-11	COIL, POWER	
L901	1-414-394-41	INDUCTOR 2.2uH	
		< JACK >	
PJ401	1-774-700-11	JACK, PIN 6P (BUS AUDIO IN/AUX IN, AUDIO OUT REAR/FRONT)	
		< TRANSISTOR >	
Q101	8-729-055-94	TRANSISTOR SRC1202SF	
Q102	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q103	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q171	6-550-752-01	TRANSISTOR DTC614TKT146	
Q181	6-550-752-01	TRANSISTOR DTC614TKT146	
Q271	6-550-752-01	TRANSISTOR DTC614TKT146	
Q281	6-550-752-01	TRANSISTOR DTC614TKT146	
Q401	8-729-055-95	TRANSISTOR SRC1204SF	
Q402	8-729-055-91	TRANSISTOR SRA2202SF	
Q408	8-729-053-84	FET SSM3K09FU(T5LSONY1)	
Q470	6-550-752-01	TRANSISTOR DTC614TKT146	
Q501	8-729-920-85	TRANSISTOR 2SD1664-QR	
Q601	8-729-055-91	TRANSISTOR SRA2202SF	
Q602	8-729-055-95	TRANSISTOR SRC1204SF	
Q620	8-729-048-72	FET 2SK2615	
Q621	8-729-055-91	TRANSISTOR SRA2202SF	
Q622	8-729-055-95	TRANSISTOR SRC1204SF	
Q623	8-729-055-95	TRANSISTOR SRC1204SF	
Q624	6-550-828-01	FET RSQ035P03TR	
Q907	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q914	8-729-055-91	TRANSISTOR SRA2202SF	
Q915	8-729-015-11	TRANSISTOR 2SD1802FAST-TL	
Q916	8-729-055-94	TRANSISTOR SRC1202SF	
		< RESISTOR >	
R101	1-216-077-11	RES-CHIP 15K 5%	1/10W
R102	1-216-049-11	RES-CHIP 1K 5%	1/10W
R103	1-216-821-11	METAL CHIP 1K 5%	1/10W
R104	1-216-829-11	METAL CHIP 4.7K 5%	1/10W
R105	1-216-841-11	METAL CHIP 47K 5%	1/10W
R106	1-216-841-11	METAL CHIP 47K 5%	1/10W
R107	1-216-073-00	RES-CHIP 10K 5%	1/10W
R108	1-216-073-00	RES-CHIP 10K 5%	1/10W
R109	1-216-833-11	METAL CHIP 10K 5%	1/10W
R110	1-216-833-11	METAL CHIP 10K 5%	1/10W
R111	1-216-841-11	METAL CHIP 47K 5%	1/10W
R112	1-216-821-11	METAL CHIP 1K 5%	1/10W
R113	1-216-864-11	METAL CHIP 0 5%	1/10W
R114	1-216-809-11	METAL CHIP 100 5%	1/10W
R115	1-216-809-11	METAL CHIP 100 5%	1/10W
R116	1-216-809-11	METAL CHIP 100 5%	1/10W
R117	1-216-797-11	METAL CHIP 10 5%	1/10W
R119	1-216-864-11	METAL CHIP 0 5%	1/10W
R142	1-216-825-11	METAL CHIP 2.2K 5%	1/10W
R143	1-216-833-11	METAL CHIP 10K 5%	1/10W
R172	1-216-295-11	SHORT CHIP 0	
R174	1-216-809-11	METAL CHIP 100 5%	1/10W
R175	1-216-841-11	METAL CHIP 47K 5%	1/10W

Ref. No.	Part No.	Description			Remark
R182	1-216-295-11	SHORT CHIP	0		
R184	1-216-809-11	METAL CHIP	100	5%	1/10W
R185	1-216-841-11	METAL CHIP	47K	5%	1/10W
R201	1-216-841-11	METAL CHIP	47K	5%	1/10W
R202	1-216-809-11	METAL CHIP	100	5%	1/10W
R203	1-216-821-11	METAL CHIP	1K	5%	1/10W
R204	1-216-821-11	METAL CHIP	1K	5%	1/10W
R205	1-216-821-11	METAL CHIP	1K	5%	1/10W
R206	1-216-821-11	METAL CHIP	1K	5%	1/10W
R240	1-216-025-11	RES-CHIP	100	5%	1/10W
R241	1-216-025-11	RES-CHIP	100	5%	1/10W
R242	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R243	1-216-833-11	METAL CHIP	10K	5%	1/10W
R250	1-216-864-11	METAL CHIP	0	5%	1/10W
R251	1-216-864-11	METAL CHIP	0	5%	1/10W
R252	1-216-864-11	METAL CHIP	0	5%	1/10W
R253	1-216-864-11	METAL CHIP	0	5%	1/10W
R254	1-216-864-11	METAL CHIP	0	5%	1/10W
R255	1-216-864-11	METAL CHIP	0	5%	1/10W
R256	1-216-864-11	METAL CHIP	0	5%	1/10W
R257	1-216-864-11	METAL CHIP	0	5%	1/10W
R258	1-216-864-11	METAL CHIP	0	5%	1/10W
R259	1-216-864-11	METAL CHIP	0	5%	1/10W
R260	1-216-864-11	METAL CHIP	0	5%	1/10W
R261	1-216-864-11	METAL CHIP	0	5%	1/10W
R262	1-216-864-11	METAL CHIP	0	5%	1/10W
R263	1-216-864-11	METAL CHIP	0	5%	1/10W
R264	1-216-864-11	METAL CHIP	0	5%	1/10W
R265	1-216-864-11	METAL CHIP	0	5%	1/10W
R272	1-216-295-11	SHORT CHIP	0		
R274	1-216-809-11	METAL CHIP	100	5%	1/10W
R275	1-216-841-11	METAL CHIP	47K	5%	1/10W
R282	1-216-295-11	SHORT CHIP	0		
R284	1-216-809-11	METAL CHIP	100	5%	1/10W
R285	1-216-841-11	METAL CHIP	47K	5%	1/10W
R300	1-216-864-11	METAL CHIP	0	5%	1/10W
R301	1-216-864-11	METAL CHIP	0	5%	1/10W
R302	1-216-845-11	METAL CHIP	100K	5%	1/10W
R304	1-216-845-11	METAL CHIP	100K	5%	1/10W
R311	1-216-845-11	METAL CHIP	100K	5%	1/10W
R312	1-216-845-11	METAL CHIP	100K	5%	1/10W
R314	1-216-845-11	METAL CHIP	100K	5%	1/10W
R319	1-216-821-11	METAL CHIP	1K	5%	1/10W
R322	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R323	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R326	1-216-853-11	METAL CHIP	470K	5%	1/10W
R330	1-216-845-11	METAL CHIP	100K	5%	1/10W
R332	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R333	1-216-809-11	METAL CHIP	100	5%	1/10W
R335	1-216-837-11	METAL CHIP	22K	5%	1/10W
R341	1-216-845-11	METAL CHIP	100K	5%	1/10W
R342	1-216-845-11	METAL CHIP	100K	5%	1/10W
R343	1-216-845-11	METAL CHIP	100K	5%	1/10W
R344	1-216-833-11	METAL CHIP	10K	5%	1/10W
R345	1-216-833-11	METAL CHIP	10K	5%	1/10W
R346	1-216-833-11	METAL CHIP	10K	5%	1/10W
R350	1-216-809-11	METAL CHIP	100	5%	1/10W
R351	1-216-809-11	METAL CHIP	100	5%	1/10W

Ref. No.	Part No.	Description			Remark
R356	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R357	1-218-871-11	METAL CHIP	10K	0.5%	1/10W
R360	1-216-845-11	METAL CHIP	100K	5%	1/10W
R363	1-216-845-11	METAL CHIP	100K	5%	1/10W
R364	1-216-845-11	METAL CHIP	100K	5%	1/10W
R365	1-216-845-11	METAL CHIP	100K	5%	1/10W
R366	1-216-845-11	METAL CHIP	100K	5%	1/10W
R367	1-216-845-11	METAL CHIP	100K	5%	1/10W
R368	1-216-845-11	METAL CHIP	100K	5%	1/10W
R370	1-216-845-11	METAL CHIP	100K	5%	1/10W
R377	1-216-845-11	METAL CHIP	100K	5%	1/10W
R381	1-216-845-11	METAL CHIP	100K	5%	1/10W
R391	1-216-845-11	METAL CHIP	100K	5%	1/10W
R393	1-216-845-11	METAL CHIP	100K	5%	1/10W
R401	1-216-017-11	RES-CHIP	47	5%	1/10W
R402	1-216-864-11	METAL CHIP	0	5%	1/10W
R403	1-216-295-11	SHORT CHIP	0		
R407	1-216-841-11	METAL CHIP	47K	5%	1/10W
R408	1-216-809-11	METAL CHIP	100	5%	1/10W
R410	1-216-295-11	SHORT CHIP	0		
R414	1-216-833-11	METAL CHIP	10K	5%	1/10W
R415	1-216-833-11	METAL CHIP	10K	5%	1/10W
R416	1-216-809-11	METAL CHIP	100	5%	1/10W
R417	1-216-809-11	METAL CHIP	100	5%	1/10W
R418	1-216-809-11	METAL CHIP	100	5%	1/10W
R419	1-216-809-11	METAL CHIP	100	5%	1/10W
R420	1-216-833-11	METAL CHIP	10K	5%	1/10W
R421	1-216-833-11	METAL CHIP	10K	5%	1/10W
R422	1-216-813-11	METAL CHIP	220	5%	1/10W
R424	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R426	1-216-864-11	METAL CHIP	0	5%	1/10W
R429	1-216-295-11	SHORT CHIP	0		
R431	1-216-295-11	SHORT CHIP	0		
R433	1-216-295-11	SHORT CHIP	0		
R435	1-216-295-11	SHORT CHIP	0		
R443	1-216-864-11	METAL CHIP	0	5%	1/10W
R444	1-216-864-11	METAL CHIP	0	5%	1/10W
R445	1-216-864-11	METAL CHIP	0	5%	1/10W
R446	1-216-864-11	METAL CHIP	0	5%	1/10W
R478	1-216-864-11	METAL CHIP	0	5%	1/10W
R501	1-216-821-11	METAL CHIP	1K	5%	1/10W
R502	1-216-864-11	METAL CHIP	0	5%	1/10W
R504	1-216-864-11	METAL CHIP	0	5%	1/10W
R600	1-216-295-11	SHORT CHIP	0		
R601	1-216-029-00	METAL CHIP	150	5%	1/10W
R602	1-216-029-00	METAL CHIP	150	5%	1/10W
R603	1-216-029-00	METAL CHIP	150	5%	1/10W
R620	1-216-230-00	RES-CHIP	22K	5%	1/8W
R621	1-216-230-00	RES-CHIP	22K	5%	1/8W
R622	1-218-863-11	METAL CHIP	4.7K	0.5%	1/10W
R623	1-218-895-11	METAL CHIP	100K	0.5%	1/10W
R624	1-218-847-11	METAL CHIP	1K	0.5%	1/10W
R625	1-216-809-11	METAL CHIP	100	5%	1/10W
R626	1-216-848-11	METAL CHIP	180K	5%	1/10W
R627	1-216-846-11	METAL CHIP	120K	5%	1/10W
R628	1-216-841-11	METAL CHIP	47K	5%	1/10W
R629	1-216-833-11	METAL CHIP	10K	5%	1/10W
R630	1-216-837-11	METAL CHIP	22K	5%	1/10W

MAIN **SENSOR** **SERVO**

Ref. No.	Part No.	Description			Remark
R631	1-216-833-11	METAL CHIP	10K	5%	1/10W
R632	1-216-841-11	METAL CHIP	47K	5%	1/10W
R633	1-216-809-11	METAL CHIP	100	5%	1/10W
R634	1-216-833-11	METAL CHIP	10K	5%	1/10W
R635	1-216-864-11	METAL CHIP	0	5%	1/10W
R636	1-216-839-11	METAL CHIP	33K	5%	1/10W
R642	1-216-296-11	SHORT CHIP	0		
R643	1-216-296-11	SHORT CHIP	0		
R904	1-216-864-11	METAL CHIP	0	5%	1/10W
R910	1-216-845-11	METAL CHIP	100K	5%	1/10W
R920	1-216-073-00	RES-CHIP	10K	5%	1/10W
R921	1-216-073-00	RES-CHIP	10K	5%	1/10W
R922	1-216-845-11	METAL CHIP	100K	5%	1/10W
R929	1-216-837-11	METAL CHIP	22K	5%	1/10W
R949	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
R950	1-216-057-00	METAL CHIP	2.2K	5%	1/10W
		< SWITCH >			
S300	1-786-458-11	SWITCH, PUSH (1 KEY) (NOSE DET)			
S301	1-762-638-21	SWITCH, TACTILE (RESET)			
		< TRANSFORMER >			
T620	1-443-212-11	TRANSFORMER, DC-DC CONVERTER			
		< THERMISTOR (POSITIVE) >			
TH100	1-801-792-21	THERMISTOR, POSITIVE			
		< TUNER >			
TUX501	A-3220-959-A	TUNER UNIT (TUX-032)			
		< VIBRATOR >			
X301	1-813-202-11	VIBRATOR, CRYSTAL (32.768kHz)			
X302	1-813-254-11	VIBRATOR, CRYSTAL (6MHz)			
**********					
		SENSOR BOARD			
		**********			
		< SWITCH >			
SW2	1-529-566-61	SWITCH, PUSH (1 KEY) (SELF)			
SW3	1-529-566-61	SWITCH, PUSH (1 KEY) (DISC IN)			
**********					
	A-3283-350-A	SERVO BOARD, COMPLETE			
		**********			
		< CAPACITOR >			
C1	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C2	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C3	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C5	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C6	1-100-381-11	ELECT CHIP	10uF	20%	16V
C7	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C8	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C11	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C13	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C17	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V

Ref. No.	Part No.	Description			Remark
C18	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C19	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C20	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C21	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C23	1-162-923-11	CERAMIC CHIP	47PF	5%	50V
C25	1-162-908-11	CERAMIC CHIP	3PF	0.25PF	50V
C26	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C27	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C28	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C29	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C30	1-162-921-11	CERAMIC CHIP	33PF	5%	50V
C31	1-162-925-11	CERAMIC CHIP	68PF	5%	50V
C32	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C34	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C35	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C36	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V
C37	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C38	1-104-609-11	ELECT CHIP	100uF	20%	4V
C39	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C70	1-162-965-11	CERAMIC CHIP	0.0015uF	10%	50V
C71	1-162-965-11	CERAMIC CHIP	0.0015uF	10%	50V
C72	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C73	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C74	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C75	1-107-826-11	CERAMIC CHIP	0.1uF	10%	16V
C76	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C77	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C78	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C79	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
		< CONNECTOR >			
CN1	1-817-275-21	CONNECTOR, BOARD TO BOARD 28P			
CN2	1-794-153-21	CONNECTOR, FPC (ZIF) 16P			
		< FERRITE BEAD >			
FB1	1-414-760-21	INDUCTOR, FERRITE BEAD			
		< IC >			
IC1	6-703-699-01	IC uPD63712GC-8EU-A			
IC2	6-705-002-01	IC BA5966FP-FE2			
		< FERRITE BEAD >			
JR40	1-414-760-21	INDUCTOR, FERRITE BEAD			
JR41	1-414-760-21	INDUCTOR, FERRITE BEAD			
JR90	1-414-760-21	INDUCTOR, FERRITE BEAD			
JR91	1-414-760-21	INDUCTOR, FERRITE BEAD			
		< TRANSISTOR >			
Q1	8-729-904-87	TRANSISTOR 2SB1197K-R			
		< RESISTOR >			
R1	1-216-841-11	METAL CHIP	47K	5%	1/10W
R6	1-216-833-11	METAL CHIP	10K	5%	1/10W
R7	1-216-840-11	METAL CHIP	39K	5%	1/10W
R9	1-216-822-11	METAL CHIP	1.2K	5%	1/10W
R11	1-216-833-11	METAL CHIP	10K	5%	1/10W
R12	1-216-809-11	METAL CHIP	100	5%	1/10W

Ref. No.	Part No.	Description			Remark
R13	1-216-833-11	METAL CHIP	10K	5%	1/10W
R14	1-216-797-11	METAL CHIP	10	5%	1/10W
R15	1-216-797-11	METAL CHIP	10	5%	1/10W
R41	1-216-821-11	METAL CHIP	1K	5%	1/10W
R42	1-216-821-11	METAL CHIP	1K	5%	1/10W
R44	1-414-760-21	INDUCTOR, FERRITE BEAD			
R45	1-414-760-21	INDUCTOR, FERRITE BEAD			
R70	1-216-842-11	METAL CHIP	56K	5%	1/10W
R71	1-216-833-11	METAL CHIP	10K	5%	1/10W
R72	1-216-842-11	METAL CHIP	56K	5%	1/10W
R73	1-216-833-11	METAL CHIP	10K	5%	1/10W
R74	1-216-837-11	METAL CHIP	22K	5%	1/10W
R75	1-216-833-11	METAL CHIP	10K	5%	1/10W
R76	1-216-837-11	METAL CHIP	22K	5%	1/10W
R77	1-216-833-11	METAL CHIP	10K	5%	1/10W
R78	1-216-833-11	METAL CHIP	10K	5%	1/10W
R79	1-216-833-11	METAL CHIP	10K	5%	1/10W
R80	1-216-833-11	METAL CHIP	10K	5%	1/10W
R81	1-216-833-11	METAL CHIP	10K	5%	1/10W
R82	1-216-837-11	METAL CHIP	22K	5%	1/10W
R83	1-216-833-11	METAL CHIP	10K	5%	1/10W
R84	1-216-837-11	METAL CHIP	22K	5%	1/10W
R85	1-216-833-11	METAL CHIP	10K	5%	1/10W
		< SWITCH >			
SW1	1-529-565-61	SWITCH, PUSH (1 KEY) (DOWN)			
		< VIBRATOR >			
X1	1-795-562-21	VIBRATOR, CERAMIC (16.9344MHz)			

****

		SUB BOARD			
		**********			
	1-828-511-11	CABLE, FLAT (FFC) 22P			
		< CONNECTOR >			
CNP501	1-818-142-11	SOCKET, CONNECTOR 20P			
		< DIODE >			
D990	8-719-978-33	DIODE DTZ-TT11-6.8B (F7005X)			
D991	8-719-978-33	DIODE DTZ-TT11-6.8B (F7005X)			
LED931	6-500-895-01	LED CL-270UB2-X-TS (WINDOW) (F7005X)			
LED931	8-719-082-38	LED CL-270SR-C-TS (WINDOW)			(F7000/FW700)
LED932	6-500-204-01	LED CL-190UB2-X-T (⏏) (F7005X)			
LED932	6-500-450-01	LED CL-195SR-CD-T (⏏) (F7000/FW700)			
		< RESISTOR >			
R990	1-216-809-11	METAL CHIP	100	5%	1/10W (F7005X)
R990	1-216-817-11	METAL CHIP	470	5%	1/10W (F7000/FW700)
R991	1-216-817-11	METAL CHIP	470	5%	1/10W (F7000/FW700)
		< SWITCH >			
S901	1-771-884-31	SWITCH, TACTILE (⏏)			

****

Ref. No.	Part No.	Description	Remark
		MISCELLANEOUS	
		**********	
10	1-776-207-72	CORD (WITH CONNECTOR) (POWER)	
12	1-790-375-12	CORD (WITH CONNECTOR) (SUB OUT (MONO))	
⚠153	8-820-207-02	OPTICAL PICK-UP (KSS1000E/K1RP)	
154	A-3337-640-A	CHASSIS (OP) SUB ASSY (including M901)	
F901	1-532-877-11	FUSE (BLADE TYPE) (AUTO FUSE) 10A	
M902	A-3337-638-A	MOTOR ASSY, SL (SLED)	
M903	A-3372-454-A	MOTOR ASSY, LE (LOADING)	
SW4	1-571-099-11	SWITCH (1 KEY) (LIMIT)	

****

		ACCESSORIES	
		**********	
	1-477-110-41	REMOTE COMMANDER (RM-X118A)	
	3-230-047-01	LID, BATTERY CASE (for RM-X118A)	
	3-263-380-11	MANUAL, INSTRUCTION (ENGLISH,FRENCH)	(F7000/F7005X)
	3-263-380-21	MANUAL, INSTRUCTION (ENGLISH,SPANISH)	(FW700)
	3-263-410-11	MANUAL, INSTRUCTION, INSTALL (ENGLISH, FRENCH)	(F7000/F7005X)
	3-263-410-21	MANUAL, INSTRUCTION, INSTALL (ENGLISH, SPANISH)	(FW700)
	7-685-234-19	SCREW +KTP 2.6X8 TYPE2 NON-SLIT	(F7000/FW700)
	X-3378-390-3	CASE ASSY (for FRONT PANEL)	

****

		PARTS FOR INSTALLATION AND CONNECTIONS	
		**********	
301	X-3382-647-1	FRAME ASSY, FITTING	
302	3-934-325-01	SCREW (+K 5X8 TP)	
303	3-264-055-01	COLLAR	
304	1-776-207-72	CORD (WITH CONNECTOR) (POWER)	
305	3-246-471-01	KEY (FRAME)	

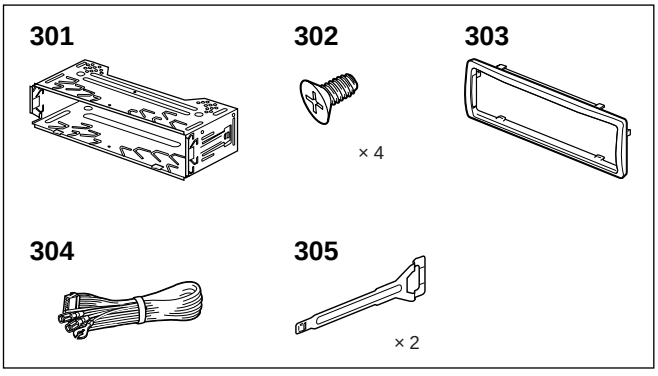

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une piéce portant le numéro spécifié.

REVISION HISTORY

Clicking the version allows you to jump to the revised page.
Also, clicking the version at the upper on the revised page allows you to jump to the next revised page.

Ver.	Date	Description of Revision
1.0	2003. 12	New